

1 YEAR LIMITED WARRANTY

Course Housewares, LLC warrants this Cook's Companion® Kabob Maker & Skewer Set to be free from manufacturer defect for up to 1 year from the original date of purchase. If a defect is found to exist, Course Housewares will, at its option, either repair or replace the product or the defective component, including labor. Replacement will be made with a new or rebuilt product or components. This warranty does NOT cover (a) ordinary wear and tear (such as scratches, chips or stains), (b) impact damage or breakage, (c) heat discoloration, minor imperfections and slight color variations in the plastic, which is a normal part of the craftsmanship, (d) extreme temperature or resulting damage to the Kabob Maker or Skewer, (e) improper cleaning methods causing scratches, or (f) accessories, even if sold with the Kabob Maker and Skewer Set, (g) any unit that has been tampered with, (h) damages incurred through improper use and care and (i) faulty packaging by you or mishandling by any common carrier. Failure to follow the accompanying Care and Use instructions or commercial use will void this warranty.

Course Housewares' sole obligation and your exclusive remedy under this warranty is limited to repair or replacement, at its option, of the defective Kabob Maker. You will be responsible for any shipping and handling fees. Products returned to us that are not found to be defective in material or workmanship will be returned to you. If your particular product is found defective but is no longer available and cannot be repaired, a comparable product, at our discretion, will be sent as a replacement. This warranty extends only to the product's original purchaser, US residents only and does not cover damage caused by improper use or accidental damage. This warranty covers the Kabob Makers only.

COURSE HOUSEWARES, LLC MAKES NO OTHER WARRANTIES, EITHER EXPRESSED OR IMPLIED, REGARDING THE PRODUCT OR RELATING TO ITS QUALITY. PERFORMANCE, MERCHANTABILITY, OR FITNESS FOR A PARTICULAR PURPOSE, COURSE HOUSEWARES, LLC SHALL NOT BE LIABLE FOR INDIRECT, CONSEQUENTIAL OR SPECIAL DAMAGES WHETHER A CLAIM IS BASED ON CONTRACT, TORT, WARRANTY OR OTHERWISE, IN NO EVENT WILL LIABILITY EXCEED THE ORIGINAL PURCHASE PRICE OF THE PRODUCT. THE DURATION OF ANY IMPLIED WARRANTY WHATSOEVER, INCLUDING BUT NOT LIMITED TO THE WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED TO THE DURATION OF THE EXPRESS WARRANTY PROVIDED HEREIN. COURSE HOUSEWARES SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES WHATSOEVER.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. This warranty gives you specific legal rights, and you may have other legal rights, which vary from State to State.

To Process a claim:

Do not return the product to the retailer from which it was purchased. Your retailer has no liability for this warranty. Please contact the Course Housewares customer service department for assistance and to ensure the fastest possible resolution to the problem. Please have your purchase information available to speed this process.


OR

Send your name, physical address, phone number, original purchase receipt and the safely packaged item prepaid to:

Course Housewares, LLC
1715 Lake Drive West
Chanhassen, MN 55317
(866) 325-1659

Return shipping and handling charges may apply.

MADE IN CHINA

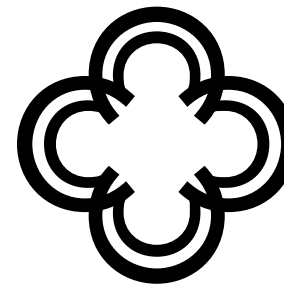

COOK'S COMPANION®

Kabob Maker & Skewer Set





PLEASE READ BEFORE USE AND SAVE THESE INSTRUCTIONS

Thank you for purchasing Cook's Companion® Kabob Maker & Skewer Set. The Kabob Maker will perform best when used as intended. To ensure the best performance of your Kabob Maker please consistently follow these instructions.

Your Cook's Companion® Kabob Maker & Skewer Set Includes:

- 1 Green Kabob Maker
- 1 Red Kabob Maker
- 8 Skewers



CARE & USE:

- While Cook's Companion® Kabob Maker and Skewers are dishwasher safe, hand washing is recommended and will prolong the products beauty.
- Do not use abrasive or harsh cleaners.
- The Kabob Makers are only meant to help you prepare the Kabob and place foods onto or take off of the Skewers. Never Place the Kabob Maker in any oven or on any stove or grill top.
- Do not scratch the surface or cut directly on your Kabob Maker.
- Always use extreme caution when handling hot Skewers and keep out of reach of children at all times.
- Always use oven mitts or potholders when handling.
- Do not use the Kabob Maker or the Skewers in a microwave. This can cause serious damages or injuries.
- The Skewers are extremely sharp and should always be handled with caution. Keep out of reach of children and pets at all times.

WARNINGS:


- Never place your Kabob Makers in any cooking appliance.
- Never place the Skewers in the microwave; this can cause serious damages & injuries.
- Never place the Skewers directly on a stovetop; they should always be used with a separate pan when being used indoors.
- Always follow all Care & Use Instructions.
- Keep away from children at all times. Skewers are very sharp and will reach high temperatures.
- Always use safety precautions when using the Skewers and be cautious when preparing the Kabobs.

HOW TO USE YOUR KABOB MAKER

- To use the Cook's Companion® Kabob Maker, first cut the meats and veggies you would like to do into 1"X1" cubes or slices. Ensuring the foods are prepared in 1" by 1" cubes will ensure you can properly close the Kabob Maker, and will also help foods cook evenly.
- We recommend using the Red Kabob Maker for raw meats, and using the Green Kabob Maker for cooked meats. This way you will prevent any cross contamination, which can lead to food borne illnesses. If you do place raw meat into both of the Kabob Makers, make sure to wash both Kabob Makers thoroughly before using to remove the cooked foods.
- After the food is cut into cubes, place the food into the Kabob tray. You will be able to fit about 3 pieces into each section of the tray.



- Once the veggies and meat are in the Kabob Maker, close the Kabob Maker fully.

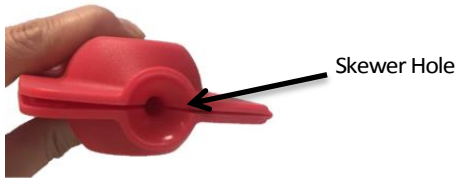

- After the Kabob Maker is fully closed, hold a Skewer at the handle and place the sharp end of the Skewer into the skewer hole on the Kabob Maker. Push the skewer all the way through the Kabob Maker.
- NOTE: Always push the skewer through the Kabob Maker with the sharp end of the skewer facing away from you.



- Once all of the food is on the Kabob Maker, the Skewer is ready to be put on the indoor or outdoor grill (not included).

HOW TO USE YOUR KABOB MAKER CONTINUED

- Once the food is cooked, you can use the Kabob Maker to help you remove the food from the skewer.
- Again, we recommend using the Red Kabob Maker for raw meats, and using the Green Kabob Maker for cooked meats. This way you will prevent any cross contamination, which can lead to food borne illnesses. If you do place raw meat into both of the Kabob Makers, make sure to wash both Kabob Makers thoroughly before using to remove the cooked foods.
- Place the skewer into the Kabob Maker and close completely.



- Being careful, slowly pull the skewer out from the Kabob Maker. The cooked food will remain in the Kabob Maker. Remove food from the Kabob Maker and repeat as needed.

