

1 YEAR LIMITED WARRANTY

Course Housewares, LLC warrants this Cook's Companion® Microwavable Cookware product to be free from manufacturer defect for up to 1 year from the original date of purchase. If a defect is found to exist, Course Housewares will, at its option, either repair or replace the product or the defective component, including labor. Replacement will be made with a new or rebuilt product or components. This warranty does NOT cover (a) ordinary wear and tear (such as scratches, chips or stains), (b) impact damage or breakage, (c) heat discoloration, minor imperfections and slight color variations in the metals or silicone, which are a normal part of the craftsmanship, (d) extreme temperature or resulting damage to the Microwavable Cookware, (e) improper cleaning methods causing scratches, stains, or mold, or (f) accessories, even if sold with the Microwavable Cookware, (g) any unit that has been tampered with, (h) damages incurred through improper use and care and (i) faulty packaging by you or mishandling by any common carrier. Failure to follow the accompanying Care and Use instructions or commercial use will void this warranty.

Course Housewares' sole obligation and your exclusive remedy under this warranty is limited to repair or replacement, at its option, of the defective Microwavable Cookware. You will be responsible for any shipping and handling fees. Products returned to us that are not found to be defective in material or workmanship will be returned to you. If your particular product is found defective but is no longer available and cannot be repaired, a comparable product, at our discretion, will be sent as a replacement. This warranty extends only to the product's original purchaser, US residents only and does not cover damage caused by improper use or accidental damage. This warranty covers the Microwavable Cookware only.

COURSE HOUSEWARES, LLC MAKES NO OTHER WARRANTIES, EITHER EXPRESSED OR IMPLIED, REGARDING THE PRODUCT OR RELATING TO ITS QUALITY. PERFORMANCE, MERCHANTABILITY, OR FITNESS FOR A PARTICULAR PURPOSE, COURSE HOUSEWARES, LLC SHALL NOT BE LIABLE FOR INDIRECT, CONSEQUENTIAL OR SPECIAL DAMAGES WHETHER A CLAIM IS BASED ON CONTRACT, TORT, WARRANTY OR OTHERWISE, IN NO EVENT WILL LIABILITY EXCEED THE ORIGINAL PURCHASE PRICE OF THE PRODUCT. THE DURATION OF ANY IMPLIED WARRANTY WHATSOEVER, INCLUDING BUT NOT LIMITED TO THE WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED TO THE DURATION OF THE EXPRESS WARRANTY PROVIDED HEREIN. COURSE HOUSEWARES SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES WHATSOEVER.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. This warranty gives you specific legal rights, and you may have other legal rights, which vary from State to State.

To Process a claim:

Do not return the product to the retailer from which it was purchased. Your retailer has no liability for this warranty. Please contact the Course Housewares customer service department for assistance and to ensure the fastest possible resolution to the problem. Please have your purchase information available to speed this process.

OR

Send your name, physical address, phone number, original purchase receipt and the safely packaged item prepaid to:

Course Housewares, LLC

1715 Lake Drive West

 
Chanhassen, MN 55317

(866) 325-1659

Return shipping and handling charges may apply.

MADE IN CHINA

MODEL: MSG101/ B410764

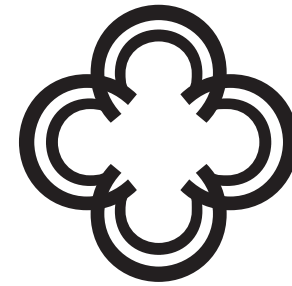

COOK'S COMPANION®

Microwavable Rectangle Grill






PLEASE READ BEFORE USE AND SAVE THESE INSTRUCTIONS

Thank you for purchasing Cook's Companion® Microwavable Rectangle Grill. The Microwavable Rectangle Grill will perform best when used as intended. To ensure the best performance of your Microwavable Rectangle Grill, please consistently follow these instructions.

Your Cook's Companion® Microwavable Rectangle Grill

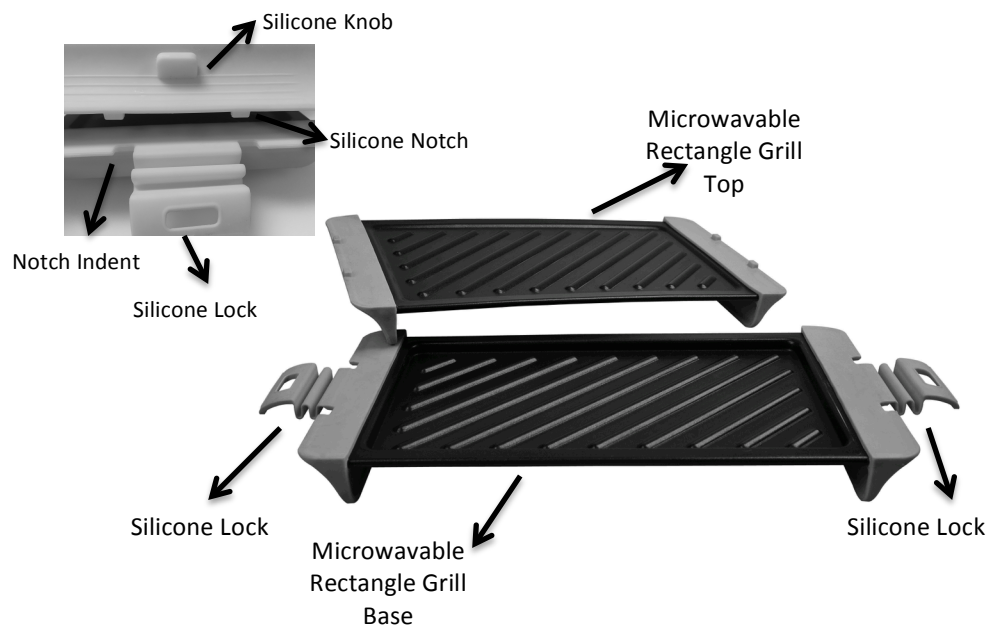

WARNINGS:

- CAUTION- Hot Surface: The Microwavable Grill will become extremely hot when using. Always use oven mitts or a dry towel when handling.
- If the Microwavable Rectangle Grill begins sparking, arcing, or any other malfunction occurs while using, immediately unplug the microwave and discontinue use of the cookware.
- Never leave children unsupervised with the Microwavable Grill.
- The Microwavable Grill should not be used with any other cooking accessory or appliance and is intended only for microwave use.
- Wait until the Microwavable Grill is completely cooled before cleaning or storing.

GETTING STARTED:

- Before using, remove any labels/packaging and wash and dry all components according to the Care & Use instructions.

CARE & USE

- While Cook's Companion® Microwavable Grill is dishwasher safe, hand washing with a soft sponge or dishcloth is recommended and will prolong the cookware's beauty. Do not use abrasive or harsh cleaners, as these may damage the finish.
- Make sure all components are completely dry before using in the microwave or storing.
- Never cut directly on the cookware or scratch the surface.
- Never use metal utensils as this can damage the microwavable grill. It is recommended to use tools made of nylon, plastic, wood, silicone, or melamine when needed.
- Your Microwavable Grill should not be used in any other kitchen appliance except for the Microwave. Never place the microwavable grill on the stove or in the oven.
- Always follow the safety guidelines and instructions in your microwave's instruction manual.
- Your Microwavable Grill can only be used in the microwave at 900 Watts or less. Adjust the settings on your microwave oven as needed.
- For best results when using the Microwavable Grill, turn your food over at least one time during the necessary cooking time. Always use caution, as your grill will be extremely hot.
- Your microwavable grill should be preheated when cooking meats. The maximum preheating time without food on the cookware is 2 minutes. Preheating your microwavable cookware longer than 2 minutes can cause damage to the heating element and will void your warranty.
- When using the Microwavable Grill, be sure to always use oven mitts or a dry dishtowel when handling, as the cookware will become very hot.
- Your microwavable grill can be used to cook and reheat food. The Cookware Guidelines chart in the Cooking Tips section is meant as a guideline for how long to cook raw or uncooked food. You will need to adjust the times according to wattage, food type, level of doneness, and weight of the food. It is always recommended to abide by the food safety temperatures to avoid any food borne illnesses.

HOW TO USE YOUR MICROWAVABLE RECTANGLE GRILL

- Your Cook's Companion® Microwavable Rectangle Grill comes with a grill base and top. You will notice on one side of each piece it states "FOR MICROWAVE ONLY, WARNING HOT SURFACE," this part should be facing away from your food. The only portions touching your food should be the grill side. Another way to make sure you are using the correct side is if the silicone handles are flat (see picture on previous page).
- To begin using your Cook's Companion® Microwavable Rectangle Grill, prep all of your food and ensure your microwave is set to 900W or less.
- If you are cooking with Chicken, Steak, or any other protein, it is recommended that you preheat your cookware. Do not preheat for longer than 2 minutes.
- Due to the different varieties and performance of microwaves, any of the dishes that you cook, especially when using different variations of proteins, will need to experience some trial and error to determine the correct wattage and cooking time.
- For best results, turn your food over at least once during the cooking time.
- Once your food is placed onto the Microwavable Rectangle Grill Base you will place the Grill Top on top of your food and lock the silicone handles together. See "How to Lock the Microwavable Sandwich Grill" section for further instructions.
- The Microwavable Rectangle Grill should not be left unattended when cooking and should be out of reach of children and pets.

COOKING TIPS

- Pieces of food cut up into small pieces will cook faster, so some trial and error may be needed.
- Vegetables typically take longer to cook, depending on type. It is recommended to cook the vegetables first, depending on the type of vegetable and what other foods will be cooked.
- For best results, turn your food over at least once during the cooking time.

Microwavable Cookware Guidelines			
Food Type	Weight/ Pieces	Minutes	Wattage
French Toast	2 Pieces	3-5	900W
Fish	6oz.	3-5	900W
Chicken	12oz.	10-12	900W
Steak	8oz.	3-5	900W
Raw Vegetables	3 cups (diced/ quartered)	10-15	900W
Panini Sandwiches	1 Sandwich	5-6	900W
Potatoes	1 Russet Potato, diced	4-7	900W

HOW TO CLEAN YOUR MICROWAVABLE RECTANGLE GRILL

- All pieces of the Microwavable Rectangle Grill are dishwasher safe and it is okay to place the entire piece into the dishwasher without removing any parts.
- If Deep cleaning the Microwavable Rectangle Grill is necessary, the silicone handles are removable. To do so, simply slide the silicone handles off of the heating plates and clean with warm soapy water. Do not use harsh or abrasive cleaners.
- Before reassembling ensure all parts are completely dry. If the items are not completely dry before reassembling mold can occur and will not be covered by warranty.
- To reassemble the pieces, simply line up the plate (silicone side up) and the handle and




HOW TO LOCK THE MICROWAVABLE RECTANGLE GRILL

(Refer to Your Microwavable Rectangle Grill for parts reference)


- To lock your Cook's Companion® Microwavable Rectangle Grill, first, set the Grill Base in front of you. Making sure the flat sides of the silicone handles are facing up and the silicone locks are open.



- Then, after you have placed your food onto the Grill Base, place the Grill Top on top of your food. The flat side of the silicone handle will be facing the grill base and the silicone knobs will be closest to you when looking down. When looking at your cookware from the side, it will look like the below photo.

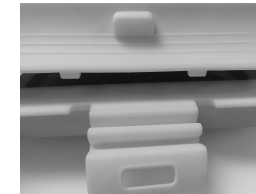

- Once the Grill Top is placed correctly on top of your food you will turn the silicone lock upwards and latch it onto the silicone knob.

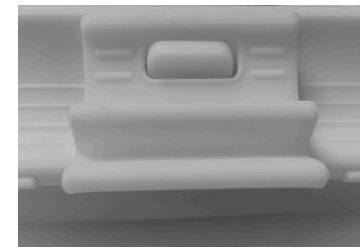

- When there is food in between the two microwavable plates, the silicone locks will stretch upwards. You will have to press downwards on the Silicone Grill Top when locking. It is not recommended to place food in between the base and top that exceed 2.25" in height.

