




MEAT GRINDER



INSTRUCTIONS

PARTS IDENTIFICATION

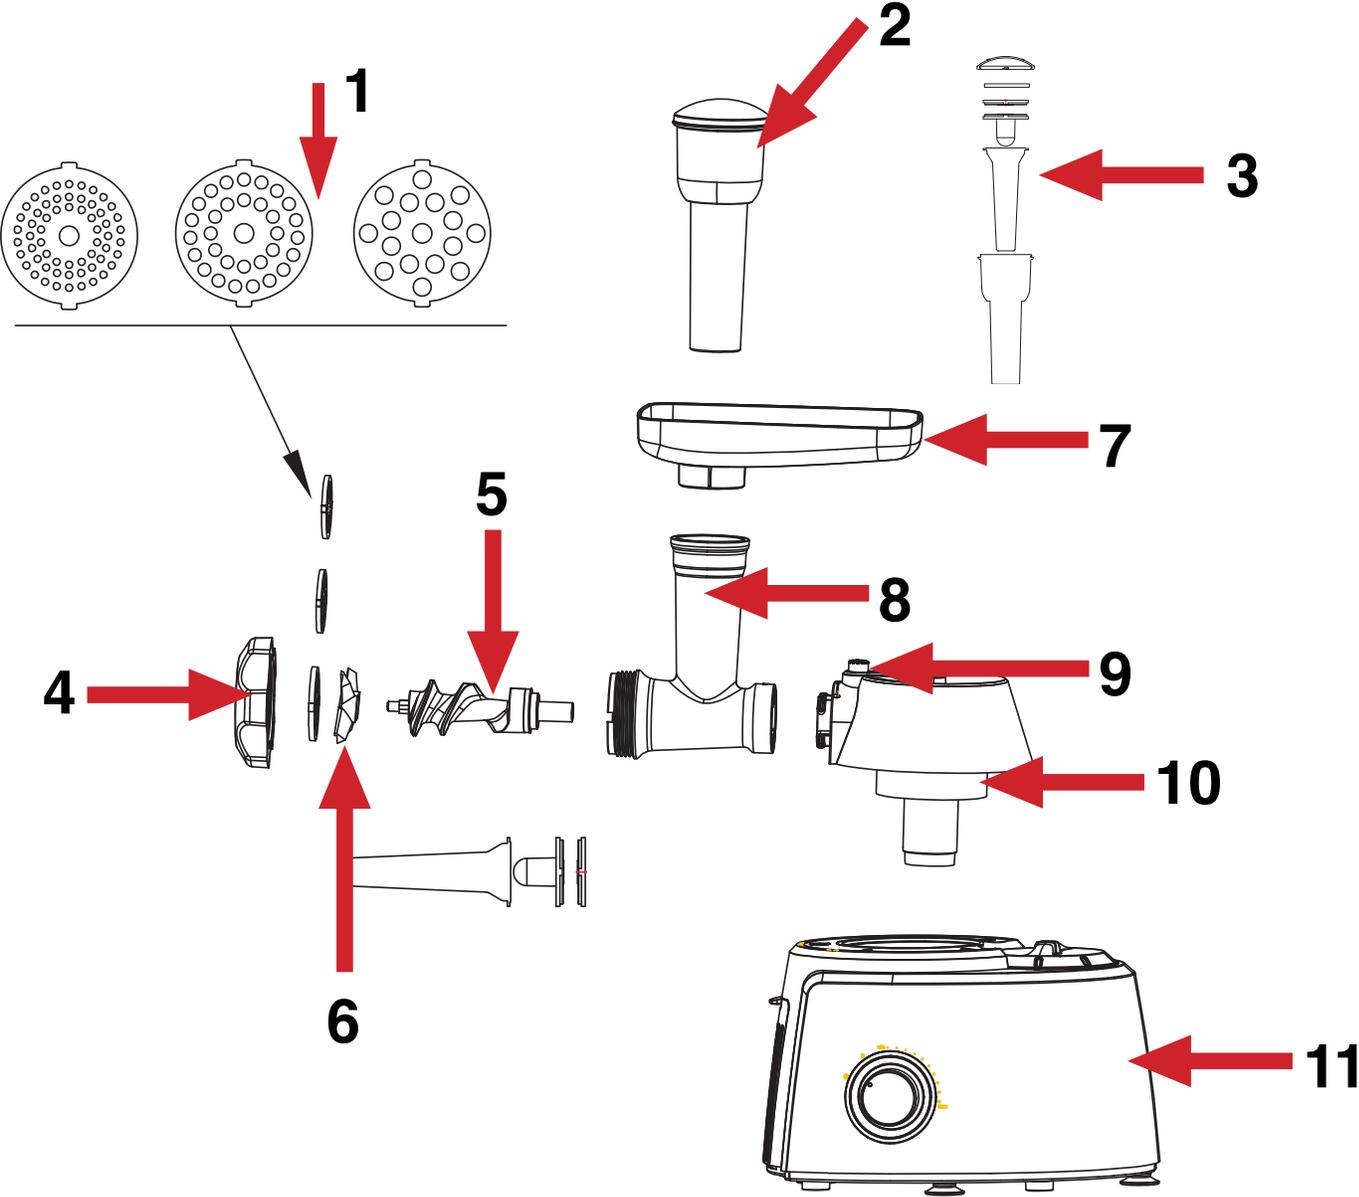

- 1. Discs
- 2. Pusher
- 3. Kebbe parts, Sausage Tube and storage for discs
- 4. Locking Washer
- 5. Mixer Rod
- 6. Blades

- 7. Meat Grinder Holder
- 8. Feeder Tube
- 9. Unlock Button
- 10. Meat Grinder Base
- 11. Mixer Base

DISC DESCRIPTIONS



Coarse Mincing Disc



Fine Mincing Disc



Medium Mincing Disc



Kebbe Discs



Sausage Tube




Sausage Disc



HOW TO ASSEMBLE


***Please note that the mixing rod comes preassembled when taking the meat grinder out of packaging.**

1. Attach the meat grinder base to the feeder tube by placing the arrow into the unlock position. Then rotate the feeder tube until it is in the lock position. See image below.

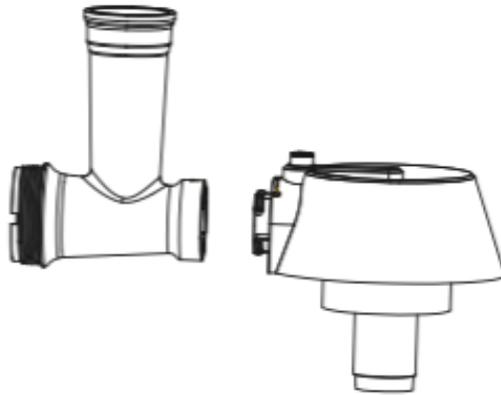

2. Attach the meat grinder holder on top of the feeder tube.

3. Place the mixer rod with the open end first inside the feeder tube then place the blade onto the end of the mixer rod. CAUTION: The blade is extremely sharp, handle with care. See image below.

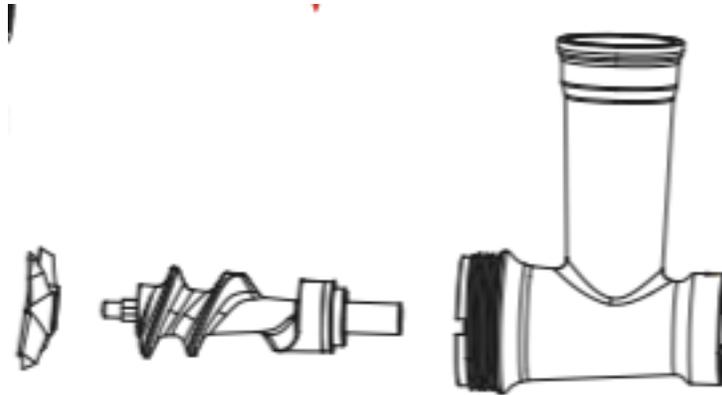

4. Select desired disc then place on the mixer rod. The discs can be found inside the pusher. See image below.



5. Screw the locking washer onto the feeder tube clockwise.
6. Finally place the assembled grinder onto the mixer base in the unlock position, move the grinder to the lock position. The grinder is now ready for use.

HOW TO USE

1. **The cover must be on the blender opening for the unit to work.** Place the cover on the opening the arrow facing the unlock position and turn to the lock position, a click will be heard.
2. Make sure the power knob is at “0” before plugging in the unit for proper use. Then plug the unit into a power socket.
3. Place meat onto the meat grinder holder.
4. Select desired speed by turning the power knob to the right, the speeds are marked Min. to Max. Min. being the least powerful and Max. being the most powerful. To pulse the ingredients turn the power knob to the left to the “P” position.
5. To pause or stop when mixing turn the power knob to “0”.
6. Use the pusher to help work the meat into the feeder tube.

CLEANING

1. To disassemble the grinder for washing take the grinder off the mixer base first. Turn the grinder to the unlock position and lift off the base.
2. Remove the meat grinder holder from the feeder tube by pulling up.
3. Remove the feeder tube by pressing down on the unlock button on the meat grinder base and turning to the unlock position.
4. Next, unscrew the locking washer from the feeder tube. Then carefully remove the disc, blade, and mixer.

CAUTION: The blade is extremely sharp, handle with care.

5. Once the parts are disassembled wash each by hand with non abrasive liquid and sponge. Let each item dry before storing. The discs can be stored in the side compartment of the mixer base.

LIMITED ONE YEAR WARRANTY

This warranty covers all defects in workmanship or materials in the mechanical and electrical parts, arising under normal use and care in this product for a period of 12 months from the date of purchase provided you are able to present a valid proof-of-purchase. A valid proof-of-purchase is a receipt specifying item, date purchased, and cost of item. A gift receipt showing item and date of purchase is an acceptable proof-of-purchase. Product is intended for household use only. Any commercial use voids the warranty.

This warranty covers the original retail purchaser or gift recipient. During the applicable warranty period within normal household use, we will repair or replace, at our discretion, any mechanical or electrical part which proves defective, or replace unit with a comparable model. Shipping and handling costs are not included for warranty replacements and are the responsibility of the customer.

To obtain service under the terms of this warranty, call our customer care department at 312-526-3760 (Monday- Friday 10am-6pm CST), or send an email to customercare@alliedrich.net. Please provide the model number listed on the bottom of this page when contacting us.

THIS LIMITED WARRANTY COVERS UNITS PURCHASED AND USED WITHIN THE UNITED STATES AND DOES NOT COVER:

- Damages from improper installation.
- Damages in transit.
- Defects other than manufacturing defects.
- Damages from misuse, abuse, accident, alteration, lack of proper care and maintenance, or incorrect current or voltage.
- Damage from service by other than authorized dealer or service center.
- Shipping and handling costs.
- This warranty gives you special legal rights and you may also have other rights to which you are entitled which may vary from state to state.

Manufacturer does not assume responsibility for loss or damage for return shipment. We recommend that you keep your original packaging should you require repair service. Before returning product please contact our customer care department for return authorization. When returning product for repair please include your full name, return address, and daytime phone number. Also include a brief description of the problem you are experiencing and a copy of your sales receipt or other proof of purchase in order to validate warranty status.

MODEL PDMGM

