

## 90 DAY LIMITED WARRANTY

Course Housewares, LLC warrants this Cook's Companion® product to be free from manufacturer defect for up to 90 days from the original date of purchase. If a defect is found to exist, Course Housewares will, at its option, either repair or replace the product or the defective component, including labor. Replacement will be made with a new or rebuilt product or components. This warranty does NOT cover (a) ordinary wear and tear (such as scratches, chips or stains), (b) impact damage or breakage, (c) heat discoloration, minor imperfections and slight color variations in the enamel, silicone, metals or glass, which are a normal part of the craftsmanship, (d) improper cleaning methods causing scratches, or (e) accessories, even if sold with the product, (f) any unit that has been tampered with, (g) damages incurred through improper use and care and (h) faulty packaging by you or mishandling by any common carrier. Failure to follow the accompanying Care and Use instructions or commercial use will void this warranty.

Course Housewares' sole obligation and your exclusive remedy under this warranty is limited to repair or replacement, at its option, of the defective cookware. You will be responsible for any shipping and handling fees. Products returned to us that are not found to be defective in material or workmanship will be returned to you. If your particular product is found defective but is no longer available and cannot be repaired, a comparable product, at our discretion, will be sent as a replacement. Course Housewares cannot guarantee a replacement of the same color as your original purchase. This warranty extends only to the product's original purchaser, US residents only and does not cover damage caused by improper use or accidental damage. This warranty covers the Rechargeable Spice Mill only.

COURSE HOUSEWARES, LLC MAKES NO OTHER WARRANTIES, EITHER EXPRESSED OR IMPLIED, REGARDING THE PRODUCT OR RELATING TO ITS QUALITY. PERFORMANCE, MERCHANTABILITY, OR FITNESS FOR A PARTICULAR PURPOSE, COURSE HOUSEWARES, LLC SHALL NOT BE LIABLE FOR INDIRECT, CONSEQUENTIAL OR SPECIAL DAMAGES WHETHER A CLAIM IS BASED ON CONTRACT, TORT, WARRANTY OR OTHERWISE, IN NO EVENT WILL LIABILITY EXCEED THE ORIGINAL PURCHASE PRICE OF THE PRODUCT. THE DURATION OF ANY IMPLIED WARRANTY WHATSOEVER, INCLUDING BUT NOT LIMITED TO THE WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED TO THE DURATION OF THE EXPRESS WARRANTY PROVIDED HEREIN. COURSE HOUSEWARES SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES WHATSOEVER.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. This warranty gives you specific legal rights, and you may have other legal rights, which vary from State to State.

### To Process a claim:

Do not return the product to the retailer from which it was purchased. Your retailer has no liability for this warranty. Please contact the Course Housewares customer service department for assistance and to ensure the fastest possible resolution to the problem. Please have your purchase information available to speed this process.

OR


Send your name, physical address, phone number, original purchase receipt and the safely packaged item prepaid to:

Course Housewares, LLC  
1715 Lake Drive West  
Chanhassen, MN 55317  
(866) 325-1659

Return shipping and handling charges may apply.

MADE IN CHINA

MODEL: CCRPM/ B411104

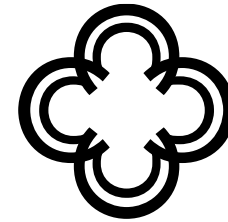

# COOK'S COMPANION®

## Rechargeable Spice Mill



Thank you for purchasing Cook's Companion® Rechargeable Spice Mill. Cook's Companion® will perform best when used as intended. To ensure the best performance of your Spice Mill, please consistently follow these instructions.

### About Cook's Companion®

Whether you are a culinary novice or frittata flipping, soufflé-rising, flambéing master chef, every great cook needs a fine set of tools at his or her disposal to create a truly stellar dish. Exclusively available through Evine, the Cook's Companion® line sets the professional standard for quality tools offered at economic prices. Whether you're prepping meals for one, two or 20, this essential collection can cater to your any and every gastronomic need.

Select from among Cook's Companion® cookware, bakeware, and cutlery guaranteed to make prep easy as pie. These high-quality kitchen essentials combine innovative and resourceful industry technologies with colorfully stylish designs. In addition, Cook's Companion® products boast features and functions employed for easy care and cleanup. Cleverly designed with non-stick interiors, ceramic coating, and shatter-resistant materials, Cook's Companion® deliberately constructs each product with ease and convenience in mind. Fill your kitchen with useful products and return the joy to cooking with assistance from this dependable brand. Be a dinner winner with go-to cookware, bakeware, cutlery and other exclusive essentials from Cook's Companion®.

### Getting Started

- ◆ First plug the Rechargeable Spice Mill into an outlet, using a USB compatible outlet or plug in (not included).
- ◆ If the charging light on the back of the Spice Mill is green, your device can be used but may be at a limited charge. We recommend to charge the Spice Mill for a minimum of 3-4 hours, if the charging light is green, to ensure the batteries are fully charged before first use.
- ◆ If the charging light is Red, we recommend first allowing the Spice Mill to fully charge for a minimum of 8 hours prior to using.
- ◆ Please see the "Your Cook's Companion® Spice Mill" section for further instruction.

### Compatibility

- ◆ The Cook's Companion® Rechargeable Spice Mill is USB plug in compatible for charging needs.
- ◆ Included with your Spice Mill is a USB plug in cord that is compatible with most USB plug ins/charging stations. Please note a wall plug in/ charging station is not included with the Spice Mill and will need to be purchased separately.

PLEASE READ BE



PLEASE READ BEFORE USE AND SAVE THESE INSTRUCTIONS

### The Cook's Companion® Rechargeable Spice Mill



#### WARNINGS:

- Do not submerge any part of the Spice Mill in water or place near wet surfaces. .
- Follow all Care & Use instructions before using your Spice Mill.
- Never place anything inside the Spice Mill that is not for its intended use.
- CAUTION: Do not replace the batteries in your Rechargeable Spice Mill with regular AAA batteries. Doing so may affect the performance of your device. If your Spice Mill is no longer charging please contact customer service at 1(866) 325-1659.

## Your Cook's Companion® Spice Mill


- ◆ To begin using the Rechargeable Spice Mill, you should first check to make sure it is fully charged. On the base of your device, there is a mini-USB port and charging light located directly above the port.
- ◆ Using the included USB charging cord, place the mini-USB end into the base of the Spice Mill.



- ◆ Then you will plug the USB end of the cord into a compatible outlet. Please note, a wall plug in is not included and will need to be purchased separately. The USB charging cord is compatible with most USB plug-ins, including the plug in located on most computers.
- ◆ Once you have plugged in the USB and mini-USB, the charging light located above the mini-USB port will be either Red or Green.
- ◆ When the charging light is Green, your Spice Mill is charged enough to use. If the light is Red, it is recommended to fully charge the batteries before the first use (8 hours).
- ◆ PLEASE NOTE: This will typically take around 3-4 hours to charge the first time, and 8 hours to fully charge when the batteries have been fully depleted.
- ◆ For your convenience, your Spice Mill's charging light will still turn Green after about 1 hour of charging. This means your Spice Mill is charged enough to be used for approximately 30-50 minutes of continuous use, even if the batteries have not been fully charged.
- ◆ The base and handle need to be locked together in order for the Spice Mill to properly charge. Continue to the next section for instructions on locking and unlocking your Cook's Companion® Rechargeable Spice Mill.
- ◆ If your Spice Mill seems to no longer be charging please contact our customer service department at 1-866-325-1659 for further assistance.
- ◆ Please do not attempt to replace the batteries at any time. The NiMH batteries included with your Spice Mill are specific to how your device functions. Replacing the batteries with any other type of battery is not recommended, as it can affect the function of the Spice Mill itself.

## How to Unlock & Lock the Spice Mill


- ◆ After your Spice Mill is fully charged, you will need to unlock the base from the handle in order to add your spice to the base.
- ◆ Above the charging light, on the base of the spice mill, there is a “ ” symbol aligned with another “ ” symbol on the handle. When the symbols are both centered above the charging port and light, your Spice Mill is locked.
- ◆ There are two “ ” symbols on the base of the Spice Mill. One of the symbols is centered with the charging port and charging light, and represents the LOCKED position. The second symbol on the base is to the left of the first symbol, and represents the UNLOCKED position.
- ◆ To unlock your Spice Mill, firmly hold the base and turn the handle clockwise until the “ ” is aligned with the other “ ” symbol on the base. You are now able to lift the handle off of the base and fill the base with your spices.
- ◆ To reattach the handle and the base, first place the grinding control back into the handle and align the two symbols in the UNLOCKED position. Make sure the handle is all the way down and then hold the base, and turn the handle counter clockwise until the “ ” symbol is aligned with the other “ ” symbol on the base (above the charging light) in the LOCKED position.

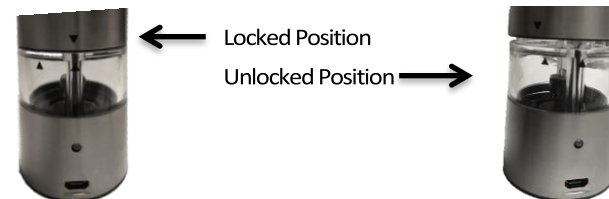

- ◆ Please note that the base and handle may be snug and locking/unlocking the two may need some extra effort.
- ◆ Never force the handle past either of the symbols on the base to avoid damage to the Spice Mill.

## Loading the Base

- ◆ Your Cook's Companion Rechargeable Spice Mill will grind most any whole spices.
- ◆ To load the Spice Compartment, first unlock the handle from the base and set the handle aside.
- ◆ Next, slowly pour your spice into the Spice Compartment, for example Whole Peppercorns, until you have reached the two triangle symbols on the base.

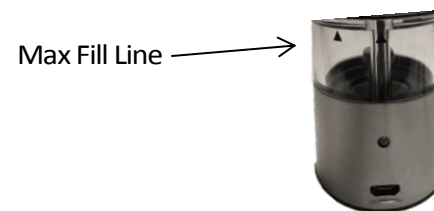

- ◆ Never fill past this point, as it can cause damage to the grinder.
- ◆ Once the base is full, simply reattach the handle to the base in the locked position.
- ◆ When the handle and base are locked together, press down on the grinding control to begin milling your spices. If the grind size is too large or too small, follow the instructions in the next section on how to adjust the grinder.

## Adjusting the Grinder

- ◆ Your Cook's Companion Rechargeable Spice Mill can be set to 6 different grinding sizes.
- ◆ In order to adjust the grinder, the handle and base must be attached and locked together. Be careful to not touch the grinding control while adjusting the grinder.
- ◆ To change the grinding size, first turn the spice mill upside down so that the charging light is facing you.
- ◆ Next, turn the Grinding Knob clockwise until you cannot turn the knob any further. You will notice that the grinding plate is almost completely closed. Do not attempt to force the Grinding Knob, as you may break the Grinder and will void your warranty.
- ◆ Once in this position you may begin to turn the Grinding Knob counter clockwise. You will hear and/or feel 2 clicks for each grinding size.
- ◆ When turning the Grinding Knob counter clockwise, the grinding sizes will get larger. Be cautious to not go past the 6<sup>th</sup>/largest size, doing so can cause the Grinding Knob to come off of the Spindle.

Smaller Size/ Close



Bigger Size/ Open

