



PAULA DEEN

KITCHEN ELECTRICS



**FOOD PROCESSING STATION 5PC
ACCESSORY SET W/STORAGE
MODEL PDFPUS1**

 
USES FOR FOOD PROCESSOR ATTACHMENTS

ATTACHMENT	FOOD
Citrus Juicer	Lemons, grapefruits, oranges, pomegranates
Emulsion Disc	Whip cream, vinaigrettes, mayonnaise, egg whites, ice cream
Grinder	Coffee Beans, peppercorns, spices, nuts

Citrus Juicer:

Assembly:

1. Assemble rod into the base of the unit.
2. Place the bowl and lock in place.
3. Place the juicer body on top of the rod.
4. Place the juicer reamer on top of the juicer.
5. Using the minimum speed to begin place desired citrus face down on top of the reamer and begin juicing.

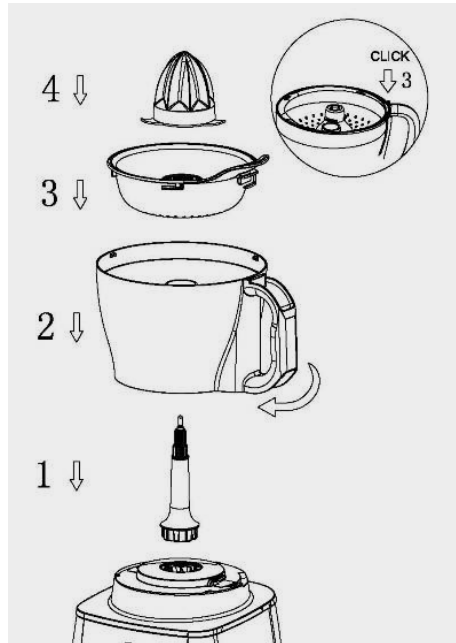


Tips: Use to squeeze juice from various citrus such as oranges, lemons, limes, grapefruit, etc.

Note: Do not use the machine for more than 3 minutes at a time. Pay close attention to the capacity line, once the food approaches the max line on the container stop operation. From time to time operation should be halted to remove pulp. To reduce splash use the lowest speed to squeeze juice.

Emulsion Disc:

Assembly:

 1. Assemble rod into the base of the unit.
2. Place the bowl and lock in place.
3. Place the holder inside the bowl on the rod then place emulsifying disc inside the bowl on top of the holder.
4. Put ingredients inside of the bowl and place the lid on top of the bowl then lock in place by twisting.
5. Place the food pusher inside of the lid.
6. Choose desired speed for ingredients and begin emulsifying.

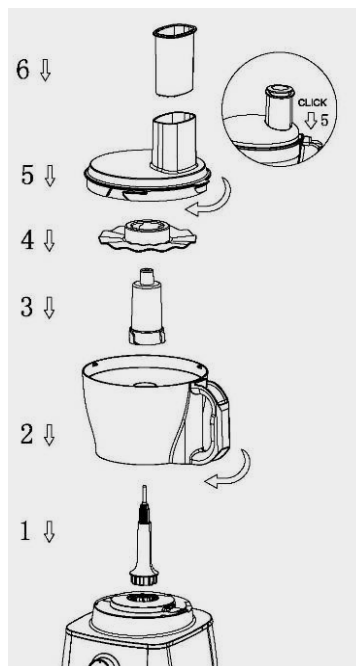


Tips: Use for aioli, instant pudding, mayonnaise, whipping cream, whisking eggs, egg whites, and sponge cake mixtures.

Note: Do not use to prepare cake mixtures with butter or margarine. Do not use to knead dough. For egg whisking, use room temperature eggs. Do not use the machine for more than 3 minutes at a time.

Grinder:

Assembly:

 1. Place ingredients into the grinder cup, do not fill more than halfway.
2. Set the sealing ring onto the mouth of the grinder cup.
3. Set the grinder blade onto the ring (The blade will be upside down).
4. Screw the grinder base onto the cup until it is tight.
5. Place the grinder onto the base of the unit and turn to lock.
6. Use the pulse speed for the best results.

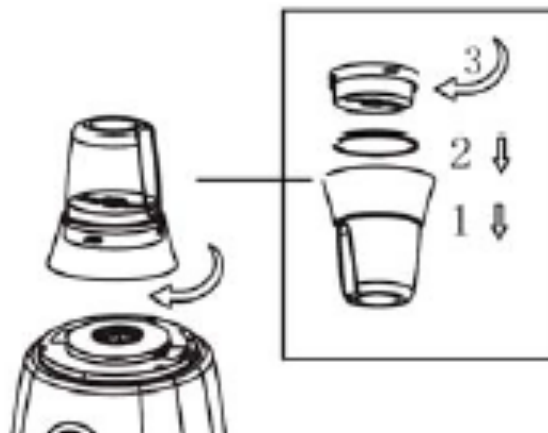

Tips: Use for milling herbs, nuts, and coffee beans.

Note: Do not use the machine for more than 1 minute at a time. Do not add more than 1.80 OZ. of ingredients for grinding. For best results use the pulse speed.

CLEANING

Clean after every use.

1. Before cleaning unplug the unit.
2. Wash all parts with hot water and dish liquid. Rinse and dry thoroughly.
3. Wipe the external surface of the food processor with a soft damp cloth and dry surfaces with soft dry cloth. Do not use detergent or abrasives as these may scratch the outside.
4. Once all parts are dry place into the storage box when not in use.

Note: Never immerse the food processor housing in water.

LIMITED ONE YEAR WARRANTY

This warranty covers all defects in workmanship or materials in the mechanical and electrical parts arising under normal use and care in this product for a period of 12 months from the date of purchase provided you are able to present a valid proof-of-purchase. A valid proof-of-purchase is a receipt specifying item, date purchased, and cost of item. A gift receipt showing item and date of purchase is an acceptable proof-of-purchase. Product is intended for household use only. Any commercial use voids the warranty.

This warranty covers the original retail purchaser or gift recipient. During the applicable warranty period within normal household use, we will repair or replace, at our discretion, any mechanical or electrical part which proves defective, or replace unit with a comparable model. Shipping and handling costs are not included for warranty replacements and are the responsibility of the customer.

To obtain service under the terms of this warranty, call our customer care department at 312-526-3760 (Monday- Friday 10:00AM-6:00PM CST), or send an email to customercare@alliedrich.net. Please provide the model number listed on the bottom of this page when contacting us.

THIS LIMITED WARRANTY COVERS UNITS PURCHASED AND USED WITHIN THE UNITED STATES AND DOES NOT COVER:

- Damages from improper installation.
- Damages in transit.
- Defects other than manufacturing defects.
- Damages from misuse, abuse, accident, alteration, lack of proper care and maintenance, or incorrect current or voltage.
- Damage from service by other than authorized dealer or service center.
- Shipping and handling costs.
- This warranty gives you special legal rights and you may also have other rights to which you are entitled which may vary from state to state.

Manufacturer does not assume responsibility for loss or damage for return shipment. We recommend that you keep your original packaging should you require repair service. Before returning product please contact our customer care department for return authorization. When returning product for repair please include your full name, return address, and daytime phone number. Also include a brief description of the problem you are experiencing and a copy of your sales receipt or other proof of purchase in order to validate warranty status.

MODEL PDFPUS1

