



2.5QT CONNECTABLE SLOW COOKER



INSTRUCTIONS MODEL PDCBSL

Meet Paula Deen




Culinary icon Paula Deen is a self-made entrepreneur who learned her savory secrets from her grandmother. She started her career in the food industry with a small catering company called The Bag Lady, but business quickly outgrew her home kitchen. Taking a leap of faith, she opened her first restaurant, The Lady and Sons, which has since become a tourist hot spot in Savannah, GA. With her huge personality, delectable recipes and heart of gold, Paula next found herself in talks with TV execs after a friend introduced her to some influential people in the business. The rest, as they say, is history.



In addition to her television success, Paula has sold more than 11,000,000 copies of her 14 cookbooks and launched the Paula Deen Network, an interactive digital portal that combines cooking, lifestyle and game shows with great recipes, meal-planning tools and more.

PARTS IDENTIFICATION

Resettable Circuit Breaker (View A)

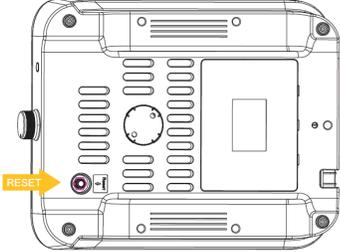


Plug Connection (View B)

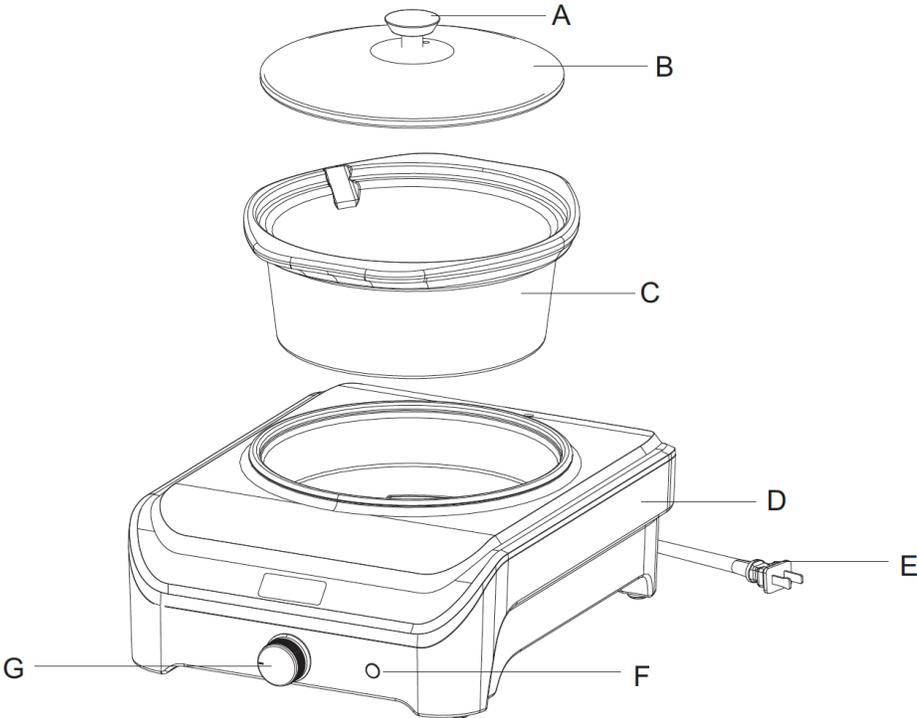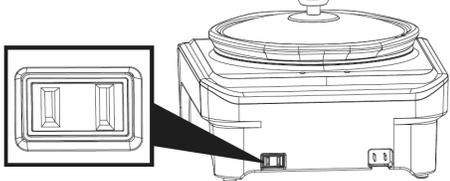

- A. Lid Handle
- B. Removable Glass Lids
- C. Removable Stoneware
- D. Heating Base
- E. Manual Retractable Cord
- F. Indicator Light
- G. Temperature Control Knob

How To Use and Insert Lid Rest:

The purpose of the lid rest is for the lid to be out of the way when serving food out of the slow cooker. See images below on how to assemble the lid rest.

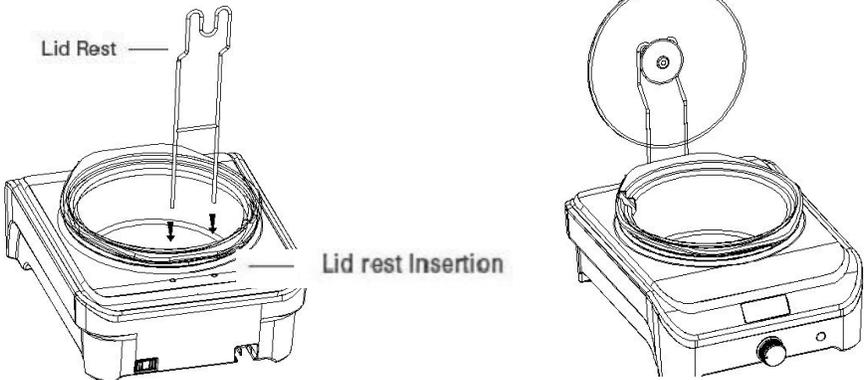

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should be followed:

- Read all the instructions.
- Do not use the unit for anything other than intended use.
- Never immerse the unit fully into water or other liquid to avoid damage to the roaster.
- Do not leave the unit unattended during operation.
- Do not place the unit on or near gas or electric cooktops to avoid damages.
- Do not use outdoors.
- Make sure the unit is unplugged before moving the unit.
- Place the unit on a level surface away from walls and cupboards. Do not let the cord hang over the edge of a table or counter or touch hot surfaces. Keep 6 inches clear on all sides.
- Close supervision is necessary when any appliance is used by or near children.
- Do not move the appliance during cooking.
- If you are using plastic utensils, do not leave them inside the appliance when hot.
- Do not use sharp utensils in the unit to avoid damage.
- The glass lid has been specially treated to make it stronger, more durable and safer than ordinary glass, however it is not indestructible, please use caution when handling the glass lid.
- Do not touch hot surfaces. Use handles with dry pot holders or oven mitts to move the grill.
- Do not use the unit near or under surfaces that are heat sensitive or those that may be damaged by steam.
- Be cautious when handling the glass lid as it will be extremely hot.

- Do not set heated unit on a finished wood table. It is suggested to place a trivet (not included) under the unit to prevent possible damage.
- Use caution when placing your stoneware on a ceramic or smooth glass stovetop, countertop, table or other surface. Due to the nature of the stoneware, the rough bottom surface may scratch some surface if caution is not used. Always place protective padding (not included) under stoneware before setting on a table or countertop.
- Do not put the glass lid in the oven or microwave. The lids should never be used on a gas or electric burner.
- Do not use on any gas or electric burners.
- To avoid scalding from escaping steam while removing the glass lid, carefully lift the lid.
- Extreme caution must be used since the unit contains hot food, hot oils and liquids.
- To prevent damage or shock hazard, do not cook directly in the heating base. Cook only in the stoneware provided.
- During initial use of this appliance, some slight smoke and/or odor may be detected. This is normal with many heating appliances and will not recur after a few uses.
- Unplug from outlet when not in use and before cleaning. Allow to cool before cleaning.
- To prevent electrical shock do not immerse the cord in water or other liquid.
- Do not operate unit with a damaged cord or plug or after the unit malfunctions or has been damaged in any manner.
- An extension cord may be used with care; however, the marked electrical rating should be at least as great as the electrical rating of the unit. The extension cord

should not be allowed to drape over the counter or tabletop where it can be pulled on.

- A retractable power supply cord is provided to reduce the hazards resulting from entanglement or tripping over a longer cord.
- The appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way.
- If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.
- The recommended maximum number of units to plug into one outlet is 6 units. This may vary depending on circuit.
- Do not use outdoors.
- **SAVE THESE INSTRUCTIONS.**

BEFORE FIRST USE

1. Remove all packaging materials. Locate all included parts before discarding the box.
2. Clean the unit, stoneware and lid with hot water, dishwashing liquid, and a non-abrasive sponge.
3. Wipe the inside and outside of the unit with a soft cloth.

USING THE APPLIANCE


1. Place unit on a level surface prior to turning the units on. Make sure that the temperature control knob is in the OFF position.
2. Place the removable stoneware into the heating base and add your ingredients then cover with the glass lid.
3. Plug in your unit and select the temperature setting (low or high).

NOTE: Never cook food on the warm setting. This setting is only for keeping food that is already cooked warm. It is not recommended to use the warm setting for more than 4 hours.

4. When heating or cooking is done, turn the unit off and unplug your unit.
5. Allow it to cool before cleaning. Once the unit has cooled, store the cord by slowly feeding the cord back into the base.

For use with Multiple Units:

1. Select the unit you would like to be plugged into the wall outlet (Unit A).
2. Pull out the retractable power cord for Unit A and plug the cord into a standard electrical outlet.
3. Line up the plug connection outlet of Unit A with the retractable cord of Unit B. See photo below.

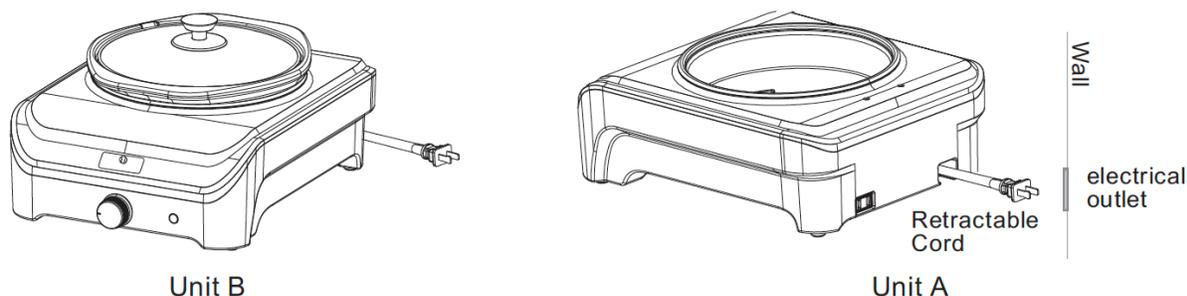

NOTE: When using with multiple units side by side, make sure the plug in Unit A is securely in place prior to connecting units together. To ensure the units are connected properly, you can turn the temperature dial to high, low or warm for each of the units and the indicator will illuminate when they are firmly connected.

4. Connect other units as needed in any combination up to the recommended total number of six by adding up the unit count (see page 3 view C). Refer to the icon located to the left of the power cord to determine your unit count.
5. To add additional units repeat steps 3 and 4.



6. Once desired amount of units are connected, add your ingredients to the stoneware and cover with the lids.
7. Select the temperature setting (low or high).

NOTE: Never cook food on the warm setting. This setting is only for keeping food that is already cooked warm. It is not recommended to use the warm setting for more than 4 hours.

8. When heating or cooking is done, turn the units off and unplug your units.
9. Allow it to cool before cleaning. Once the units has cooled, store the cords by slowly feeding the cord back into the base. See storage section for more details.

CLEANING

Clean after every use.



1. Switch the control knob on the unit to the “OFF” position, unplug the unit and allow to cool completely. Never wash the stoneware or glass lid when they are hot.

CAUTION: To prevent injury or electric shock, do not immerse cord in water or other liquid.

2. Clean the unit, stoneware, and lid with hot water, dishwashing liquid, and a non-abrasive sponge. Do not use detergent or abrasives.

STORAGE

1. Unplug the cord and slowly feeding the cord back into the base. If the cord gets stuck, pull the cord completely out and try again following the pattern of the cord to guide it back in.
2. Make sure all parts are clean and dry.
3. See guide below for how to stack multiple units.

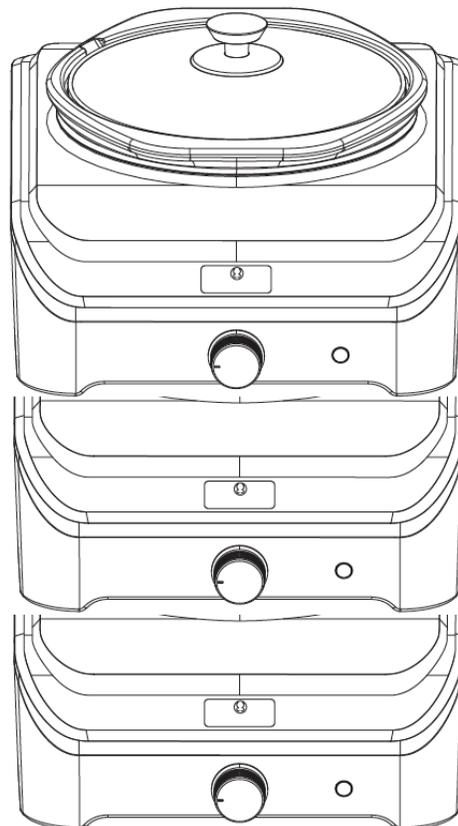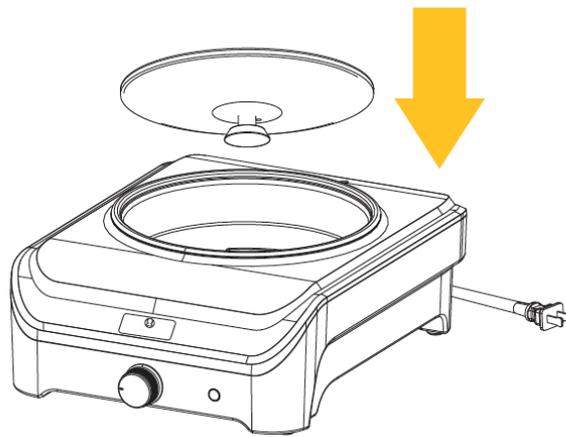

LIMITED ONE YEAR WARRANTY

This warranty covers all defects in workmanship or materials in the mechanical and electrical parts, arising under normal use and care in this product for a period of 12 months from the date of purchase provided you are able to present a valid proof-of-purchase. A valid proof-of-purchase is a receipt specifying item, date purchased, and cost of item. A gift receipt showing item and date of purchase is an acceptable proof-of-purchase. Product is intended for household use only. Any commercial use voids the warranty.

This warranty covers the original retail purchaser or gift recipient. During the applicable warranty period within normal household use, we will repair or replace, at our discretion, any mechanical or electrical part which proves defective, or replace unit with a comparable model. Shipping and handling costs are not included for warranty replacements and are the responsibility of the customer.

To obtain service under the terms of this warranty, send an email to customercare@alliedrich.net. Please provide the model number listed on the bottom of this page when contacting us.

THIS LIMITED WARRANTY COVERS UNITS PURCHASED AND USED WITHIN THE UNITED STATES AND DOES NOT COVER:

- Damages from improper installation.
- Damages in transit.
- Defects other than manufacturing defects.
- Damages from misuse, abuse, accident, alteration, lack of proper care and maintenance, or incorrect current or voltage.
- Damage from service by other than authorized dealer or service center.
- Shipping and handling costs.
- This warranty gives you special legal rights and you may also have other rights to which you are entitled which may vary from state to state.

Manufacturer does not assume responsibility for loss or damage for return shipment. We recommend that you keep your original packaging should you require repair service. Before returning product please contact our customer care department for return authorization. When returning product for repair please include your full name, return address, and daytime phone number. Also include a brief description of the problem you are experiencing and a copy of your sales receipt or other proof of purchase in order to validate warranty status.

MODEL PDCBSL

