

90 Day Limited Warranty

Course Housewares, LLC warrants this product to be free from manufacturer defect for up to 90 days from the original date of purchase. If a defect is found to exist, Course Housewares will, at its option, either repair or replace the product or the defective component, including labor. Replacement will be made with new or rebuilt product or components. This warranty does NOT cover (a) ordinary wear and tear (such as scratches, dents or stains), (b) impact damage or breakage, (c) heat discoloration, minor imperfections and slight color variations which are a normal part of the craftsmanship, (d) improper cleaning methods causing scratches, or (e) any unit that has been tampered with, (f) damages incurred through improper use and care and (g) faulty packaging by you or mishandling by any common carrier. Failure to follow the accompanying Care and Use instructions or commercial use will void this warranty.

Course Housewares' sole obligation and your exclusive remedy under this warranty is limited to repair or replacement, at its option, of the defective item. You will be responsible for any shipping and handling fees. Products returned to us that are not found to be defective in material or workmanship will be returned to you. If your particular product is found defective but is no longer available and cannot be repaired, a comparable product, at our discretion, will be sent as a replacement. This warranty extends only to the product's original purchaser, US residents only and does not cover damage caused by improper use or accidental damage.

COURSE HOUSEWARES, LLC., MAKES NO OTHER WARRANTIES, EITHER EXPRESSED OR IMPLIED, REGARDING THE PRODUCT OR RELATING TO ITS QUALITY, PERFORMANCE, MERCHANTABILITY, OR FITNESS FOR A PARTICULAR PURPOSE, COURSE HOUSEWARES, LLC SHALL NOT BE LIABLE FOR INDIRECT, CONSEQUENTIAL OR SPECIAL DAMAGES WHETHER A CLAIM BASED ON CONTRACT, TORT, WARRANTY OR OTHERWISE, IN NO EVENT WILL LIABILITY EXCEED THE ORIGINAL PURCHASE PRICE OF THE PRODUCT. THE DURATION OF ANY IMPLIED WARRANTY WHATSOEVER, INCLUDING BUT NOT LIMITED TO THE WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED TO THE DURATION OF THE EXPRESS WARRANTY PROVIDED HEREIN. COURSE HOUSEWARES SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES WHATSOEVER.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. This warranty gives you specific legal rights, and you may have other legal rights, which vary from State to State.

To Process a claim:

Do not return the product to the retailer from which it was purchased. Your retailer has no liability for this warranty. Please contact Course Housewares' customer service department for assistance and to ensure the fastest possible resolution to the problem. Please have your purchase information available to speed this process.

OR

Send your name, physical address, phone number, original purchase receipt and the safely packaged item prepaid to:

Course Housewares, LLC
1715 Lake Drive West
Chanhassen, MN 55317

Customer Service: Phone: (866) 325-1659 or Email: askcourse@course-h.com

Return shipping and handling charges may apply.


MADE IN CHINA
MODEL# CCBDB/B416084



Wash, Chop, Rinse Collapsible Chopping Board & Bowl

Thank you for purchasing the Wash, Chop, Rinse Collapsible Chopping Board & Bowl. Your item will perform best when used as intended. To ensure the best performance, please consistently follow these instructions.

YOUR WASH, CHOP, RINSE COLLAPSIBLE CHOPPING BOARD & BOWL

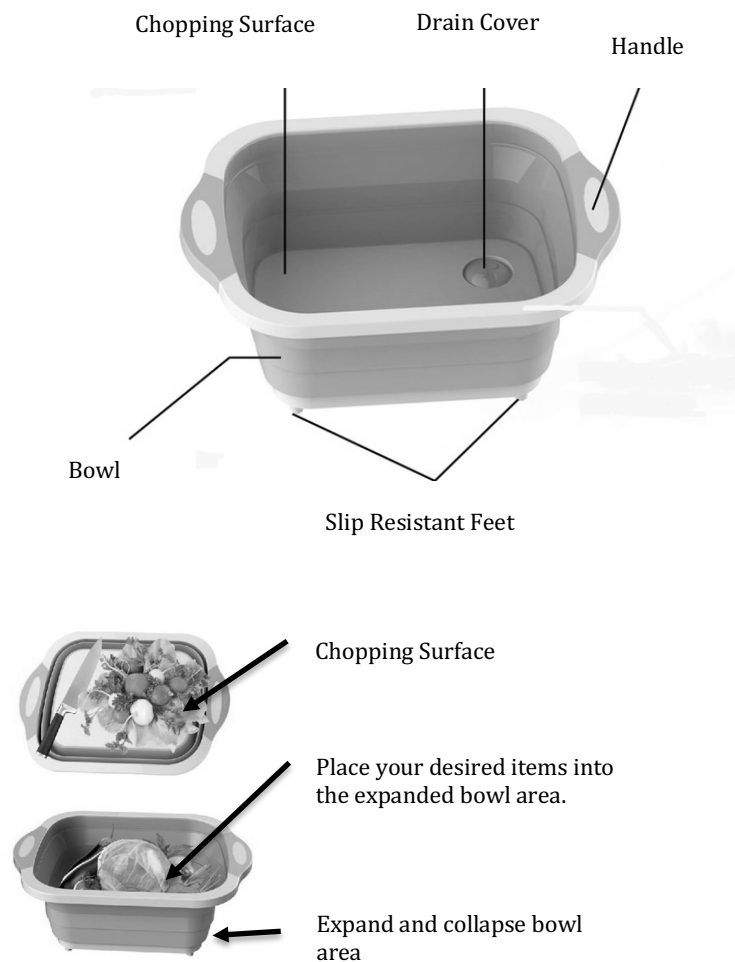

GETTING STARTED

- ◆ Before using, remove any labels and wash and dry each item in accordance with the care and use instructions.

CLEANING

- ◆ While your chopping board is dishwasher safe, we recommend hand washing with warm, soapy water.
- ◆ Never use any harsh cleaners on the chopping board.
- ◆ Always allow your chopping board to dry completely before storing.

USE

- ◆ Never use your item on any type of cooking surface. This item is not microwave or oven safe.
- ◆ Always use caution when using your chopping board.
- ◆ Always make sure the chopping board is placed on a flat and dry surface when using any sharp objects.
- ◆ Always use caution when draining any hot liquid.
- ◆ Always be sure to cut away from your body to avoid injury.
- ◆ Never cut over the drain cover as this can cause damage.
- ◆ Your chopping board can be used to wash vegetables, fruits and other items. Simply push the chopping surface downwards to extend the bowl into its expanded state.
- ◆ Place your items into the expanded bowl and run the bowl under water for the desired cleaning time.
- ◆ To drain the expanded bowl, simply push the drain cover. Please note: The drain cover slows water from draining out of the bowl, but water still may slowly drain even in the closed position. When draining is complete simply push the drain cover to close the drain opening.