



1800W REVERSIBLE GRILL/ GRIDDLE W/REMOVABLE LID



**INSTRUCTIONS
MODEL AN-106**

Meet Paula Deen



Culinary icon Paula Deen is a self-made entrepreneur who learned her savory secrets from her grandmother. She started her career in the food industry with a small catering company called The Bag Lady, but business quickly outgrew her home kitchen. Taking a leap of faith, she opened her first restaurant, The Lady and Sons, which has since become a tourist hot spot in Savannah, GA. With her huge personality, delectable recipes and heart of gold, Paula next found herself in talks with TV execs after a friend introduced her to some influential people in the business. The rest, as they say, is history.

In addition to her television success, Paula has sold more than 11,000,000 copies of her 14 cookbooks and launched the Paula Deen Network, an interactive digital portal that combines cooking, lifestyle and game shows with great recipes, meal-planning tools and more.

PARTS IDENTIFICATION



Main Unit

Scraper

Temperature probe



Griddle



Grill



Drip Tray



Lid

HOW TO ASSEMBLE THE GRILL

Figure 1



Figure 2



Figure 3



Figure 4



1. Place the drip tray inside the base, inserting it first into the back of the base before lowering it into place. (See figure 1.)
2. Place the desired cooking surface (Grill or Griddle) over the drip tray making sure that the handles slid into the slot located on each side of the base. (See figure 2.)
3. Insert the lid vertical so that the side pins slide into the slots located on each side of the back of the base. (See figure 3.)
4. To close the lid, press down on the front part of the lid, it will now be locked in place. To open the lid, press on the front part of the lid and lift up. (See figure 4.)

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should be followed:

- Read all the instructions.
- Do not use the unit for anything other than intended use.
- Never immerse the unit fully into water or other liquid to avoid damage to the unit.
- Do not leave the unit unattended during operation.
- Do not place the unit on or near gas or electric cooktops to avoid damages.
- Make sure the unit is unplugged before moving the unit.
- Always attach the temperature probe to the unit first, then plug cord into a wall outlet. When disconnecting the unit, turn the temperature probe to “OFF”, then remove from wall outlet.
- Place the unit on a level surface away from walls and cupboards. Do not let the cord hang over the edge of a table or counter or touch hot surfaces.
- Close supervision is necessary when any appliance is used by or near children.
- Do not move the appliance during cooking.
- If you are using plastic utensils, do not leave them inside the appliance when hot.
- Do not use sharp utensils in the unit to avoid damaging the coating.
- The glass lid has been specially treated to make it stronger, more durable and safer than ordinary glass, however it is not indestructible, please use caution when handling the glass lid.
- Do not touch hot surfaces. Use handles with dry pot holders or oven mitts to move the grill.

- Do not use the unit near or under surfaces that are heat sensitive or those that may be damaged by steam.
- Be cautious when handling the glass lid as it will be extremely hot.
- To avoid scalding from escaping steam while removing the glass lid, carefully lift the lid.
- Extreme caution must be used since the unit contains hot food, hot oils and liquids.
- Do not use the unit with an extension cord, always plug into a wall outlet.
- Unplug from outlet when not in use and before cleaning. Allow to cool before cleaning.
- To prevent electrical shock do not immerse the cord or temperature probe in water or other liquid.
- Do not operate unit with a damaged cord or plug or after the unit malfunctions or has been damaged in any manner.
- A short power supply cord is supplied to reduce the risk of the cord becoming tangled or tripping over a long cord.
- If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.
- Do not use outdoors.
- **SAVE THESE INSTRUCTIONS.**

BEFORE FIRST USE

1. Remove all packaging materials. Locate all included parts before discarding the box.
2. Clean the unit, grill/griddle plate and lid with hot water, dishwashing liquid, and a non-abrasive sponge.
3. Wipe the inside and outside of the unit with a soft cloth.

USING THE APPLIANCE

1. Place unit on a level surface. Place the cooking surface onto the base with either the grill or griddle surface up, according to your recipe.
2. Insert temperature probe into the unit with the control knob facing upwards and in the “OFF” position.
3. Plug cord into an electrical outlet.
4. Turn the control knob to desired setting, the indicator light will illuminate. The range is from 200°F to 450°F.
5. The unit will need to preheat for 3-8 minutes, depending on the desired temperature setting. If faster heat up is desired close the lid on top of the unit.

Note: Do not preheat for more than the suggested time to avoid damage to the coating of the plates.

6. Once the indicator light goes off, the unit is ready for cooking. Place food on the unit. Cook recipe as desired.
7. Once cooking is complete turn the control knob to the “OFF” position and unplug the unit. Or the food can be placed on WARM to keep food warm.

CLEANING

Clean after every use.

1. Switch the control knob on the unit to the “OFF” position, unplug the unit and allow to cool completely.

CAUTION: To prevent injury or electric shock, always remove the temperature probe before cleaning. Do not immerse temperature probe, cord, or in water or other liquid to avoid damage to parts.

2. Remove excess food and oil with the scraper and a clean cloth. Clean the unit, grill/griddle plate and lid with hot water, dishwashing liquid, and a non-abrasive sponge. Do not use detergent or abrasives as these may scratch the coating.

STORAGE

1. Unplug the cord.
2. Make sure all parts are clean and dry.
3. Do not place the temperature probe on top of the unit as this may scratch the coating.

LIMITED ONE YEAR WARRANTY

This warranty covers all defects in workmanship or materials in the mechanical and electrical parts, arising under normal use and care in this product for a period of 12 months from the date of purchase provided you are able to present a valid proof-of-purchase. A valid proof-of-purchase is a receipt specifying item, date purchased, and cost of item. A gift receipt showing item and date of purchase is an acceptable proof-of-purchase. Product is intended for household use only. Any commercial use voids the warranty.

This warranty covers the original retail purchaser or gift recipient. During the applicable warranty period within normal household use, we will repair or replace, at our discretion, any mechanical or electrical part which proves defective, or replace unit with a comparable model. Shipping and handling costs are not included for warranty replacements and are the responsibility of the customer.

To obtain service under the terms of this warranty, send an email to customercare@alliedrich.net. Please provide the model number listed on the bottom of this page when contacting us.

THIS LIMITED WARRANTY COVERS UNITS PURCHASED AND USED WITHIN THE UNITED STATES AND DOES NOT COVER:

- Damages from improper installation.
- Damages in transit.
- Defects other than manufacturing defects.
- Damages from misuse, abuse, accident, alteration, lack of proper care and maintenance, or incorrect current or voltage.
- Damage from service by other than authorized dealer or service center.
- Shipping and handling costs.
- This warranty gives you special legal rights and you may also have other rights to which you are entitled which may vary from state to state.

Manufacturer does not assume responsibility for loss or damage for return shipment. We recommend that you keep your original packaging should you require repair service. Before returning product please contact our customer care department for return authorization. When returning product for repair please include your full name, return address, and daytime phone number. Also include a brief description of the problem you are experiencing and a copy of your sales receipt or other proof of purchase in order to validate warranty status.

MODEL AN-106

