

1 YEAR LIMITED WARRANTY

Course Housewares, LLC warrants this product to be free from manufacturer defect for up to 1 Year from the original date of purchase. If a defect is found to exist, Course Housewares will, at its option, either repair or replace the product or the defective component, including labor. Replacement will be made with new or rebuilt product or components. This warranty does NOT cover (a) ordinary wear and tear (such as scratches or stains), (b) impact damage or breakage, (c) heat discoloration, minor imperfections and slight color variations which are a normal part of the craftsmanship, (d) improper cleaning methods, or (e) any unit that has been tampered with, (f) damages incurred through improper use and care and (g) faulty packaging by you or mishandling by any common carrier. Failure to follow the accompanying Care and Use instructions or commercial use will void this warranty.

Course Housewares' sole obligation and your exclusive remedy under this warranty is limited to repair or replacement, at its option, of the defective product. You will be responsible for any shipping and handling fees. Products returned to us that are not found to be defective in material or workmanship will be returned to you. If your particular product is found defective but is no longer available and cannot be repaired, a comparable product, at our discretion, will be sent as a replacement. Course Housewares cannot guarantee a replacement of the same color as your original purchase. This warranty extends only to the product's original purchaser, US residents only and does not cover damage caused by improper use or accidental damage. This warranty covers the Cook and Store Storage only.

COURSE HOUSEWARES, LLC MAKES NO OTHER WARRANTIES, EITHER EXPRESSED OR IMPLIED, REGARDING THE PRODUCT OR RELATING TO ITS QUALITY. PERFORMANCE, MERCHANTABILITY, OR FITNESS FOR A PARTICULAR PURPOSE, COURSE HOUSEWARES, LLC SHALL NOT BE LIABLE FOR INDIRECT, CONSEQUENTIAL OR SPECIAL DAMAGES WHETHER A CLAIM IS BASED ON CONTRACT, TORT, WARRANTY OR OTHERWISE, IN NO EVENT WILL LIABILITY EXCEED THE ORIGINAL PURCHASE PRICE OF THE PRODUCT. THE DURATION OF ANY IMPLIED WARRANTY WHATSOEVER, INCLUDING BUT NOT LIMITED TO THE WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED TO THE DURATION OF THE EXPRESS WARRANTY PROVIDED HEREIN. COURSE HOUSEWARES SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES WHATSOEVER.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. This warranty gives you specific legal rights, and you may have other legal rights, which vary from State to State.

To Process a claim:

Do not return the product to the retailer from which it was purchased. Your retailer has no liability for this warranty. Please contact the Course Housewares customer service department for assistance and to ensure the fastest possible resolution to the problem. Please have your purchase information available to speed this process.

OR

Send your name, physical address, phone number, original purchase receipt and the safely packaged item prepaid to:

Course Housewares, LLC

1715 Lake Drive West

Chanhassen, MN 55317

(866) 325-1659 or Email: askcourse@course-h.com

Return shipping and handling charges may apply.

MADE IN CHINA

MODEL: B416804

STORABLE SOLUTIONS 16 CUP STORAGE



Thank you for purchasing the Storable Solutions Storage. Your items will perform best when used as intended. To ensure the best performance of your products, please consistently follow these instructions.

PLEASE READ BEFORE USE AND SAVE THESE INSTRUCTIONS

YOUR STORABLE SOLUTIONS STORAGE INCLUDES:


1- 16 Cup Storage with lid

GETTING STARTED

- ◆ Before using, remove any labels and wash and dry each item in accordance to the care and use instructions.

USING YOUR STORABLE SOLUTIONS STORAGE

- ◆ Your Storable Solutions Storage is BPA free.
- ◆ Begin by removing the lid by grabbing the side tab on the lid and pulling upwards.

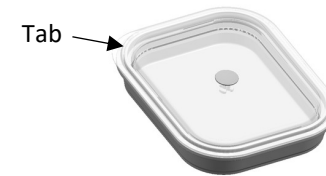

- ◆ Once the lid is removed simply press the base downwards to expand the storage area. To collapse push the base upwards.



- ◆ To use your Storable Solutions item in the microwave or an oven the venting knob must be pulled upwards. Do not use in the microwave for longer than 20 minutes or allow the storage to burn dry. Always use a hot pad when handling the storage after heating.



CARE FOR YOUR STORABLE SOLUTIONS STORAGE

- ◆ Your Storable Solutions Storage is dishwasher safe (top rack only), however hand washing with warm, soapy water is recommended and will prolong the life of the storage.
- ◆ Some foods may cause staining in your storage. Use caution when storing foods that may stain.
- ◆ Your storage is oven, microwave, and freezer safe. Do not use for longer than 20 minutes in the microwave or longer than 6 hours in the oven. Your storage can be used in temperatures between -22 degrees and 450 degrees Fahrenheit.
- ◆ Always use caution when placing and transferring liquids in the storage.
- ◆ Always allow your storage to cool before cleaning.
- ◆ Always ensure the storage is completely dry before storing.