



8.5QT CERAMIC NON-STICK XXL AIR FRYER W/ACCESSORIES

Instructions & Recipes
MODEL PDAF8TX-2

Meet Paula Deen



Culinary icon Paula Deen is a self-made entrepreneur who learned her savory secrets from her grandmother. She started her career in the food industry with a small catering company called The Bag Lady, but business quickly outgrew her home kitchen. Taking a leap of faith, she opened her first restaurant, The Lady and Sons, which has since become a tourist hot spot in Savannah, GA. With her huge personality, delectable recipes and heart of gold, Paula next found herself in talks with TV execs after a friend introduced her to some influential people in the business. The rest, as they say, is history.

In addition to her television success, Paula has sold more than 11,000,000 copies of her 14 cookbooks and launched the Paula Deen Network, an interactive digital portal that combines cooking, lifestyle and game shows with great recipes, meal-planning tools and more.

Congratulations!

My love for fried food is documented in every one of my cookbooks, and just rattling off some of my favorite dishes—fried chicken, fried green tomatoes, fried okra, and fritters—it makes my mouth water y'all.

It's no secret that over the past few years I have been bringing healthier food into my life. After having lost 40 pounds, I want to maintain my trim figure, so I have been avoiding fried foods. However, I will never, ever completely give up my favorites, so I limit my Southern-fried treats to one day a week. This is challenging, because so much Southern food is fried.

When I was introduced to air-frying, I was skeptical. I honestly didn't fully understand the concept: no oil, less fat? But what about the crunch and texture I love from frying? I was pleasantly surprised when I tried the air fryer for the first time. I prepared my favorite recipe, and I tasted the same delicious flavor I know and love—and the food was crispy without the oil! Testing one recipe after another, I found that the air fryer is a healthy and easy alternative to preparing a variety of recipes that call for frying.

I've worked with my team to create a larger air fryer that is easy to use and will cook fantastic meals. Grill, bake, or fry, this air fryer does it all and is the answer to preparing quick and healthy meals. I now can enjoy my favorite foods more often without feeling guilty.

I'm staying on a healthy track cooking with my air fryer, and I encourage y'all to do the same. Thanks for your purchase, and I know y'all, too, will love over fifty great recipes in this booklet to get started.

Love and air-fried dishes,

A handwritten signature in black ink that reads "Paula Allen". The signature is written in a cursive, flowing style with large loops and a prominent initial "P".

WHAT'S INCLUDED



Air Fryer



Instruction Manual & Recipes



Divider

USE

- Place inside the chamber to divide foods while cooking.

CARE

- Hand washing is recommended.



Mesh Basket

USE

- Place in the bottom of the chamber to make fried foods such as french fries.

CARE

- Hand washing is recommended.



Griddle Insert

USE

- Place in the bottom of the chamber to make pancakes, bacon, eggs, etc.

CARE

- Hand washing is recommended.



Cooking Insert

USE

- Place in the bottom of the chamber to give a crispy finish to food.

CARE

- Hand washing is recommended.



Grill Insert

USE

- Place in the bottom of the chamber to make food with a grilled finish.

CARE

- Hand washing is recommended.


IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should be followed as follows:

- Read all instructions before first use.
- This appliance is designed for household use only.
- Do not place the appliance against a wall or against another appliance. Leave at least 5 inches of free space on the back and sides and 5 inches of free space above the appliance.
- Do not place anything on top of the appliance.
- Do not use the appliance for any purpose other than described in this manual.
- Do not leave the unit unattended when in operation.
- Any accessible surfaces may become hot during use.
- Do not place the appliance on or near combustible materials, such as a tablecloth or curtain.
- The appliance needs approximately 30 minutes to cool down before safely handling or cleaning.
- Do not cover the air inlets and air outlets when the appliance is working.
- Do not immerse the housing in water or rinse under the tap due to the electrical and heating components.
- Never use the air fryer without the basket in place.
- Keep all ingredients in the basket to prevent any contact with the appliance's heating elements. Do not overfill the basket.
- During hot air frying, hot steam is released through the air outlets. Keep your hands and face at a safe distance from the steam and from the air outlets. Also be careful of hot steam and air when you remove the pan from the appliance.
- Do not touch the cooking chamber, insert, or the inside of the air fryer during and immediately after use, as they get very hot. Only hold the food basket by its handle. Always use oven mitts. Unit is hot!
- Keep all cords away from hot surfaces.
- Keep the appliance and its cords out of the reach of children.

- Do not use any unauthorized person to replace or fix a damaged main cord.
- Do not use the appliance if there is any damage to the plug, cord or other parts.
- Check that the voltage indicated on the appliance fits the voltage for your outlet.
- Do not connect appliance to an external timer switch.
- Immediately unplug the appliance if you see dark smoke coming out of the appliance. Wait for the smoke emission to stop before you remove the pan from the appliance.
- Keep all ingredients in the cooking chamber to prevent contact with the heating elements.
- Do not let any liquid enter the appliance (aside from cooking liquids added to the pan) to prevent electric shock or short-circuiting.
- Do not touch the inside of the appliance while it is operating, as it will be very hot.
- Do not use with an extension cord, it must be plugged into a wall outlet.
- Always unplug the appliance when not in use.
- SAVE THESE INSTRUCTIONS.

PARTS DESCRIPTION

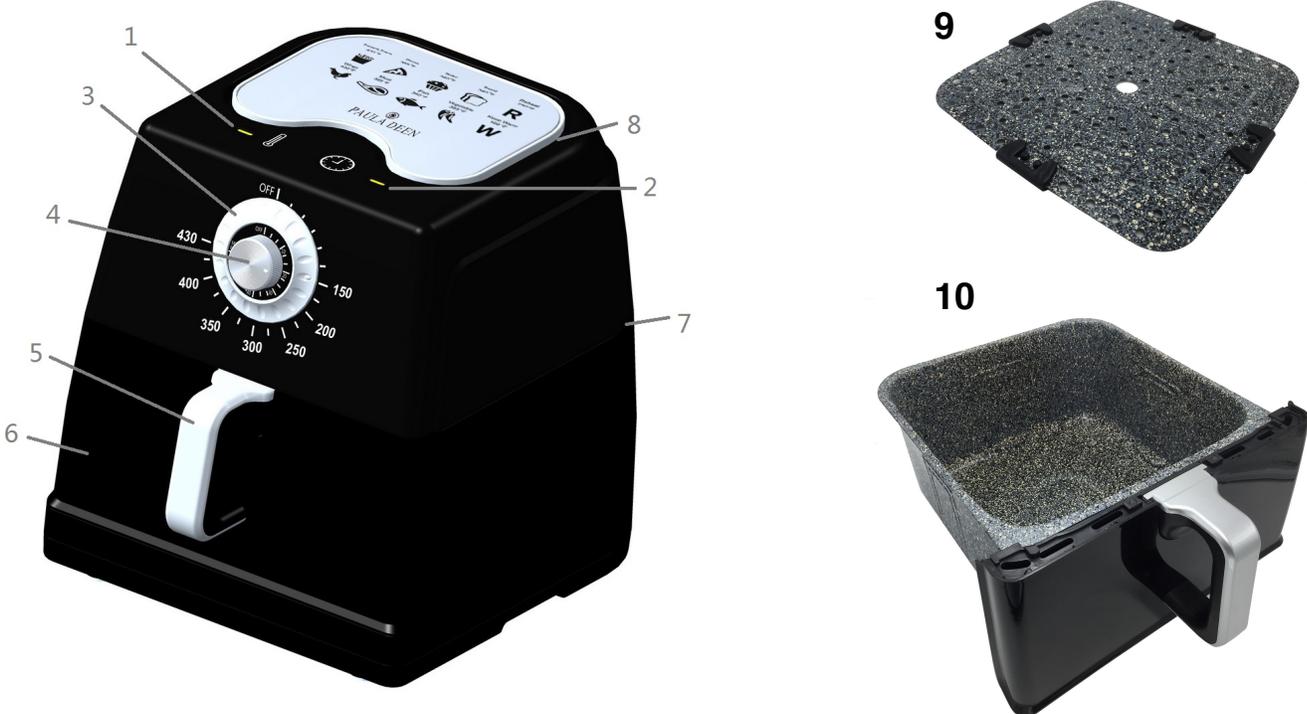

- 1. Temperature Light
- 2. Timer Light
- 3. Temperature Control Knob
- 4. Timer Knob
- 5. Pan Handle
- 6. Cooking Chamber
- 7. Main Body
- 8. Air Inlet
- 9. Cooking Insert
- 10. Cooking Chamber

AUTOMATIC SWITCH OFF

The appliance has a built in timer. It will automatically shut off the appliance when it has counted to zero. You can manually switch off the appliance by turning the timer knob counter-clockwise to zero.

BEFORE FIRST USE

1. Remove all packaging materials, stickers and labels.
2. Clean the cooking chamber and accessories with hot water, dishwashing liquid, and a non-abrasive sponge.
3. Wipe the inside and outside of the appliance with a cloth.

USING THE APPLIANCE

1. Place the appliance on a stable, horizontal and even surface.
2. Remove the cooking chamber from the air fryer and place the cooking insert in the pan.
3. Place the ingredients on top of the cooking insert, if desired spritz with cooking oil for a crispier finish. **NOTE:** Do not over fill the cooking chamber (for amounts, see "Paula's Suggested Cooking Temperatures" chart on page 11), as it may affect the quality of the food.
4. Slide the cooking chamber back into the air fryer. Never use the cooking chamber without the cooking insert in it.
5. Turn the temperature control knob to the proper temperature.
6. Determine the required preparation time for the ingredient.
7. To switch on the appliance, turn the timer knob on to the required preparation time.

8. The red power light and the green heating light will go on; the air fryer quickly begins the cooking process. The timer will start to count down the set preparation time. During the cooking cycle, the green heating light will turn off from time to time. This indicates that the heating element is maintaining the set temperature.

TIP: Add 3 minutes to preparation time if the appliance is cold. If you want, you can also preheat the appliance without any ingredients inside. Turn the timer knob for more than 10 minutes and then turn back to preheat. Then fill the cooking chamber and turn the timer knob to the required preparation time.

CAUTION: Do not touch the cooking chamber during and for 30 minutes after use, because it will be very hot. Hold the cooking chamber **ONLY** by the handle.

9. Some ingredients may require shaking halfway through the preparation time. At the halfway point, pull the cooking chamber out of the appliance by the handle and shake it. Then slide the cooking chamber back into the air fryer.
10. When you hear the timer bell, the set preparation time has elapsed. Pull the cooking chamber out of the appliance and place it on a heat proof surface. **NOTE:** You can also switch off the appliance manually by turning the timer control knob to 0.
11. Check to make sure the ingredients are ready. If the ingredients are not fully cooked, simply slide the cooking chamber back into the appliance and set the time for a few extra minutes.

12. Empty the cooking chamber into a bowl or onto a plate. To remove large or fragile ingredients, lift the ingredients out of the basket using tongs. The cooking chamber and the ingredients are hot after air frying. Depending on the moisture content of the ingredients in the air fryer, steam may escape from the pan.

CLEANING

- Remove the main plug from the wall outlet and let the appliance cool down for at least 30 minutes.
NOTE: Remove the cooking chamber to let the Air Fryer cool before cleaning.
- Clean the appliance after every use. Do not clean the cooking chamber and the inside of the appliance with any metal kitchen utensils or abrasive cleaning materials, as this may damage the non-stick coating of them.
- Wipe the outside of the appliance with a moist cloth.
- Clean the cooking chamber and accessories with hot water, some liquid detergent and a non-abrasive sponge. You can remove any remaining food residue with degreasing liquid.
- Clean the inside of the appliance with a non-abrasive sponge.
- Clean the heating element with a cleaning brush to remove any food residue.

STORAGE

1. Unplug the cord.
2. Make sure all parts are clean and dry.

PAULA'S SUGGESTED COOKING

| Ingredients | Suggested Amount | Temp (°F) | Time (Minutes) | Additional Information |
|---------------------------|--------------------------------|-----------|----------------|--------------------------------|
| <u>Fries</u> | | | | |
| Thin frozen fries | 1 pound | 430 | 15 minutes | Spritz with oil, Shake 2 times |
| Thick frozen fries | 1 pound | 430 | 20 minutes | Spritz with oil, Shake 2 times |
| Potato wedges | 1 pound | 430 | 25 minutes | Spritz with oil, turn once |
| <u>Meat</u> | | | | |
| Hamburger | 1/2 inch thick 4oz. | 385 | 10 minutes | Turn once |
| Steak | 1-1 1/4 inch steak medium rare | 385 | 12- 14 minutes | Turn once |
| Pork Chops | 1 inch boneless pork chops | 385 | 12 minutes | Turn once |
| <u>Poultry</u> | | | | |
| Frozen chicken wings | 10 wings | 340 | 25 minutes | Spritz with oil, Shake 2 times |
| Frozen chicken tenders | 6 tenders | 340 | 15 minutes | Turn once |
| Frozen chicken nuggets | 10 nuggets | 340 | 12 minutes | Shake 2 times |
| <u>Fish</u> | | | | |
| Shrimp | 10 shrimp | 340 | 12 minutes | Spray and turn once |
| Frozen fish fingers | 4 fish fingers | 340 | 12 minutes | Turn once |
| Frozen crab cakes | 4 cakes | 340 | 12 minutes | Shake 2 times |
| <u>Vegetables</u> | | | | |
| Frozen green beans | 2 cups | 380 | 10 minutes | Spritz with oil, Shake 2 times |
| Baked Potato | 2 potatoes | 380 | 45 minutes | |
| Frozen onion rings | 1 pound | 380 | 15 minutes | Spritz with oil, Shake 2 times |
| <u>Baked Goods</u> | | | | |
| Frozen quiche | 6 mini quiche | 295 | 15 minutes | |
| Frozen pretzels | 2-5 ounces | 295 | 6 minutes | Spritz with oil, turn once |
| Frozen cinnamon rolls | 4 rolls | 295 | 15 minutes | |
| <u>Pizza</u> | | | | |
| Frozen thin crust pizza | 1- 6 inch | 340 | 15 minutes | |
| Frozen thick crust pizza | 1- 6 inch | 340 | 20 minutes | |
| Frozen pizza bites | 8 | 340 | 12 minutes | |

Paula's Quick Tips

French Fries
430 °F



Pizza
400 °F



Bake
350 °F



Toast
350 °F



Reheat
250 °F

R

Wings
430 °F



Meat
400 °F



Fish
300 °F



Vegetable
350 °F



Keep Warm
150 °F

W

- Any food that can be cooked in a conventional, convection, microwave or toaster oven can be cooked in your air fryer.
- Smaller ingredients usually require a slightly shorter cooking time than larger ingredients.
- Shaking smaller ingredients halfway during the preparation time optimizes the end result and can help prevent unevenly fried ingredients.
- For a crispy texture, spritz vegetable, olive or non-stick oil over ingredients in the cooking chamber.
- Place a glass, silicone, or metal oven-safe dish in the cooking basket when baking a cake or frying fragile or filled ingredients.
- Frozen foods, such as fries, chicken nuggets and fish sticks can be prepared by following Paula's Suggested Cooking Temperatures on page 11.

Deep Fried Mac and Cheese

Serves 6

Ingredients

3 cups Plain bread crumbs for dredging

Flour, for dredging

4 large eggs, beaten

Oil for spraying

For The Mac N Cheese

1-pound elbow macaroni

2 cups grated cheddar cheese

½ cup sour cream

4 tablespoons butter, cut into pieces

½ teaspoon salt

½ teaspoon pepper

1 cup milk

Preparation

1. Cook macaroni according to package instructions.
2. Drain and rinse with cold water. Let the pasta drain and cool for several minutes.
3. Heat a Dutch oven with the milk and butter over medium heat.
4. Whisk in the sour cream till smooth, then stir in the cheeses stirring till melted and smooth.
5. Stir in the drained macaroni. Pour into a shallow baking dish and chill for at least 2 hours.
6. Cut macaroni and cheese into squares.
7. Dredge each Cheesy Mac square in flour, then egg, and then bread crumbs. Roll to coat each square.
8. Place each square on a baking pan lined with parchment paper. Spray tops of squares with oil.
9. Working in batches place in the cooking chamber careful not to over crowd, (6-8 depending on the size.)
10. Close chamber; set temperature for 400 degrees, and timer for 5 minutes.
11. When cook time is complete, open chamber and turn squares; spray again with oil and close basket.
12. Set timer for 5 minutes. When cook time is complete, open chamber and remove squares to a serving platter to keep warm.
13. Repeat with remaining squares; serve warm.

Fried Green Tomatoes with Vidalia Onion Relish

Serves 2-4

Fried Green Tomato Ingredients

1 large firm green tomato, cut into ¼-inch slices
1 cup buttermilk
1 cup all-purpose flour
Parchment Paper

Vidalia Relish Ingredients

2 white onions diced
½ cup mayonnaise
½ cup rice wine vinegar
2 tablespoon brown sugar
2 tablespoon fresh chives, chopped

Vidalia Relish Preparation

1. Mix all ingredients together in a bowl.
2. Cover with plastic wrap and let marinade for a few hours.

Fried Green Tomato Preparation

1. Slice the tomatoes ¼ inch thick.
2. Lay them out in a shallow baking pan and sprinkle with salt.
3. Place slices in a colander and allow time for the salt to pull the water out of the tomatoes, approximately 30 minutes.
4. Working, in batches of 4, dip tomatoes into the buttermilk, then dredge them into the flour with a dash of pepper.
5. Line air fryer with parchment paper.
6. Spray slices with oil on each side and place in the air fryer basket.
7. Set temperature to 400 degrees, and time for 5 minutes. Close chamber.
8. When cook time is complete, open chamber turn slices over, spray with oil; close chamber.
9. Set timer for 3 minutes.
10. When cook time is complete, open chamber turn slices again; close chamber.
11. Set timer for 2 minutes; set aside and keep warm.
12. Repeat with remaining slices.
13. Serve hot with relish on the side.

Naked Hot Chicken Wings

Serves 4

Ingredients

2-pounds chicken wings, cut at the joint to yield a wingette and a drumette from each wing

1 teaspoon Kosher Salt

1/8 teaspoon Cayenne pepper

2 tablespoons peanut oil

1 stick butter

5oz. Paula Deen Hot Sauce (sold separately)

Preparation

1. In a small saucepan over a medium heat, heat butter and hot sauce just until butter melts; keep warm on stovetop.
2. Wash wings thoroughly, pat dry and place in a bowl. Add oil, salt and cayenne pepper.
3. Thoroughly coat the wings and working in batches of about 8 wings, place them in the chamber; close chamber.
4. Set temperature to 400 degrees, and timer for 25 minutes. Shake occasionally and spritz with oil once during the cooking time.
5. When cook time is complete, open chamber and toss the fried chicken in the buffalo sauce and remove with a slotted spoon.
6. Repeat with the remaining chicken.

Southern Fried Chicken

Serves 2-4

Ingredients

Paula Deen House Seasoning (sold separately or see recipe)

2 ½ lbs. chicken, cut into pieces

2 cups self-rising flour

1 cup hot sauce

3 large eggs

Preparation

1. In a medium sized bowl, beat the eggs together with the hot sauce.
2. Season the chicken well with the House Seasoning.
3. Working in batches of 2-3, dip the seasoned chicken in the egg, then coat well with flour.
4. Place on a baking tray lined with parchment paper.
5. Spray the top of the chicken pieces with oil, set into chamber.
6. Spray the chicken pieces again; close chamber.
7. Set temperature for 350 degrees, and timer for 15 minutes.
8. When cook time is complete, turn the chicken, and spray again; close chamber.
9. Set timer for 10 minutes. When cook time is complete, open chamber, turn chicken spray with oil again; close chamber.
10. Increase the temperature to 400 degrees, Set timer for 7 minutes.
11. When cook time is complete, and chicken has reached an internal temperature of 165 degrees, remove to a serving platter and cover to keep warm.
12. Repeat with remaining chicken.

Fried Pork Chops with Tomato Gravy

Serves 2

Ingredients

2 bone-in center cut pork chops, 1-inch thick, ½ pound each
¼ teaspoon garlic powder
Oil for spraying
4 tablespoons olive oil
4 tablespoons unsalted butter
2 tablespoons finely chopped onion
¼ cup all-purpose flour
1 ½ cups whole milk
1 ½ cups chicken broth or water
1 can (14 ½ oz.) tomatoes, drained

Preparation

1. Lightly sprinkle the chops on both sides with salt, pepper and garlic powder.
2. Spray each chop on both sides and place in chamber; close chamber.
3. Set temperature for 400 degrees, and timer for 10 minutes.
4. When cook time is complete, open the basket, turn the chops and spray again.
5. Set timer for 10 additional minutes.
6. While chops are cooking, add butter to a small skillet and melt.
7. Add onions and cook, stirring until softened, about 5 minutes.
8. Go ahead and reduce the heat if the onions start to brown too quickly.
9. Sprinkle the flour over the onions and cook, stirring, 1 minute.
10. Slowly whisk in the milk, then the broth or water. Simmer mixture until thickened, about 5 minutes.
11. Whisk in the tomatoes, ½ teaspoon salt, and ¼ teaspoon black pepper.
12. Spoon the sauce over pork chops and serve.

Bacon Wrapped Shrimp

Serves 2-4

Ingredients

16 jumbo shrimp, butterflied
16 chunks Monterey Jack cheese
1 serrano pepper, thinly sliced
16 bacon strips, cooked
Toothpicks
Barbecue sauce

Preparation

1. Place shrimp, seam-side down, on a cutting board.
2. Stuff 1 shrimp with a piece of cheese and pepper; close shrimp, wrap it with a piece of bacon and secure with a toothpick.
3. Repeat last step again with remaining shrimp.
4. Place shrimp in the air fryer 5 at a time. Spray with oil.
5. Close chamber; set temperature to 400 degrees. Set timer for 5 minutes.
6. Shake chamber several times.
7. If the bacon is not cooked crispy enough spray with oil and cook for 2 minutes longer.
8. Serve with barbecue sauce for dipping.

Fried Catfish

Serves 2-4

Ingredients

4 catfish filets
Salt
1 cup buttermilk
2 tablespoons hot sauce
Oil for spraying
1 cup flour
1 cup yellow corn meal
1 teaspoon crab boil seasoning
1 teaspoon garlic powder

Preparation

1. Season the catfish fillets on both sides with salt and pepper.
2. Mix together buttermilk and hot sauce in an 8x8 casserole dish.
3. Add cat fish fillets, making sure they are completely covered by the liquid.
4. Let soak while you prepare the other ingredients.
5. Prepare a baking sheet with parchment paper.
6. Whisk together the flour, cornmeal, crab seasoning, garlic powder in another casserole dish.
7. Remove the catfish from the buttermilk, letting excess drip off, and dredge on both sides with the cornmeal mixture, matting it down to help adhere.
8. Place coated fillets on baking pan and spray with oil on both sides, sprinkle with a little more cornmeal mixture and place in refrigerator to set up for 30 minutes.
9. Place 2 fillets in the chamber spray well with oil; close basket.
10. Set temperature for 400 degrees, and timer for 10 minutes.
11. When cook time is complete, open chamber, gently turn fillets and spray with oil; close chamber.
12. Set timer for 5 additional minutes, or until golden brown and cooked through.
13. Repeat with remaining fillets.
14. Serve warm.

French Fries

Serves 2-4

Ingredients

2 Russet Potatoes, peeled and cut into fries

Oil for frying

Sea salt

Preparation

1. Soak cut potatoes in a bowl of ice water for at least 15 minutes.
2. Pat the potatoes dry with paper towels.
3. Place fries in chamber, in a single layer, not crowding; close chamber.
4. Set temperature for 320 degrees, and timer for 10 minutes, (this is to remove moisture from the fries).
5. When cook time is complete, spray well with oil, and sprinkle with salt; close chamber.
6. Set temperature to 400 degrees and set timer for 10 minutes more.
7. Shake occasionally, adding more spray if you like.

Perfect Sweet Potato Fries

Serves 2

Ingredients

- 1 sweet potato, peeled and washed
- 1 tablespoon extra- virgin olive oil
- ½ teaspoon kosher salt
- ½ teaspoon Cajun seasoning
- 1 teaspoon maple syrup

Preparation

1. Cut potato into ¾ inch matchsticks.
2. In a shallow glass baking dish toss the potatoes with remaining ingredients.
3. Lay potatoes in the chamber, careful not to overlap.
4. Spray well with oil.
5. Set temperature to 400 degrees, set timer for 5 minutes. Shaking chamber occasionally.
6. After 5 minutes, turn all potatoes and set for 5 minutes longer.
7. Remove fries from chamber and allow to cool slightly.

Fried Cherry Walnut Pies

Filling Ingredients:

- 1 cup granulated sugar
- 2/3 cup light corn syrup
- 1/3 cup butter, melted
- 2 large eggs
- 1 ½ cups chopped walnuts
- 1 teaspoon vanilla extract
- 1/8 teaspoon salt
- ½ cup finely chopped dried cherries

Crust Ingredients

- 2 pre-made pie crusts
- 1 egg, beaten
- Flour for dusting
- Confectioner's sugar, for garnish
- Oil for spraying

Preparation

1. In a cold saucepan, combine the granulated sugar, corn syrup, melted butter and eggs.
2. Stir in walnuts, vanilla and salt. Bring to a boil over medium heat.
3. Reduce the heat, and simmer for 10 minutes. Stir in the cherries. Cool for 20 minutes.
4. On a lightly floured surface, unroll 1 pie crust. Cut circles from the dough using a 4-inch cutter.
5. Re-roll and cut circles from the dough scraps. Stack the dough circles between pieces of waxed paper.
6. Repeat the procedure with the remaining pie crusts.
7. Place 1 circle on a flat surface and lightly brush the edges of the crust with the beaten egg yolk.
8. Place 1 heaping tablespoon of walnut mixture in the center of the circle. Fold the dough over the filling, pressing the edges to seal.
9. Repeat with the remaining rounds and walnut mixture.
10. Working in batches of 2, spray each side of pies and place in the chamber; close chamber.
11. Set temperature for 400 degrees, and timer for 5 minutes. When cook time is complete, open chamber, turn pies and spray again with oil.
12. Set timer for 3 minutes. When cook time is complete, remove pies to a platter and lightly dust immediately with confectioner's sugar.
13. Repeat with remaining pies.

Fried Peach Pie

Serves 4

Ingredients

1 can 8oz. can crescent dinner roll dough
4 tablespoon peach pie filling
¼ cup ready- to- use vanilla frosting
Oil for spraying

Preparation

1. Lay out 4 triangles on a work surface and place 1 tablespoon of the peach pie filling in the center of each triangle.
2. Top each one with the other 4 triangles and crimp edges with a fork to seal.
3. Spray oil on 2 pies, on both sides and place in the chamber; close chamber.
4. Set temperature for 400 degrees, and timer for 5 minutes. When cook time is complete, open basket and turn pies and spray with oil; close chamber.
5. Meanwhile, put frosting in a small microwaveable bowl, and microwave for 25 seconds.
6. When cook time is complete, open chamber, remove pies to a serving platter and drizzle with frosting.
7. Repeat with remaining 2 pies.

LIMITED ONE YEAR WARRANTY

This warranty covers all defects in workmanship or materials in the mechanical and electrical parts arising under normal use and care in this product for a period of 12 months from the date of purchase provided you are able to present a valid proof-of-purchase. A valid proof-of-purchase is a receipt specifying item, date purchased, and cost of item. A gift receipt showing item and date of purchase is an acceptable proof-of-purchase. Product is intended for household use only. Any commercial use voids the warranty.

This warranty covers the original retail purchaser or gift recipient. During the applicable warranty period within normal household use, we will repair or replace, at our discretion, any mechanical or electrical part which proves defective, or replace unit with a comparable model. Shipping and handling costs are not included for warranty replacements and are the responsibility of the customer.

To obtain service under the terms of this warranty, send an email to customercare@alliedrich.net or call our customer care department at 312-526-3760 (Monday- Friday 10:00AM-4:00PM CST). Please provide the model number listed on the bottom of this page when contacting us.

THIS LIMITED WARRANTY COVERS UNITS PURCHASED AND USED WITHIN THE UNITED STATES AND DOES NOT COVER:

- Damages from improper installation.
- Damages in transit.
- Defects other than manufacturing defects.
- Damages from misuse, abuse, accident, alteration, lack of proper care and maintenance, or incorrect current or voltage.
- Damage from service by other than authorized dealer or service center.
- Shipping and handling costs.
- This warranty gives you special legal rights and you may also have other rights to which you are entitled which may vary from state to state.

Manufacturer does not assume responsibility for loss or damage for return shipment. We recommend that you keep your original packaging should you require repair service. Before returning product please contact our customer care department for return authorization. When returning product for repair please include your full name, return address, email and daytime phone number. Also include a brief description of the problem you are experiencing and a copy of your sales receipt or other proof of purchase in order to validate warranty status.

MODEL PDAF8TX-2

