



**ELECTRIC KNIFE
INSTRUCTION MANUAL
MODEL WT-98-1**


IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed including the following:

1. This product is for household use only. Before plugging in ensure that your electricity supply is the same as shown on the underside of the appliance.
2. To reduce the risk of personal injury or damage to property while using electrical appliances, basic safety precautions should always be followed.
3. Read all instructions before using the appliance.
4. To protect against electric shock, never put the power handle, cord or plug in water or other liquids. Do not operate knife in water or under running water.
5. Unplug from the power outlet when not in use, when cleaning and when changing blades.
6. Avoid contact with moving parts.
7. Do not operate with damaged cord or plug.
8. The use of attachments not recommended or sold by the appliance manufacturer may cause fire, electric shock or injury.
9. Only use the appliance for its intended purpose, such as cutting meats, thick bread and cheese. Do not attempt to slice bones, frozen or other hard foods.
10. Never use excessive pressure when slicing food.
11. Do not use the same blades on raw and cooked meat without washing them thoroughly to remove contaminants.
12. Do not let the cord hang over the edge of the table or counter, or touch hot surfaces.
13. Blades are sharp - handle with care.
14. Always handle and store blades with the cutting edge turned away from you.
15. This appliance must not be used by children.
16. Avoid contact with moving parts. Keep hands, hair, clothing and utensils away from moving blades during use to prevent injury and/or damage to the knife.
17. Do not place heavy objects on the cable or heat sources close to them.
18. Before carrying out any cleaning or maintenance, unplug the appliance from the power outlet.
19. Do not use aerosol sprays (i.e. insecticides, hairspray, etc.) near the appliance, as it may cause damage to the housing.
20. Do not use this appliance connected to a programmer, timer, remote control system or any other device that can switch it on automatically.
21. Do not use in damaged power sockets or with damaged cables.
22. Do not disconnect the plug by pulling on the cord. Hold the plug firmly when you pull it out from the power supply to avoid electric shock, short circuit or fire.
23. Do not use this appliance near flammable objects.
24. Do not insert objects through the slots of the unit.
25. It is absolutely prohibited to disassemble or repair the unit as this may cause electric shock or personal injury and would void the warranty.
26. Before connecting to the power outlet, make sure the voltage is correct as stated on the label of the product and that the installation complies with current regulations.
27. Do not touch the power connection with wet hands.
28. Always disconnect the unit from the power outlet when left unattended and before you mount it on the storage rack.
29. Turn off the appliance before unplugging the power cord.
30. The maximum continuous use is five minutes.
31. Only handle the blades by the plastic guards or by the blunt edge of the knife.
32. The blades are extremely sharp, keep fingers away from the cutting edges.
33. Keep the plastic sheaths on the blades when not in use.



SAVE THESE INSTRUCTIONS.

Parts Identification

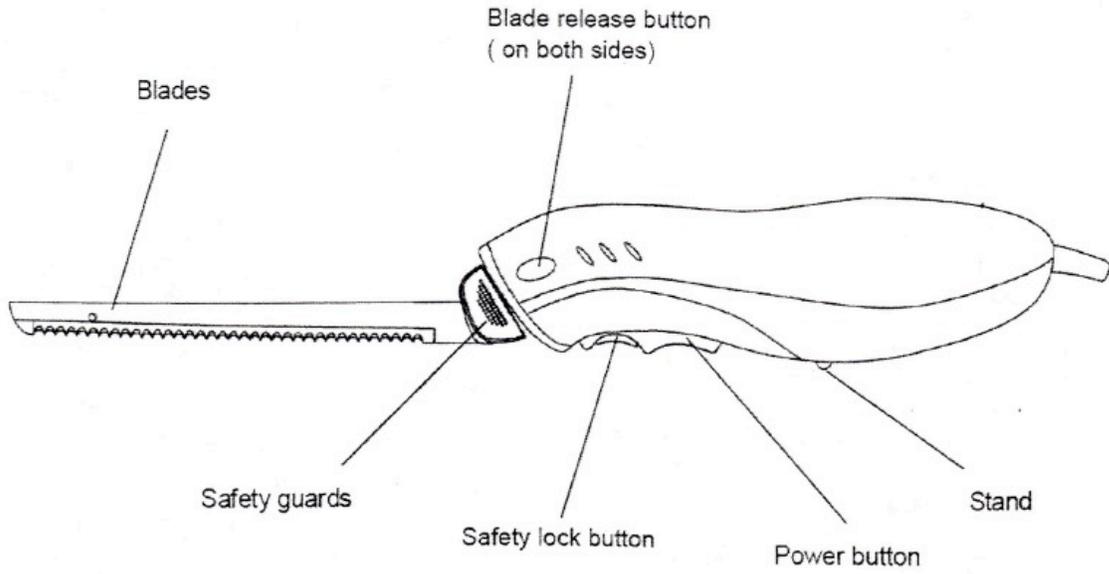

Rivet and keyhole slot

Carving Fork

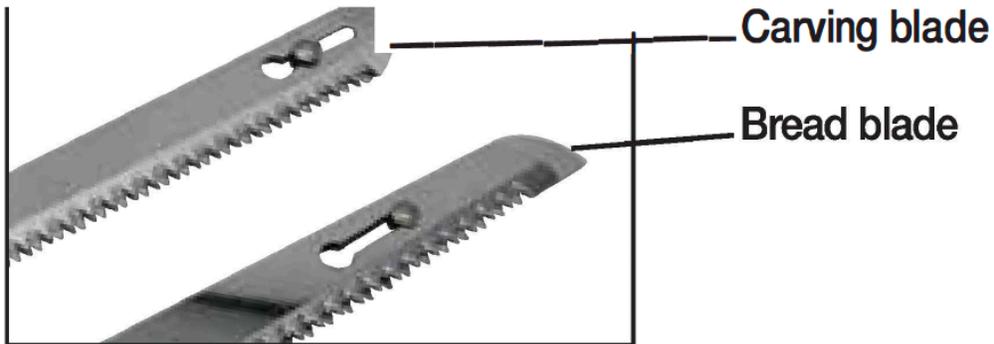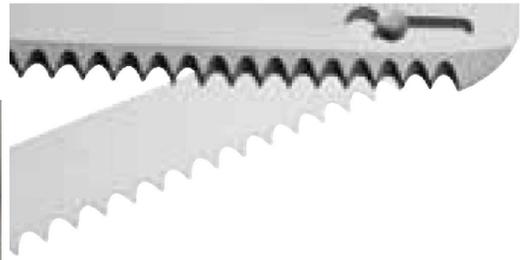

Blade Assembly

To Assemble Blades:

1. Hold blades by the non-serrated ends with the plastic guards on either side. Make sure that the serrated edges are on the same side. Slide the rivet of the blade into the keyhole slot on the other blade.

To Assemble Blades into Power Handle:

1. Make sure the knife is unplugged. Hold the assembled blades by the plastic guard in one hand (serrated edges facing down) and the motor unit in the other hand with the power button in the uppermost position.
2. Carefully insert the blades (serrated edges facing down) into the slot on the power handle with buttons facing upwards and push gently until they click securely.

To Disassemble Blades from Power Handle:

1. Unplug the knife.
2. Holding the plastic guards, press the blade release button on the power handle body.
3. Pull blades away from the power handle body.
4. Separate the blades by sliding the rivets from one blade out of the keyhole slot of the other blade.

Before First Use

1. Remove all packaging materials.
2. Clean the blades with dishwashing liquid, and a non-abrasive sponge. Use caution as the blades will be extremely sharp.
3. Wipe the inside and outside of the appliance with a cloth.

Using the Appliance

1. Plug into power outlet.
2. Ensure that the product to be carved is secure, for example, by using a carving fork.
3. Press and hold down the on/off switch.
4. Guide the blades through the food ensuring body parts, clothing and utensils are away from the moving blades. It is not necessary to use a sawing motion or excessive pressure.
5. To stop the blades, release the on/off button.

NOTE: Your electric knife is designed to cut through "ready to roast" joints, but can also be used to cut thick bread, cheese and meats with ease. If the blade release button is accidentally pushed during operation, the blades will disengage. As a result, the knife may stall or will not cut properly. Be sure to position your hand behind the blade release button during operation.

Cleaning

1. Ensure the power outlet is switched off, then unplug the product before removing the blades and / or cleaning.
2. Remove the blades.
3. Separate the blades by sliding the rivet from one blade out of the keyhole slot of the other blade.
4. Carefully wash the blades in warm soapy water.
5. Dry thoroughly and carefully slide the plastic safety sheath over the blades.
6. Wipe the power handle with a damp cloth. Never immerse the power handle in water or any other liquid.
7. Clean the carving fork with warm soapy water and dry thoroughly.

Storage

1. Make sure all parts are clean and dry.
2. Store inside the case when finished drying.

Tips for Use:

- Carve on a wooden board. Glass or plastic cutting boards may be scratched by the knives.
- Use a carving fork to hold the food securely. Before carving cooked meats, allow the meat to stand at least 15 minutes after removing from the oven allowing the juices to set. This makes it easier to slice and offers a cleaner cut.
- Do not cut through hard objects, such as bones or frozen foods as blades may become damaged or may break.
- The carving blade can be used for multiple tasks, such as carving turkey, chicken, ham or roasts, as well as vegetables like eggplants or squashes, and for fruits like pineapple or melons.
- The slicing blade is made specifically for breads and loaves. It can be used to slice fresh breads, bagels, sandwich buns, meatloaves, cake loaves like banana breads, etc.
- The key to carving turkey or chicken thighs, legs and wings is to cut through the joints and not the bones, and pulling at the parts while cutting to loosen the joint.
- For best results when cutting through thick bread, hold the knife at a slight angle while cutting.
- Once you have cut through the crust, finish slicing the bread with the knife blade parallel with the bread.
- When cutting meat, it is recommended to tilt the meat during the final cutting movement to prevent cutting through the chopping board.

LIMITED ONE YEAR WARRANTY

This warranty covers defects in the mechanical and electrical parts, arising under normal use and care of this product for a period of 12 months from the date of purchase. A valid proof-of-purchase is a receipt specifying item, date purchased, and cost of item from an authorized reseller. A gift receipt showing item and date of purchase is an acceptable proof-of-purchase. Product is intended for household use only. Any commercial use voids the warranty.

This warranty covers the original retail purchaser or gift recipient. During the applicable warranty period within normal household use, we will replace, at our discretion, any mechanical or electrical part which proves defective, or replace unit with a comparable model. Product must be received for inspection within the 12 month period of your warranty. Shipping and handling costs are not included for warranty inspections and are the responsibility of the customer.

To obtain service under the terms of this warranty, send an email to customercare@alliedrich.net or call Monday- Friday 11AM CST- 4PM CST at 312-526-3760. Please provide a valid proof of purchase, email, reason for request and phone number.

THIS LIMITED WARRANTY COVERS UNITS PURCHASED AND USED WITHIN THE UNITED STATES AND DOES NOT COVER:

- Damages from improper installation.
- Damages in transit.
- Defects other than manufacturing defects. Normal wear and tear.
- Damages from misuse, abuse, accident, alteration, lack of proper care and cleaning, and maintenance, or incorrect electrical current or voltage.
- Damage from attempted service by any party.
- Shipping and handling costs.
- This warranty gives you special legal rights and you may also have other rights to which you are entitled which may vary from state to state.

Manufacturer does not assume responsibility for loss or damage for return shipment. We recommend that you keep your original packaging should you require warranty service. Before returning product please contact our customer care department for return authorization at customercare@alliedrich.net. When returning product for inspection please include your full name, return address, email and daytime phone number. Also include a brief description of the problem you are experiencing and a copy of your valid proof of purchase in order to validate warranty status.

Model WT-98-1