

1 YEAR LIMITED WARRANTY

Course Housewares, LLC warrants this product to be free from manufacturer defect for up to 1 year from the original date of purchase. If a defect is found to exist, Course Housewares will, at its option, either repair or replace the product or the defective component, including labor. Replacement will be made with new or rebuilt product or components. This warranty does NOT cover (a) ordinary wear and tear (such as scratches or stains), (b) impact damage or breakage, (c) heat discoloration, minor imperfections and slight color variations which are a normal part of the craftsmanship, (d) improper cleaning methods, or (e) any unit that has been tampered with, (f) damages incurred through improper use and care and (g) faulty packaging by you or mishandling by any common carrier. Failure to follow the accompanying Care and Use instructions or commercial use will void this warranty.

Course Housewares' sole obligation and your exclusive remedy under this warranty is limited to repair or replacement, at its option, of the defective product. You will be responsible for any shipping and handling fees. Products returned to us that are not found to be defective in material or workmanship will be returned to you. If your particular product is found defective but is no longer available and cannot be repaired, a comparable product, at our discretion, will be sent as a replacement. Course Housewares cannot guarantee a replacement of the same color as your original purchase. This warranty extends only to the product's original purchaser, US residents only and does not cover damage caused by improper use or accidental damage.

COURSE HOUSEWARES, LLC MAKES NO OTHER WARRANTIES, EITHER EXPRESSED OR IMPLIED, REGARDING THE PRODUCT OR RELATING TO ITS QUALITY, PERFORMANCE, MERCHANTABILITY, OR FITNESS FOR A PARTICULAR PURPOSE. COURSE HOUSEWARES, LLC SHALL NOT BE LIABLE FOR INDIRECT, CONSEQUENTIAL OR SPECIAL DAMAGES WHETHER A CLAIM IS BASED ON CONTRACT, TORT, WARRANTY OR OTHERWISE, IN NO EVENT WILL LIABILITY EXCEED THE ORIGINAL PURCHASE PRICE OF THE PRODUCT. THE DURATION OF ANY IMPLIED WARRANTY WHATSOEVER, INCLUDING BUT NOT LIMITED TO THE WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED TO THE DURATION OF THE EXPRESS WARRANTY PROVIDED HEREIN. COURSE HOUSEWARES SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES WHATSOEVER.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. This warranty gives you specific legal rights, and you may have other legal rights, which vary from State to State.


To process a claim:

Do not return the product to the retailer from which it was purchased. Your retailer has no liability for this warranty. Please contact the Course Housewares customer service department for assistance and to ensure the fastest possible resolution to the problem. Please have your purchase information available to speed this process.

OR


Send your name, physical address, phone number, original purchase receipt and the safely packaged item prepaid to:

Course Housewares, LLC
1715 Lake Drive West
Chanhassen, MN 55317
(866) 325-1659 or Email: askcourse@course-h.com
Return shipping and handling charges may apply.
MADE IN CHINA
MODEL: B419824

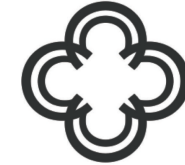

COOK'S COMPANION[®]

 H2 Sport Bottle

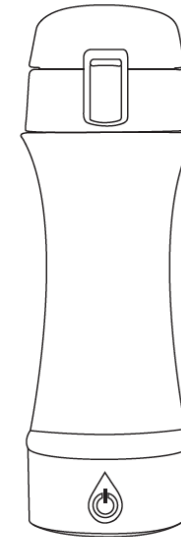




Thank you for purchasing the H2 Sport Bottle. Your item will perform best when used as intended. To ensure the best performance of your product, please consistently follow these instructions.

YOUR H2 SPORT BOTTLE


- ◆ Before using your H2 Sport Bottle, it is important to understand what is included and how each part works. Please review the parts below and also reference this page for any questions while reading through your instructions.

INCLUDED:

1- H2 Sport Bottle

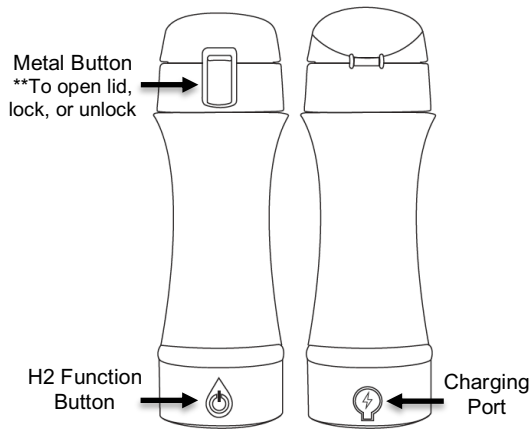

1- USB Charging Cord

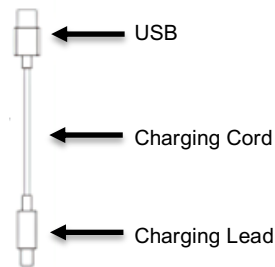

GETTING STARTED


- ◆ Before using, remove any labels and wash and dry the body.
- ◆ We recommend charging your H2 Sport Bottle prior to the first use. To charge, follow the instructions listed below in "Charging Your H2 Sport Bottle".

CHARGING YOUR H2 SPORT BOTTLE


- ◆ To charge, first ensure the interior of the H2 Sport Bottle is empty and the exterior is clean and completely dry.
- ◆ Do not charge your unit with water inside the bottle.
- ◆ Uncover the charging port on the base of the Sport Bottle and plug in the charging lead into the port. Please note: the cover to the charging port is in place to keep dirt, debris and water from entering the charging port and causing possible damage to the Sport Bottle. The cover fits snugly over the port and can take some effort to open. Tip: to remove the cover more easily to obtain access to the charging port, carefully take the circular tip of the Charging Lead and push the cover downward and to the side. This will help loosen the cover from the port.
- ◆ Plug the USB end of the charging cord into any USB device or USB wall charger (not provided).
- ◆ When charging, you will notice a red light coming from the inside of the base indicating that the bottle is charging. A fully depleted battery takes approximately 2-3 hours to reach a complete charge.
- ◆ The unit is fully charged when the red light changes to a green light.
- ◆ When charging is complete, unplug both ends of the charging cord and cover the charging port.
- ◆ Once the unit is fully charged, your H2 Sport Bottle should last approximately 10 cycles before needing to charge again.
- ◆ Your battery will need to be recharged if you do not receive a beep, blue light, or the blue light is very dim when hitting the H2 function button.

ASSEMBLING YOUR H2 SPORT BOTTLE

- ◆ The base of the H2 Sport bottle connects to the wider end of the bottle body, and the lid goes onto the narrower end. Note: the base/lid will not tighten onto the body if you are connecting it to the wrong end.
- ◆ Turn the lid counterclockwise to loosen and separate from the body.
- ◆ Re-attach the lid by placing it back on top of the body and rotating clockwise until the lid is snug.

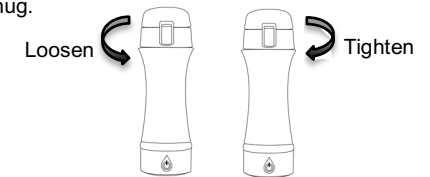

- ◆ When the lid is removed, you may fill the body with any non-flavored tap, pure, or mineral water to the desired amount. It is suggested to only fill the bottle up to 1/2" from the top rim.
- ◆ Your sport lid has a lock feature. To lock the lid and prevent it from opening, slide the metal button downwards to the "off" position. To unlock and open the lid, slide the metal button upwards to the "on" position. You may now press the button and the lid will open.

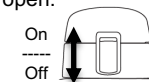

OPERATING THE H2 SPORT BOTTLE

- ◆ Place the base downward with the filled body above it as shown below.



- ◆ To activate the hydrogen generation, simply press the H2 function button. The base will beep and a blue light will appear signaling that the H2 Sport Bottle is generating hydrogen.
- ◆ The hydrogen generation will operate for 3 minutes with the blue light on.
- ◆ When the hydrogen generation cycle is complete, the base will beep 3 times rapidly and the blue light will turn off. Please note: If you would like an increased hydrogen level, you may immediately push the H2 function button again for another 3-minute cycle.
- ◆ Enjoy the hydrogen water immediately, as the hydrogen will begin to slowly dissipate as it sits. In order to consume the most hydrogen rich water, it is recommended to drink the water within 1 hour of completing the cycle. If you are unable to consume the hydrogen water within 1 hour, simply repeat the hydrogen generating process by pressing the H2 function button.

Please Note: You may notice a bubbling or cloudy effect during the hydrogen generation. This effect is normal and varies due to different water qualities and environmental factors. The amount of bubbles/cloudiness is not an indicator of the amount of hydrogen being generated.

Hydrogen is an odorless/tasteless gas; however, depending on the water supply used, you may experience differences in water taste and smell.

CLEANING THE H2 SPORT BOTTLE AND LID

- ◆ For best results, fill the H2 Sport Bottle with warm water not exceeding 125° F and connect the base onto the body per the above instructions. Shake for 1 minute. Then, pour out contents and repeat if necessary.
- ◆ The base of the H2 Sport Bottle is not dishwasher safe and the electrolysis plate should only be cleaned when attached to the body, as described above.
- ◆ While the body is dishwasher safe, hand washing with warm water is recommended.
- ◆ Your lid is dishwasher safe (top rack only), however handwashing with warm, soapy water is recommended and will prolong the life of your item.
- ◆ To deep clean, pour white vinegar into the H2 Sport bottle. Replace the lid and let soak for approximately 2 hours. **Do not run the electrolysis cycle with vinegar in the bottle.** After the 2 hours, carefully shake the bottle for 2 minutes. Open the lid and pour out the white vinegar. Rinse well with warm water.

COMPATIBILITY

- ◆ The H2 Sport Bottle requires a voltage of 5V / 4W. Make sure your power source is compatible before using your product.
- ◆ To avoid electrical shock or damage to the device, do not submerge or soak the base. Only the electrolysis plate can be submerged in water, as this is the portion is exposed inside the H2 Sport Bottle.
- ◆ The included charging cord should not be used with any other device besides your H2 Sport Bottle.

WARNINGS:

- ◆ Do not place any part of your device in the microwave or in/on any other heat source.
- ◆ Do not place any part of the H2 Sport Bottle directly in the refrigerator or freezer at any time.
- ◆ Follow all Care & Use instructions before using your device.
- ◆ Never submerge the base of the H2 Sport Bottle in water to avoid electrical shock and damage to the device.
- ◆ Always make sure your device is placed in a dry area.
- ◆ Never place any other fluid or substance in the H2 Sport Bottle, unless performing deep clean. Only non-flavored household drinking water, pure water, mineral or carbonated water should be in the bottle when running the electrolysis process. Using any other substance may damage the H2 Sport Bottle and will not be covered by warranty.
- ◆ Never place your H2 Sport Bottle base in the dishwasher.
- ◆ Please refer to the cleaning section of this booklet for instructions on how to properly clean your device.
- ◆ Always store in a dry area away from other appliances.
- ◆ Keep away from pets and children at all times.
- ◆ Do not use the H2 Sport Bottle if any part is cracked, broken, or malfunctions. Discontinue use and contact Customer Service at 1-866-325-1659 for further instructions.
- ◆ Never attempt to use the H2 Sport Bottle on any function without water in the bottle.
- ◆ Always ensure the lid and base are secure before using any function.
- ◆ Do not charge your unit with water inside the bottle.