



**ELECTRIC JUICER
INSTRUCTION MANUAL
MODEL GS403YCT**


IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should be followed as follows:

- Read all the instructions.
- Intended for household use only.
- Do not use the appliance for anything other than intended use.
- Do not operate this unit in the presence of explosives and/or flammable fumes.
- Remove the unit and the instruction manual from the box and remove all packing materials.
- Do not leave the appliance unattended during operation. Close supervision is necessary when any appliance is used by or near children to avoid injury to themselves or others.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Do not place the unit on or near gas or electric cooktops or in a heated oven to avoid damage.
- Use only replacement parts provided by the manufacturer.
- To protect against electrical shock, do not immerse power cord, plugs, or the whole unit in water or any other liquid.
- Always unplug from the wall outlet first.
- The use of an extension cord is not recommended.

- Place the unit on a level surface away from walls and cupboards. Do not let the cord hang over the edge of a table or counter, or come into contact with hot surfaces.
- Unplug the unit when not in use and before cleaning.
- Make sure the unit is unplugged before moving the unit.
- Keep hands and utensils out of the juicer while in use to prevent personal injury or damage to the unit.
- Never use the juicer for longer than specified (10-15 minutes) to avoid damage to the motor.
- Avoid contact with all moving parts.
- Do not use outdoors.
- SAVE THESE INSTRUCTIONS.

PARTS IDENTIFICATION

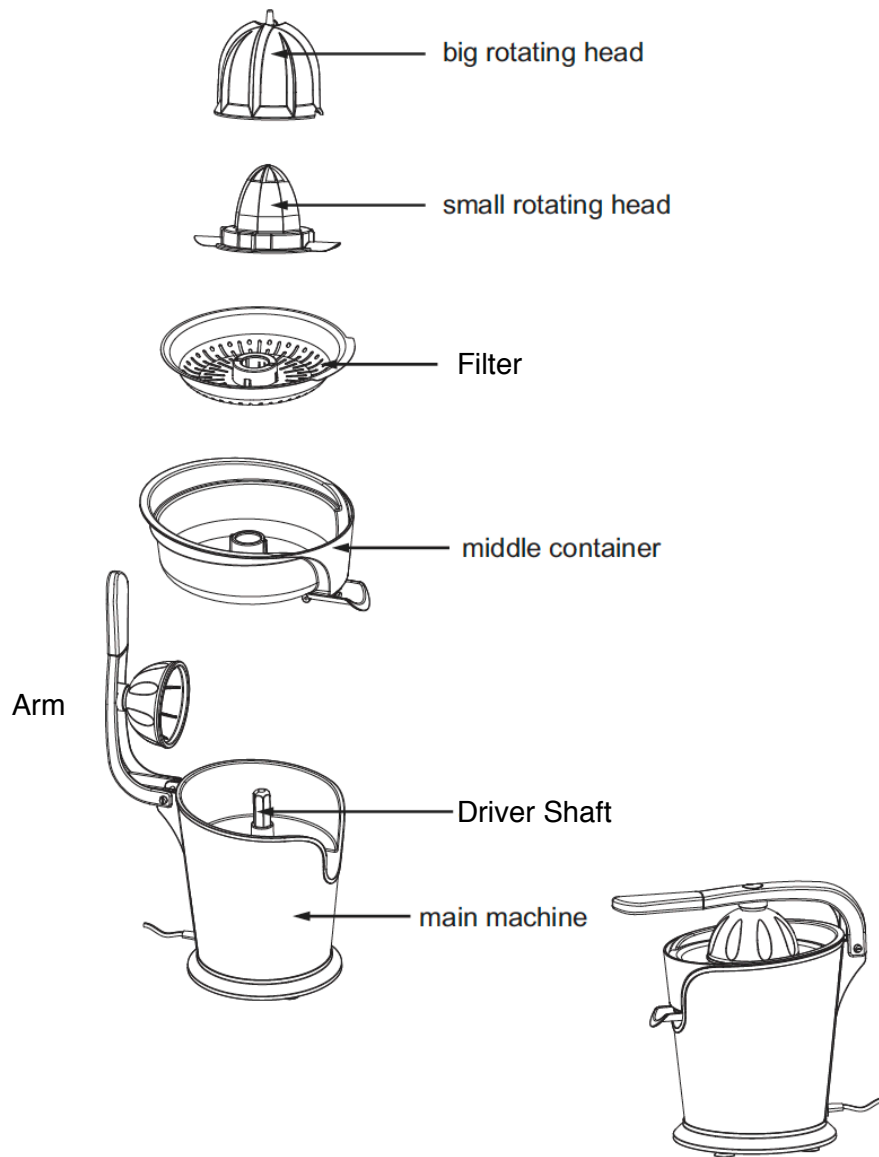

BEFORE FIRST USE

1. Remove all packaging materials.
2. See page 6 for care instructions and clean before use.
3. Wipe the inside and outside of the appliance with a cloth.

USING THE APPLIANCE

1. Select the correct rotating head size, the big for fruits such as oranges or grapefruit and the small for fruits such as lemons or limes. For using the large rotating head, first place the small on the driver shaft then place the big on top of that.
2. Cut a citrus fruit in half and press the cut end of one half of the fruit onto the rotating head then press down using the arm. Take care not to use too much pressure as this can stop the motor.
3. If the juice is desired to be collected, press the spout upwards to close it. If it is desired to have the juice directly poured into a cup, press the spout downwards.
4. The juicer will automatically begin working after pressure is applied, when pressure is reduced the unit will stop working.
5. To maximize juicing, it is suggested to juice the fruit a few times.

CLEANING

Clean after every use.

1. Before cleaning unplug the unit.
2. Wash all parts with hot water and dish liquid.
Rinse and dry thoroughly.
3. Wipe the external surface of the unit with a soft damp cloth and dry surfaces with soft dry cloth.
Do not use any abrasive detergent as this may scratch the outside.
4. Once all parts are dry place in a dry place.

Note: Never immerse the unit in water.

TROUBLE SHOOTING

Problem	Solution
Machine does not work	<ul style="list-style-type: none">- Check and ensure that the appliance is properly connected to the wall outlet and that power is switched on at the outlet.
Motor stops running while juicing.	<ul style="list-style-type: none">- Make sure to not press too hard on the juicer.- Clean the unit of pulp.

LIMITED ONE YEAR WARRANTY

This warranty covers all defects in workmanship or materials in the mechanical and electrical parts arising under normal use and care in this product for a period of 12 months from the date of purchase provided you are able to present a valid proof-of-purchase. A valid proof-of-purchase is a receipt specifying item, date purchased, and cost of item. A gift receipt showing item and date of purchase is an acceptable proof-of-purchase. Product is intended for household use only. Any commercial use voids the warranty.

This warranty covers the original retail purchaser or gift recipient. During the applicable warranty period within normal household use, we will repair or replace, at our discretion, any mechanical or electrical part which proves defective, or replace unit with a comparable model. Shipping and handling costs are not included for warranty replacements and are the responsibility of the customer.

To obtain service under the terms of this warranty, call our customer care department at 312-526-3760 (Monday- Friday 10:00AM-4:00PM CST), or send an email to customercare@alliedrich.net. Please provide the model number listed on the bottom of this page when contacting us.

THIS LIMITED WARRANTY COVERS UNITS PURCHASED AND USED WITHIN THE UNITED STATES AND DOES NOT COVER:

- Damages from improper installation.
- Damages in transit.
- Defects other than manufacturing defects.
- Damages from misuse, abuse, accident, alteration, lack of proper care and maintenance, or incorrect current or voltage.
- Damage from service by other than authorized dealer or service center.
- Shipping and handling costs.
- This warranty gives you special legal rights and you may also have other rights to which you are entitled which may vary from state to state.

Manufacturer does not assume responsibility for loss or damage for return shipment. We recommend that you keep your original packaging should you require repair service. Before returning product please contact our customer care department for return authorization. When returning product for repair please include your full name, return address, and daytime phone number. Also include a brief description of the problem you are experiencing and a copy of your sales receipt or other proof of purchase in order to validate warranty status.

MODEL GS403YCT