

1 YEAR LIMITED WARRANTY

Course Housewares, LLC warrants this product to be free from manufacturer defect for up to 1 year from the original date of purchase. If a defect is found to exist, Course Housewares will, at its option, either repair or replace the product or the defective component, including labor. Replacement will be made with new or rebuilt product or components. This warranty does NOT cover (a) ordinary wear and tear (such as scratches or stains), (b) impact damage or breakage, (c) heat discoloration, minor imperfections and slight color variations which are a normal part of the craftsmanship, (d) improper cleaning methods, or (e) any unit that has been tampered with, (f) damages, including cracking or chipping, incurred through improper use and care and (g) faulty packaging by you or mishandling by any common carrier. Failure to follow the accompanying Care and Use instructions or commercial use will void this warranty.

Course Housewares' sole obligation and your exclusive remedy under this warranty is limited to repair or replacement, at its option, of the defective product. You will be responsible for any shipping and handling fees. Products returned to us that are not found to be defective in material or workmanship will be returned to you. If your particular product is found defective but is no longer available and cannot be repaired, a comparable product, at our discretion, will be sent as a replacement. Course Housewares cannot guarantee a replacement of the same color as your original purchase. This warranty extends only to the product's original purchaser, US residents only and does not cover damage caused by improper use or accidental damage.

COURSE HOUSEWARES, LLC MAKES NO OTHER WARRANTIES, EITHER EXPRESSED OR IMPLIED, REGARDING THE PRODUCT OR RELATING TO ITS QUALITY, PERFORMANCE, MERCHANTABILITY, OR FITNESS FOR A PARTICULAR PURPOSE, COURSE HOUSEWARES, LLC SHALL NOT BE LIABLE FOR INDIRECT, CONSEQUENTIAL OR SPECIAL DAMAGES WHETHER A CLAIM IS BASED ON CONTRACT, TORT, WARRANTY OR OTHERWISE, IN NO EVENT WILL LIABILITY EXCEED THE ORIGINAL PURCHASE PRICE OF THE PRODUCT. THE DURATION OF ANY IMPLIED WARRANTY WHATSOEVER, INCLUDING BUT NOT LIMITED TO THE WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED TO THE DURATION OF THE EXPRESS WARRANTY PROVIDED HEREIN. COURSE HOUSEWARES SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES WHATSOEVER.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. This warranty gives you specific legal rights, and you may have other legal rights, which vary from State to State.

To process a claim:

Do not return the product to the retailer from which it was purchased. Your retailer has no liability for this warranty. Please contact the Course Housewares' customer service department for assistance and to ensure the fastest possible resolution to the problem. Please have your purchase information available to speed this process.

OR

Send your name, physical address, phone number, original purchase receipt and the safely packaged item prepaid to:

Course Housewares, LLC

1715 Lake Drive West

Chanhassen, MN 55317

(866) 325-1659 or Email: askcourse@course-h.com

Return shipping and handling charges may apply.

MADE IN CHINA

MODEL: B420426, B420564



Glass Storage



Thank you for purchasing the Storable Solutions Glass Storage. Your items will perform best when used as intended. To ensure the best performance of your products, please consistently follow these instructions.

PLEASE READ BEFORE USE AND SAVE THESE INSTRUCTIONS

WARNINGS

- ◆ Glass is fragile. Avoid impact to your storage and use caution with any impact from utensils.
- ◆ Do not use the lids in a conventional oven. Your lids can be used in the microwave, refrigerator and freezer.
- ◆ The glass storage is microwave, refrigerator and freezer safe. The storage is oven safe up to 450°F without the lid.
- ◆ If you are using your storage in the freezer, leave space between the top of the food and the lid. Freeze in small portions, as food expands when frozen and your glass storage may become damaged if it is filled too full before freezing.
- ◆ Do not use your glass storage on the stove or under any flame or direct heat source.
- ◆ Avoid sudden temperature changes to your storage. Always allow your storage to cool before using, serving, submerging into water, or placing in the freezer.
- ◆ Do not place hot storage onto a cool or wet surface immediately after using or while it is still hot. Always make sure to place the storage on a dry potholder or dry cloth that will minimize contact with a cold surface and allow time for cooling.
- ◆ Do not pour hot liquids into empty, cold glass storage and never add cold liquids into hot glass storage.
- ◆ Always allow the oven to fully preheat before putting your glass storage inside.
- ◆ Avoid cutting food inside the glass storage.
- ◆ Do not use your glass storage if it is chipped or cracked.
- ◆ Always use oven mitts or potholders when handling your hot storage and keep out of reach of children at all times.

GETTING STARTED

- ◆ Before using, remove any labels and wash and dry each item in accordance with the care and use instructions.
- ◆ Some of your storage items may feature dividers that allow you to store different types of food in the separate sections.

USING YOUR GLASS STORAGE

- ◆ Your glass storage can be used for cooking, baking, warming, and reheating foods in the microwave or oven up to 450°F without the lid.
- ◆ Always make sure the oven is preheated before inserting your glass storage and never use your plastic lid in the oven.
- ◆ To remove the lid on your glass storage, pull upwards on the clasps on the lid. To replace, push downwards on the clasps until they snap securely into place.
- ◆ If the storage has a divider, line up the divider on the lid to the one on the storage and push downwards on the clasps to properly seal your container. To remove, pull upwards on the clasps on the lid.



- ◆ When using your lids in the microwave, unlatch the lid and offset slightly over the glass storage to keep your food covered. It is recommended not to use your lids in the microwave for longer than 10 consecutive minutes.
- ◆ Please note: The silicone seal on the lid may come off when you open the lid. This is normal due to the tight seal between the lid and the storage. Simply replace the seal on the lid if this occurs.
- ◆ Always use extreme caution and use potholders or oven mitts when handling your hot storage.
- ◆ Avoid sudden temperature changes to the glass storage. After using and if hot, allow the storage to cool before washing or refrigerating.

CLEANING YOUR GLASS STORAGE

- ◆ Your glass storage is dishwasher safe. If you use a dishwasher to clean your items, load dishes to avoid bumping against other items during the dishwashing cycle and your lids should be placed on the top rack.
- ◆ Please note: handwashing with warm, soapy water is recommended to prolong the life of your glass storage.
- ◆ Do not use abrasive or harsh cleaners on your glass storage.