





**Personal Blender
INSTRUCTION MANUAL**

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed including the following:

1. Read all instructions before using.
2. To protect against risk of electrical shock, do not put motor in water or any liquid.
3. Children should be supervised while using the appliance.
4. Do not operate any appliance with a damaged cord, plug, after the appliance malfunctions, or is dropped or damaged in any manner.
5. If the supply cord is damaged, it must be replaced by the manufacturer in order to avoid a hazard.
6. Unplug the unit from the outlet before assembling or taking off parts and before cleaning. Unplug when not in use.
7. Do not use attachments not recommended or sold by the manufacturer as it may lead to fire, electric shock or injury.
8. Always ensure the motor has stopped completely before disassembling.
9. Do not insert your fingers into the blender while it is in operation. If food becomes lodged in the blender, turn blender off and wait for motor to completely stop, then disassemble the blender to remove ingredients.
10. Do not put any parts into the dishwasher.
11. Do not use appliance for other than intended purpose.
12. Do not use appliance for more than 1 minute continuously as the motor may burn out; use it again until the appliance is cool.
13. Do not use the appliance to juice hard materials, including ice, frozen fruit, large seeds.
14. Switch off the appliance before taking off the lid.
15. Do not use an extension cord or timer with this appliance.
16. Never disassemble the blend jar or remove the lid while the blade is running.
17. Use caution as the stainless-steel blade is very sharp.
18. Never press the blend button when the cup is removed. Never press the blend button before assembling the cup.
19. Always blend with liquid when using hard fruit or food.
20. Never use the appliance while recharging.
21. Always add ingredients first before beginning to blend.

Parts Identification

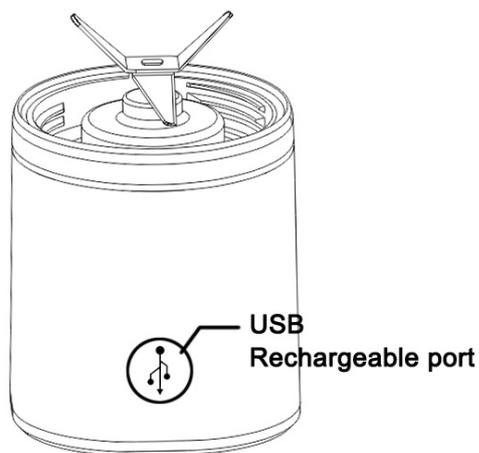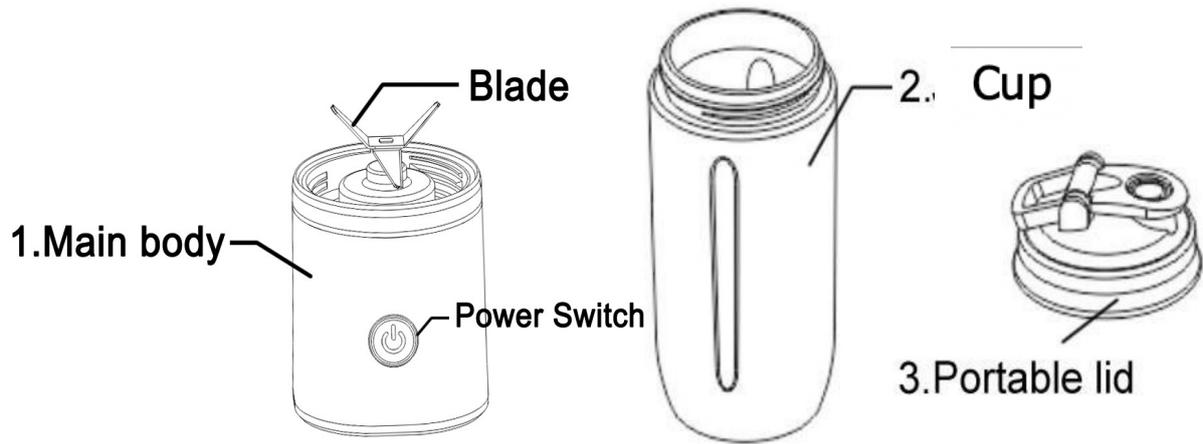

Before First Use

1. Remove all packaging materials.
2. Clean all parts with dishwashing liquid, and a non-abrasive sponge.
3. Wipe the inside and outside of the appliance with a cloth.

Using the Appliance

1. Cut the ingredients into about 1-inch chunks. If ingredients have thick skin or a hard shell, please remove them first.
2. Fill the ingredients into the cup, then fill with liquid. Note: Make sure that the ingredients never exceed the 'max' mark.
3. Assemble the main body onto the cup. Note: Keep the cup upright to not spill any ingredients.
4. Press the power switch twice and the light will flash. The appliance will start to blend and the light will go off when the blending is finished.

Note: If the ingredients are stuck on the blade, shake the base slightly by hand.

5. If you would like to continue to blending, re-press the blend button twice and it will restart.

Warning: The appliance must rest for 5 minutes for every 4 cycles in order to protect the motor from overheating.

6. After blending, remove the main body from the cup. Alternatively, you can remove the main body and assemble the portable lid onto the cup as a travel bottle.

Cleaning

1. Fill water into the cup, assemble the main body and blend the water for 20 seconds, the blade will be cleaned. Or it can be cleaned by hand with non-abrasive detergent, use caution when handling the blades as they are extremely sharp.
2. The main body should be cleaned by hand using a cleaning brush and non-abrasive cleaners, never submerge them under water as this will affect the electronics.

Storage

1. Make sure all parts are clean and dry.

Charging Method

The USB rechargeable port is on the main body, you should use the USB CABLE to connect the rechargeable port with DC 5V output.

Charging Tips

- When the appliance is started and the red light flashes, it means the battery is low and needs to be charged.
- When the light turns white it means charging has finished.

Trouble Shooting

Problem	Possible Causes	Resolution
Appliance does not work.	<ul style="list-style-type: none">- Used continuously for a long time- The blade is blocked- Juice jar is not assembled correctly.- The battery is low.	<ul style="list-style-type: none">- Let the appliance cool down for 10 minutes and retry- Please remove the stuck ingredients- Please assemble the juice jar and main body again- Please recharge the machine
Ingredients cannot be blended.	<ul style="list-style-type: none">- Overfilled ingredients or underfilled;- Ingredients are too big- Blender has no liquid in it.	<ul style="list-style-type: none">- The ingredients capacity should be less than max position but over the blade.- Cut into small pieces.- Fill with some liquid.
The light continues to flash but appliance will not blend.	<ul style="list-style-type: none">- Wrong assembly of the juice jar- Battery is low- Overload	<ul style="list-style-type: none">- Reassemble the juice jar- Recharge- Remove the excess ingredients.

LIMITED ONE YEAR WARRANTY

This warranty covers all defects in workmanship or materials in the parts arising under normal use and care in this product for a period of 12 months from the date of purchase provided you are able to present a valid proof-of-purchase. A valid proof-of-purchase is a receipt specifying item, date purchased, and cost of item. A gift receipt showing item and date of purchase is an acceptable proof-of-purchase. Product is intended for household use only. Any commercial use voids the warranty.

This warranty covers the original retail purchaser or gift recipient. During the applicable warranty period within normal household use, we will repair or replace, at our discretion, any mechanical or electrical part which proves defective, or replace unit with a comparable model. Shipping and handling costs are not included for warranty replacements and are the responsibility of the customer.

To obtain service under the terms of this warranty, call our customer care department at 312-526-3760 (Monday- Friday 10am-4pm CST), or send an email to customercare@alliedrich.net. Please provide the model number listed on the bottom of this page when contacting us.

THIS LIMITED WARRANTY COVERS UNITS PURCHASED AND USED WITHIN THE UNITED STATES AND DOES NOT COVER:

- Damages from improper installation.
- Damages in transit.
- Defects other than manufacturing defects.
- Damages from misuse, abuse, accident, alteration, lack of proper care and maintenance, or incorrect current or voltage.
- Damage from service by other than authorized dealer or service center.
- Shipping and handling costs.
- This warranty gives you special legal rights and you may also have other rights to which you are entitled which may vary from state to state.

Manufacturer does not assume responsibility for loss or damage for return shipment. We recommend that you keep your original packaging should you require repair service. Before returning product please contact our customer care department for return authorization. When returning product for repair please include your full name, return address, and daytime phone number. Also include a brief description of the problem you are experiencing and a copy of your sales receipt or other proof of purchase in order to validate warranty status.

MODEL LF-6806