

How to Load the Batteries in Your Gravity Mill

Each mill requires 6 AAA batteries (batteries not included). It is suggested to use well known national branded batteries.

- 1 Your Gravity Mill features an arrow and lock symbols on the reverse side of the logo to indicate the locked and unlocked position.



To open, hold the Ring (D) and turn the Mill Body (A) counter-clockwise until the arrow is aligned with the unlock symbol (see Figure 1). Remove the Mill Body (A).

- 2 The battery charges are clearly marked on each battery slot of the Battery Compartment (C). Insert the batteries into the slots, correctly matching the charge signs on the batteries to those listed on the unit.
- 3 Place the Mill Body (A) back over the Battery Compartment (C), aligning the arrow with the unlock symbol. Turn the Mill Body (A) clockwise until the arrow aligns with the lock symbol indicating the mill is locked.

How to Fill Your Gravity Mill

- 1 To fill your Gravity Mill, hold the mill by the Ring (D) and turn the Spice Chamber (E) clockwise until it detaches.
- 2 Fill the Spice Chamber (E) up to 80% with peppercorn, sea salt or desired spices. **DO NOT OVERFILL.**
- 3 To reassemble, place the mill back on the Spice Chamber (E). Hold the mill by the Ring (D) and turn the Spice Chamber (E) counter-clockwise until reassembled.



Figure 1



Figure 2

How to Use Your Gravity Mill

- 1 Simply tilt the mill upside down to activate the grinder. To stop, tilt back to upright position.
- 2 To adjust the grinding size, turn the Knob (B) on top of the mill (see Figure 3).

Note: If the mill becomes jammed during grinding, disassemble the grinder and shake the contents out and then reassemble.

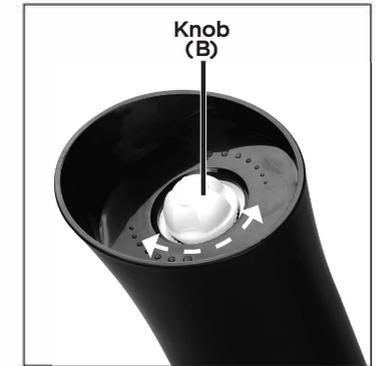


Figure 3

Note:

When turning clockwise, do not force the Knob (B) and over tighten as this may cause the mill to malfunction. When turning counter-clockwise, do not rotate the Knob (B) more than 3 complete turns from the finest grind setting. More than that may unscrew the Knob (B) and completely detach it from the mill.

In the event that the Knob (B) detaches, simply center the Knob (B) on the grinder, push down and simultaneously turn clockwise to reattach (do not over tighten).

Cleaning

To clean your Gravity Mill, wipe with a damp cloth or sponge. Do not use harsh cleaners or abrasive cleaning pads as this may damage the finish on your mill.

DO NOT submerge the mill in water or let the battery compartment come in contact with water. Store the mill in a dry place.

Warnings

Do not mix old and new batteries. Replace all batteries at the same time.

Do not mix alkaline, standard (carbon-zinc), or rechargeable (ni-cad, ni-mh, etc.) batteries.

DO NOT drop or hit the mill against a hard object. This can cause the mill to malfunction or stop working completely.