

USING THE ROTATING BASKET

Use the rotating basket for foods that require shaking or tumbling during the cooking process.

- To add food in the basket, open the cover located on the side and add food inside the basket. Close the cover firmly
- Slide the rotisserie rod through the middle of the basket.
- Insert the drip tray into the bottom of the unit.
- Using the accessory handle, hook the bottom of the left and right sides of the rod on each sides of the basket.
- Open the door of the unit. Slide the accessory onto the rails in the center of the unit until it reaches the rod supports located on each sides of the unit's walls.
- Insert the left end of the basket first and then slide the right end to secure the accessory.

USING THE ROTISSERIE SPIT

To place your meat or poultry on the rotisserie rod please follow the instructions below:

- Insert one end of the rotisserie rod through one of the spikes. Position the spikes close to one of the ends of the rods, with the spikes facing the center of the rotisserie rod. Secure the spikes by turning the thumbscrew in a clockwise direction.
- Run the rod through the center of the food to be cooked. Slide the food until the spike is securely imbedded into the food. Slide the second spike onto the rotisserie rod at the other end of the food to be cooked until securely imbedded in the food. Secure in place by tightening the thumbscrew.
- Place the drip tray on the lowest position to catch food drippings.
- Use the rotisserie handle to lift the rotisserie spit. The hooks of the rotisserie handle should be both sides of the rod.
- Open the door of the unit. Slide the accessory onto the rails in the center of the unit until it reaches the rod supports located on each sides of the unit's walls.
- Insert the left end of the rotisserie spit first and then slide the right end to secure the accessory.

Always wear oven mitts when handling the accessories!

Warning! Ensure that food is placed in a way to prevent any contact with the appliance's heating elements. Do not overfill.

Switch the rotate function on to allow the rotating accessories to rotate and cook the food evenly.