

BATTERY

If your appliance does not work properly, it is probably because the batteries are discharged. In that case, replace them with new batteries of the same type (see **BEFORE USE**).

Please eliminate the old batteries in an environmentally friendly way.

TROUBLESHOOTING

If the mill does not grind, please check that the batteries are installed correctly and are not discharged. For best results we recommend alkaline batteries.

If the mill gets stuck during use (motor produces hum, but internal shaft does not turn and no pepper is ground), gently shake the mill or tap the mill gently on a hard surface, to remove the stuck pepper or salt.

To remove deeply stuck peppercorn, detach the top half of the mill along with the battery motor from the bottom, as if refilling the mill. Turn the adjustment grind setting wheel to its coarseness setting and tap lightly on a hard surface until all the peppercorn is released. Use the refill opening as support. Once done, put the mill back together and readjust the coarseness setting to the desired level.

Note: Too fine of a grind setting may not enable salt or pepper to grind. If this is the case, set the grinder to a coarser setting (see above).

ENVIRONMENTAL PROTECTION

If the appliance should no longer work at all, please make sure that it is disposed of in an environmentally friendly way. Please do not put it with your household waste.



PEPPER AND SALT GRINDER SET

MOLINILLO DE PIMIENTA Y SAL

SALIERE ET POIVRIERE

Save These Instructions – For Household use Only

IMPORTANT SAFEGUARDS

When using your appliance, basic safety precautions should always be followed, including the following:

- ❑ Never leave the item unsupervised when in use.
- ❑ From time to time check the mills for damages. Never use them if they show any signs of damage. All repairs should be made by a qualified specialist ^(*).
- ❑ Only use the mills for domestic purposes and in the way indicated in these instructions.
- ❑ Never immerse the pepper and salt grinder set in water or any other liquid for any reason whatsoever.
- ❑ Before cleaning, always remove the batteries.
- ❑ If the batteries leak, remove them, clean the contacts of the item and wash your hands.
- ❑ If you do not use the pepper and salt grinder set for a long time, remove the batteries so that they do not leak.
- ❑ The use of alkaline batteries is preferred.

^(*) Qualified specialist: after sales department of the producer or importer or any person who is qualified, approved and competent to perform this kind of repairs in order to avoid all danger. In any case you should return the appliance to this specialist.

SAVE THESE INSTRUCTIONS HOUSEHOLD USE ONLY

BEFORE USE

FILLING YOUR MILLS

Note: This pepper and salt grinder set runs on 4 AA/LR6 batteries.

- Open the battery housing by turning counterclockwise and by raising up, separating the top from the bottom.
- Remove the protective transparent sleeve and place the batteries into the motor with the correct polarity. Make sure the batteries are aligned with their corresponding symbols inside the housing.
- Place the protective sleeve back over the batteries from the top to keep them from falling out during operation.
- Pull out the battery motor and you will find an opening into the spice chamber.
- Fill the spice chamber using the funnel to help pour easily.
- Carefully connect the battery motor back onto the bottom of the mill. All contact points should lock in.
- To close the grinder, place the top back over the battery motor to fit along with the bottom half. Turn clockwise to lock back into starting position.

USE

- Before seasoning your meals, you can adjust the fineness of the ground salt and pepper by turning the adjustment wheels on the underside of the mill.
- To do so, turn the wheel clockwise for a finer grind and counterclockwise for a coarser grind.
- Hold a mill above the meal to season and push the button located on top of the mill. The light function illuminates what you are seasoning and enables a precise grinding.
- Once finished, the bottom caps can be placed back on the mills to prevent spills on the countertops.

MAINTENANCE

Disassemble the different parts of the pepper and salt grinder set and clean them separately with a damp cloth. Do not immerse the mill in liquid or put it in a dishwasher. Do not use with wet hands. Do not use cleaning products or detergents. Keep away from dampness and heat.