
SHAQ




Blending System INSTRUCTION MANUAL

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed including the following:

1. Read all instructions before using.
2. To protect against risk of electrical shock, do not put motor in water or any liquid.
3. Children should be supervised while using the appliance.
4. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or is dropped or damaged in any manner.
5. If the supply cord is damaged, it must be replaced by the manufacturer in order to avoid a hazard.
6. Unplug the unit from the outlet when not in use, before assembling or taking off parts and before cleaning.
7. Do not use attachments not recommended or sold by the manufacturer as it may lead to fire, electric shock or injury.
8. Always ensure the motor has stopped completely before disassembling.
9. Do not insert your fingers or foreign objects into the blender while it is in operation. If food becomes lodged in the blender, turn blender off and wait for motor to completely stop, then disassemble the blender to remove ingredients.
10. Do not use appliance for other than intended purpose.
11. Do not use the appliance to juice hard materials, including large seeds.
12. Switch off the appliance before taking off the lid.
13. Do not use an extension cord or timer with this appliance.
14. Never disassemble the blend jar or remove the lid while the blade is running.
15. Use caution as the stainless-steel blade is very sharp.
16. Never press the LOW/HIGH or PULSE button when the cup is removed.
Never press the before assembling the cup.
17. Always blend with liquid when using hard fruit or food.
18. Never use the appliance while recharging.
19. Always add ingredients first before beginning to blend.

Parts Identification

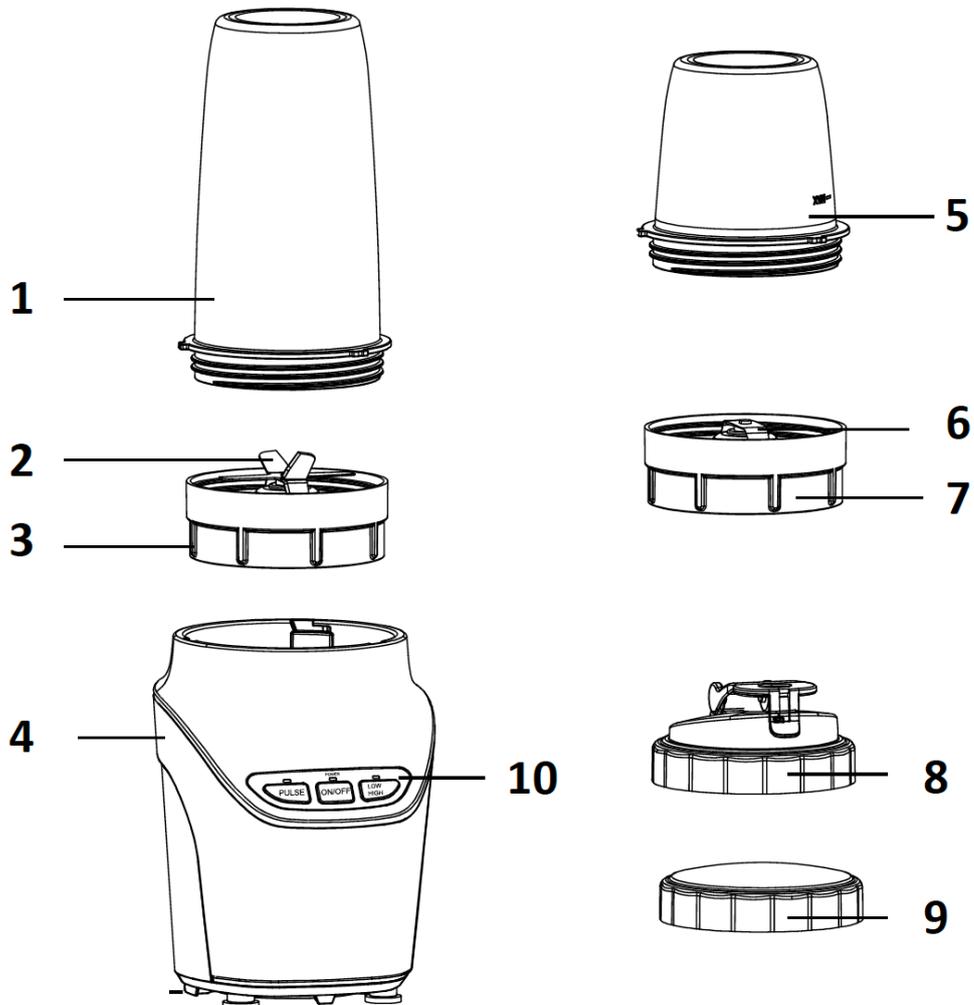

1. BLENDING CUP
2. CROSS BLADE
3. BLADE BASE
4. MOTOR BASE
5. GRINDING CUP
6. FLAT BLADE
7. BLADE BASE
8. FLIP TOP LID
9. STORAGE LID (TWO INCLUDED)
10. CONTROL PANEL

Before First Use

1. Remove all packaging materials.
2. Clean all parts with dishwashing liquid, and a non-abrasive sponge.
3. Wipe the inside and outside of the appliance with a cloth.

Using the Appliance

1. Plug the unit in.
2. Fill the ingredients into the cup, then fill with liquid. Note: Make sure that the ingredients never exceed the 'max' mark.
3. Assemble the desired blade on the cup. Assemble onto the base clockwise and ensure it is locked in firmly. The flat blade is used when grinding is desired with the grinding cup. The cross blade is best used for smoothie making with the blending cup.
4. Press ON/OFF button to turn the unit on.
5. To begin blending, press LOW/HIGH to begin operation. The appliance will begin at the low speed to go to a higher speed press LOW/HIGH again. The unit will stop after 50 seconds, if less time is needed for blending press ON/OFF button to stop operation.
6. If pulsing is desired during operation press the pulse button. The unit will stop operation, press PULSE again and the unit will then begin pulsing for 2 seconds. To continue blending after this press LOW/HIGH. Or to turn the unit off press ON/OFF.

Warning: The appliance must rest for 5 minutes every fourth cycle in order to protect the motor and to cool down.

7. After blending, remove the cup from the base. Then remove the blade base. If desired put the flip top lid or storage lid on the cup.

Cleaning

1. Fill water into the cup, assemble the base and blend the water for 20 seconds, the blade will be cleaned. Or it can be cleaned by hand with non-abrasive detergent, use caution when handling the blades as they are extremely sharp. The lids and cups can also be put in the dish washer.
2. The motor base should be cleaned by hand using a towel and non-abrasive cleaners, never submerge them under water as this will affect the electronics.

Storage

1. Make sure all parts are clean and dry.

LIMITED ONE YEAR WARRANTY

This warranty covers all defects in workmanship or materials in the parts arising under normal use and care in this product for a period of 12 months from the date of purchase provided you are able to present a valid proof-of-purchase. A valid proof-of-purchase is a receipt specifying item, date purchased, and cost of item. A gift receipt showing item and date of purchase is an acceptable proof-of-purchase. Product is intended for household use only. Any commercial use voids the warranty.

This warranty covers the original retail purchaser or gift recipient. During the applicable warranty period within normal household use, we will repair or replace, at our discretion, any mechanical or electrical part which proves defective, or replace unit with a comparable model. Shipping and handling costs are not included for warranty replacements and are the responsibility of the customer.

To obtain service under the terms of this warranty, call our customer care department at 312-526-3760 (Monday- Friday 10am-4pm CST), or send an email to customercare@alliedrich.net. Please provide the model number listed on the bottom of this page when contacting us.

THIS LIMITED WARRANTY COVERS UNITS PURCHASED AND USED WITHIN THE UNITED STATES AND DOES NOT COVER:

- Damages from improper installation.
- Damages in transit.
- Defects other than manufacturing defects.
- Damages from misuse, abuse, accident, alteration, lack of proper care and maintenance, or incorrect current or voltage.
- Damage from service by other than authorized dealer or service center.
- Shipping and handling costs.
- This warranty gives you special legal rights and you may also have other rights to which you are entitled which may vary from state to state.

Manufacturer does not assume responsibility for loss or damage for return shipment. We recommend that you keep your original packaging should you require repair service. Before returning product please contact our customer care department for return authorization. When returning product for repair please include your full name, return address, and daytime phone number. Also include a brief description of the problem you are experiencing and a copy of your sales receipt or other proof of purchase in order to validate warranty status.

MODEL SHQP600