



2-Piece Set Includes:



Elevated Nonstick Mesh Crisping Tray

The Elevated Nonstick Mesh Tray stands on top of the Nonstick Copper Chef Cookie Sheet. It allows heated air to pass through and circulate around all 360° of your food.

Nonstick Cookie Sheet

Nonstick Cookie Sheet catches crumbs, drips, and splatters to keep your oven clean and safe.

IMPORTANT: A baking tray is required to be placed under the Mesh Crisping Tray. The Nonstick Cookie Sheet is included. However, any standard baking tray that is slightly larger than the Crisper, can be used.



Fully Assembled Crisper

The Crisper cooks all sides of your food evenly without burning or turning. You never need to flip your food.

- Your meals cook to crispy, crunchy, golden brown perfection without frying. No added grease or oil means less fat & calories.
- The Crisper is safe to use as a grill basket on outdoor grills.
- The Crisper is oven safe.

Important Safeguards

- Use nonmetal utensils only.
- The Crisper will get hot. Use oven mitts or other heatproof materials when removing from oven.
- Allow the Crisper to cool completely before submerging in water. Exposing a hot pan to cool water may cause the pan to warp. Dangerous, hot steam and/or splattering hot water may result.



Using Your Crisper:

Before use, wash in warm water with mild, nonabrasive soap. Allow to dry completely. Always follow specific recipe directions for oven time and temperature. All ovens are calibrated differently. For best results, monitor the cooking process closely the first few times you use the Crisper.

- Preheat oven if necessary.
- There's no need to add any extra butter, grease, or oil.
- Stand the Elevated Mesh Tray on the Nonstick Cookie Sheet.
- Place food in Mesh Tray.
- Place the Mesh Tray and Cookie Sheet into oven.
- When removing Crisper from the oven, use oven mitts or other heatproof material to protect your hands.

Cleaning & Care

- Although the Crisper is dishwasher safe we recommend cleaning by hand.
- Wash with warm water, nonabrasive soap, and a nonmetallic sponge or cloth.
- Do not use baking soda, detergents, or other harsh soaps or solutions.
- Do not use cooking sprays directly on the Crisper.
- For added flavor, it's best to use natural oils, such as olive, canola, and peanut oil.
- If using under the broiler, watch food closely so it does not overcook.
- Only nonmetallic utensils made of plastic, silicone, wood, or bamboo should be used.
- Remove all food from the Crisper Elevated Mesh Tray before cutting or slicing.
- Direct exposure to other cook or bakeware can result in unwanted scratches. Do not stack or store the Crisper with any other cook or bakeware unless a protective layer is used.

Crisper Suggested Cooking Times and Temperatures

- Cooking times may vary depending on oven and oven size.
- When cooking frozen food, consult packaging for cooking times.
- Additional time may be needed since food does not come in direct contact with metal pan.
- Food will not burn as easily because it doesn't come in contact with the metal pan.
- Always use a tray to catch any grease or food from dripping into the oven.
- Breaded items may require a light coating of spray oil.

Food	Temperature	Cooking Time
Frozen Chicken Wings	425° F/218° C	35–40 mins.
Frozen French Fries	425°/218° C	30–35 mins.
Frozen Tater Tots	425°/218° C	20–23 mins.
Frozen Pizza	400°/204° C	15–18 mins.
Frozen Chicken Fingers	400°/204° C	25–30 mins.
Broccoli	425°/218° C	30–35 mins.
Cauliflower	425°/218° C	40 mins.
Bacon (Thick Cut)	400°/204° C	20–23 mins.
Chicken Breast (8 oz)	425°/218° C	25–30 mins.

60-Day Money-Back Guarantee

If you decide that you don't love this product, your order is covered by our 60-Day Money-Back Guarantee. You have 60 days from the day you receive your product to request a replacement product or refund of the purchase price minus processing and handling fees.

To receive a refund or replacement, you must return the product to us at your expense. To return the product, call customer service at 1-973-287-5113 and request a return merchandise authorization number. Pack the product carefully and include in the package a note with (1) your name, (2) mailing address, (3) phone number, (4) email address, (5) reason for return, and (6) proof of purchase or order number, and (7) specify on the note whether you are requesting a refund or replacement. Write the return merchandise authorization number on the outside of the package.

Send the product to the following return address:

Shaq Crisper
Tristar Products
500 Returns Road
Wallingford, CT 06495



Distributed By:

Tristar Products, Inc. • Fairfield, NJ 07004 • 973-287-5113

Shaq-Crisper_IB_TP_ENG_V2_191227

SHAQ

CRISPER



User Guide