

Colston

Since 1955

LIGHTWEIGHT RECTANGULAR TOUCHLESS TRASH CAN

USER MANUAL

Prior to use, read these carefully and follow them to prevent personal injury. Retain the manual for future reference.

SAFETY & PRECAUTIONS

Do not apply any external power to the lid when it is in use.

Do not press on the lid when it is opening.

Do not manually open the lid as this may cause damage.

ONLY use type AA batteries and remove them once they have run out to prevent leakage. If the bin fails to operate normally, it may mean the batteries are running low or need replacing. Please avoid mixing brands or using old batteries. Please recycle used batteries responsibly.

Avoid maintaining sensing mode for an extended period to prolong the life of the motor and batteries.

Do Not use water to rinse bin lid or battery compartment. You can wipe with a slightly damp cleaning cloth when the power is off.

DO NOT IMMERSE IN WATER.

Do not use harsh abrasive detergents or scouring pads to clean the main body. Avoid using the bin in a moist or steamy environment.

Keep the lid sensor away from direct sunlight or lamplight.

Do not place the bin close to high frequency electronic products, i.e.: microwave ovens, energy saving lamps, or remote controls, etc.

Avoid placing the bin in a contained space and ensure that any obstacles do not block the lid sensor within a 6.5' feet (2 meter) distance.





LIGHTWEIGHT RECTANGULAR TOUCHLESS TRASH CAN

SET-UP & OPERATING INSTRUCTIONS:


- Open the cover of the battery case at the bottom of the bin lid and insert 4xAA batteries (not included). Ensure the batteries are inserted correctly (+/-) as indicated. Replace the battery cover.
- Push the retaining ring into the bin body, making sure the liner edges are tucked inside the bin and are neatly concealed and secured into position.
- Turn on the power switch next to the battery compartment. The red indicator light will be lit for 2 seconds and then flash once every 4 seconds to show that the sensor is working and ready for use.
- To open the bin, hold your hand about 2 - 6" inches (5-15cm) in front of the lid and it will automatically open within a half second.
- Once your hand is removed from the sensor area, the lid will automatically close within 5-6 seconds.

Indicator Lights:

- The indicator light flashes red (every four seconds).
- When the lid opens, the indicator light shows green.
- When the lid closes, the indicator light shows red.
- Keeping your hand within the sensor area will keep the lid open.

Battery Information

The 4xAA batteries can last between 2-4months based on the bin lid opening and closing up to 20 times per day.

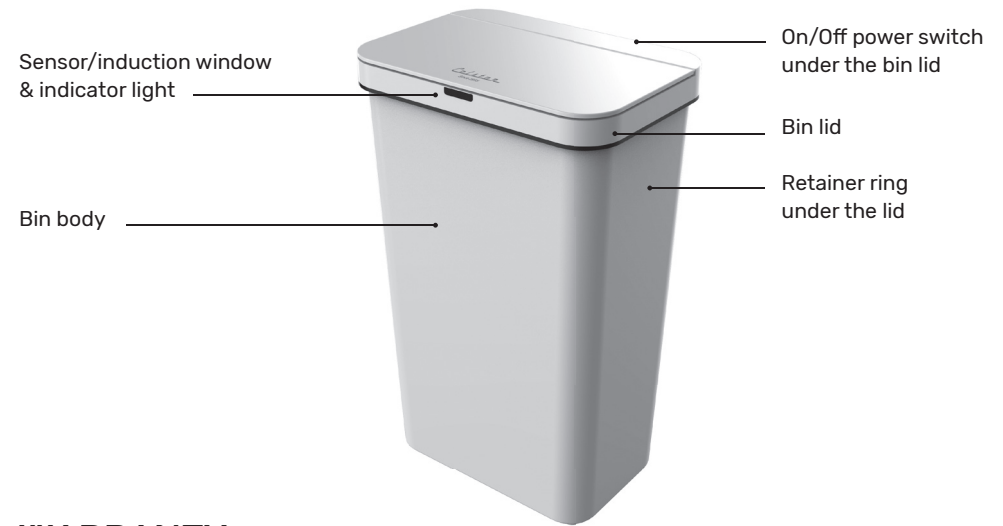

WARRANTY

1-Year Limited Manufacturer's Warranty

Your Colston product is backed by a one-year limited manufacturer's warranty. For a period of one year following date of purchase, Colston will repair or replace your product should it fail due to a manufacturer's defect (subject to certain limitations such as, but not limited to, use of the product as directed or performing the intended function during which the product may become damaged).

This one-year limited warranty does not cover any damage that results from unauthorized or improper use, service, or repair. Further, it does not cover damage caused by accident, negligence, purposeful harm, or normal wear and tear. Should you discover your Colston product is not functioning properly, please send your product to our repair center for evaluation, at the address listed below. If your product cannot be repaired or serviced, we reserve the right to exchange it for a similar or newer model.

Please note that a flat processing fee of \$35.00 will be charged to cover the service evaluation and return shipping of your product. All limited warranty claims must be accompanied by a copy of your proof of purchase from an authorized retailer. Please send your product, proof of purchase, and a check or money order in the amount of \$35.00 made out to Colston to:

Address:

Colston Appliances
3069 Taft Street
Hollywood, FL 33021
Contact:
warranty@colstonappliances.com

By purchasing this product and/or utilizing this limited warranty, you expressly waive the right to be a member of or the lead plaintiff in any class action or any group civil action against the manufacturer and agree that any dispute involving Colston shall be resolved in Broward County, Florida as the exclusive jurisdiction in any court case and/or proceeding. Florida as the exclusive jurisdiction in any court case and/or proceeding.