

Colston
Since 1955

SMOKELESS GRILL



Colston
Since 1955

USER MANUAL

Prior to use, please read the following instructions carefully to prevent personal injury. Retain this manual for future reference.

Important Precautions

1. Use the product in a space with sufficient ventilation to prevent carbon monoxide poisoning caused by incomplete charcoal burning.
2. Brush the grill tray with oil before each use.

Product Features

1. The smart turbo fan structure instantly activates.
2. Unique charcoal box design: helps limit fats and seasonings from dripping into the charcoal fire, reducing the generation of heavy smoke.
3. Portable grill stove: makes it convenient to carry, transport and store.
4. All the parts are easy to clean and wash.

Caution:

1. Do NOT use the charcoal grill stove in an airless place.
2. Keep children and pets away of the grill stove while in use.
3. Do NOT block the air vent.
4. Place and use the charcoal grill stove on a flat surface.
5. Do NOT touch the grill rack while barbecuing.

Parts Overview & Quick Assembly Guide:

Follow the guide below to unpack and assemble the smokeless grill.



How to Use:

1. Install 4 x AA batteries in the battery chamber located under the product's base.
2. Put the Insulation Plate over the Insulation sheet.
3. Put the Charcoal Box over the Insulation Plate.
4. Fill the Charcoal Box with enough charcoal and solid fuel tablets (or any other effective combustion substance).
5. Light the solid fuel tablets. IMPORTANT: Make sure to use gloves to avoid getting burned.
6. Turn on the fan and adjust the wind speed with the Wind Speed Switch.

WARRANTY

1-Year Limited Manufacturer's Warranty

Your Colston product is backed by a one-year limited manufacturer's warranty. For a period of one year following date of purchase, Colston will repair or replace your product should it fail due to a manufacturer's defect (subject to certain limitations such as, but not limited to, use of the product as directed or performing the intended function during which the product may become damaged).

This one-year limited warranty does not cover any damage that results from unauthorized or improper use, service, or repair. Further, it does not cover damage caused by accident, negligence, purposeful harm, or normal wear and tear. Should you discover your Colston product is not functioning properly, please send your product to our repair center for evaluation, at the address listed below. If your product cannot be repaired or serviced, we reserve the right to exchange it for a similar or new model.

Please note that a flat processing fee of \$25.00 will be charged to cover the service evaluation and return shipping of your product. All limited warranty claims must be accompanied by a copy of your proof of purchase from an authorized retailer. Please send your product, proof of purchase, and a check or money order in the amount of \$25.00 made out to Colston to:

Address:

Colston Appliances
3069 Taft Street
Hollywood, FL 33021

Contact:

warranty@colstonappliances.com

By purchasing this product and/or utilizing this limited warranty, you expressly waive the right to be a member of or the lead plaintiff in any class action or any group civil action against the manufacturer and agree that any dispute involving Colston shall be resolved in Broward County, Florida as the exclusive jurisdiction in any court case and/or proceeding.