



ELECTRIC JAR OPENER



USER MANUAL

SAVE THESE INSTRUCTIONS

This Jar Opener is intended for household use only. Read all instructions before using for the first time.

INTRODUCTION

Congratulations on your purchase of the Colston Electric Jar Opener! You will soon be removing lids from jars with ease with our simple one-touch operation system. Strong enough for even the toughest jars, it's effortless, easy, and ideal for those with injured, arthritic or just plain busy hands. No need to twist, pull, struggle or risk injury when you can use your Colston Electric Jar Opener!

IMPORTANT SAFETY INSTRUCTIONS

Read all instructions carefully before using your Jar Opener.

- Close supervision is necessary when your Jar Opener is used by or near children
- Ensure that they do not play with your Jar Opener.
- DO NOT touch moving parts during operation or when changing batteries.
- Keep hands, hair, jewelry, clothing, as well as spatulas and other utensils away from the jar opener moving parts during operation to prevent injury, and/or damage to the unit.
- If anything is trapped by the Jar Opener during operation, immediately press the Main button once to release.


BATTERIES

- Make sure the motor has stopped completely before removing the battery cover to replace batteries and before cleaning.
- While replacing batteries, DO NOT press the switch on the top of the Jar Opener to avoid turning the unit on and keep fingers away from the moving parts.
- Always remove any exhausted batteries. Replace all batteries at the same time and never mix old and new batteries or batteries of different types or quality.

OPERATION

- This Jar Opener is suitable to open regular and vacuum-style glass screw-top jars and intended for household use only. Any other use is not recommended.
- DO NOT use the Jar Opener on plastic jars.
- DO NOT use the Jar Opener to open jar lids smaller than 1.2 inch (30mm) or bigger than 3.5 inches (88mm) in diameter.
- DO NOT use the Jar Opener to open jar body smaller than 1.5 inch (40mm) or bigger than 4 inches (100mm) in diameter.
- DO NOT use the Jar Opener to open jars with steep curves, or irregular shapes where the jaws grip.
- DO NOT use the Jar Opener if there are any signs of defects on the jar lid or chipped glass around the jar.
- Always place the jar on flat non-slippery surface.
- Remove any safety seal on the jar before using the Jar Opener.
- To prevent toppling and spillage when opening small or tall jars, please secure the jar with one hand and gently hold the Jar Opener with your other hand.
- DO NOT remove the Jar Opener until the lid is open and the Jar Opener has completely stopped.

PARTS

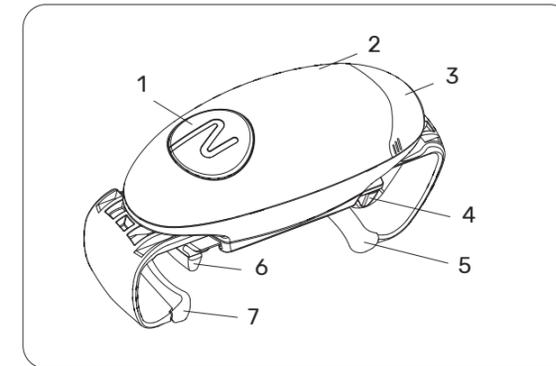

Listing for copy-pasting purposes


- 1 - Start Button/Release Button
- 2 - Body
- 3 - Battery Compartment
- 4 - Inner Jaws
- 5 - Outer Jaws
- 6 - Inner Jaws
- 7 - Outer Jaws

GETTING STARTED

BATTERY INSTALLATION


Note: Keep hands away from the Inner and Outer Jaws while installing batteries.

1. Press the gripping area at the side of the battery door and pull it back. Insert 2 AA alkaline or rechargeable batteries into the battery compartment according to polarity. (Fig.1)
2. After installing batteries, replace the battery cover. Note: Remember to always replace batteries at the same time, never mix old and new types of batteries, and never mix batteries of different types or quality.

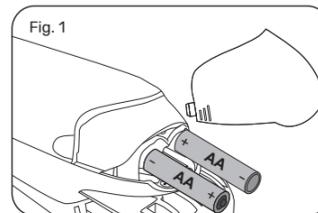


USING YOUR ELECTRIC JAR OPENER

1. Remove the paper or plastic neckband seal from the Jar.
2. Move the rubber grip of the Outer Jaws all the way down. (Fig.2)
3. With the Jar on a flat, not slippery surface, place your Electric Jar Opener evenly on top of the Jar.
4. Press and hold the Start Button for 3 seconds. The outer Jaws will begin to move in. Release the button when the Outer Jaws pause and the Inner Jaws begin to move. (Fig.3)

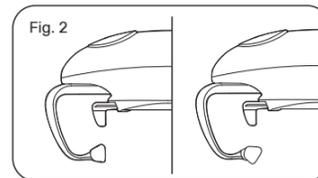

Note: DO NOT put your fingers near or in the jaws during the operation process. Press the Release Button once to reset the unit. Avoid contact with any of the moving parts during operation. Keep hands, hair, jewelry, clothing and utensils away from the moving parts to avoid injury and/or damage to your Electric Jar Opener.

5. The Inner Jaws will grip the Jar Lid and then the Outer Jaws will resume their movement to hold the Jar securely. Then the Inner Jaw will rotate to open the jar lid.
6. After opening the lid, the jaws of your Electric Jar Opener will return to their original position and stop automatically. Note: To prevent toppling and spillage when opening small or tall jars, please secure the jar with one hand and gently hold the Jar Opener Body with your other hand. Let the Jar Opener rotate until the lid is open.
7. When the Jar Opener switches off, lift the Jar Opener off the Jar. Always ensure that the lid is completely unscrewed from the jar by holding the jar with one hand while removing the lid with the other hand.
8. To re-open a jar that has been stored in the refrigerator, wipe the moisture from the Lid and Jar prior to using your Electric Jar Opener (Any moisture might cause the jaws to slip).

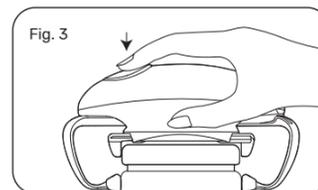

CLEANING AND CARE

1. Gently wipe surfaces with a clean, damp, soft cloth.
2. Use only gentle and non-abrasive cleaners on your Electric Jar Opener.
3. DO NOT immerse the Jar Opener in water or any other liquids, as this may cause damage.

TROUBLESHOOTING

Problem	Solution
Jaws cannot grip the jar tight enough and opener slips during operation	Use a dry cloth to clean the Lid, jar/bottle and the Jar Opener's rubber grips
The Jar Opener lifts up when opening a jar	Press the main button fully for one second during the operation to release the Jar Opener and reset to its original position

PRODUCT SPECIFICATIONS

Jar lid opening size range: diameter 1.2"- 3.5" (30mm - 88mm)
Jar body opening size range: diameter 1.5"- 4.0" (40mm - 100mm)

DISPOSAL

The packaging material can be recycled. Please dispose of it in an environmentally friendly manner and take it to a recycling center.



If you wish to dispose of this equipment at any point, please do so in an environmentally friendly manner. It should not be disposed of alongside general household waste. Instead, please take it to recycling point for electrical goods. Your local council will be able to advise you further.

Batteries should not be thrown away in household waste. Please ensure that you always dispose of batteries and rechargeable batteries only when they are empty. Your local council will be able to advise you further.

BATTERY CAUTION AND DISPOSAL

- For best results, use alkaline batteries.
- Install only new batteries of the same type in your product.
- Failure to insert batteries in the correct polarity, as indicated in the battery compartment, may shorten the life of the batteries or cause batteries to leak.

WARRANTY

- Do not mix old and new batteries.
- Do not mix Alkaline, Standard (Carbon-Zinc) or Rechargeable (Nickel Cadmium) or (Nickel Metal Hydride) batteries.
- Do not dispose of batteries in fire.
- Batteries should be recycled or disposed of as per state and local guidelines.

1-YEAR LIMITED MANUFACTURER'S WARRANTY

Your Colston product is backed by a one-year limited manufacturer's warranty. For a period of one year following date of purchase, Colston will repair or replace your product should it fail due to a manufacturer's defect (subject to certain limitations such as, but not limited to, use of the product as directed or performing the intended function during which the product may become damaged).

This one-year limited warranty does not cover any damage that results from unauthorized or improper use, service, or repair. Further, it does not cover damage caused by accident, negligence, purposeful harm, or normal wear and tear. Should you discover your Colston product is not functioning properly, please send your product to our repair center for evaluation, at the address listed below. If your product cannot be repaired or serviced, we reserve the right to exchange it for a similar or newer model.

Please note that a flat processing fee of \$5.00 will be charged to cover the service evaluation and return shipping of your product. All limited warranty claims must be accompanied by a copy of your proof of purchase from an authorized retailer. Please send your product, proof of purchase, and a check or money order in the amount of \$5.00 made out to Colston to:

Address:
Colston Appliances
3069 Taft Street
Hollywood, FL 33021

Contact:
warranty@colstonappliances.com

By purchasing this product and/or utilizing this limited warranty, you expressly waive the right to be a member of or the lead plaintiff in any class action or any group civil action against the manufacturer and agree that any dispute involving Colston shall be resolved in Broward County, Florida as the exclusive jurisdiction in any court case and/or proceeding.