

Colston

Since 1955

5-IN-1 DIGITAL AIR FRYER

USER MANUAL




PLEASE CAREFULLY READ THE USER MANUAL BEFORE USING THE APPLIANCE.

KEEP THE MANUAL FOR FUTURE REFERENCE.

INTRODUCTION

The new Colston 5-in-1 Digital Air Fryer will help you cook your favorite recipes and snacks in a healthier way. This air fryer adopts the principle of hot air combined with high-speed air circulation, which is convenient for you to cook all kinds of delicious food in a healthy, quick, and easy way.

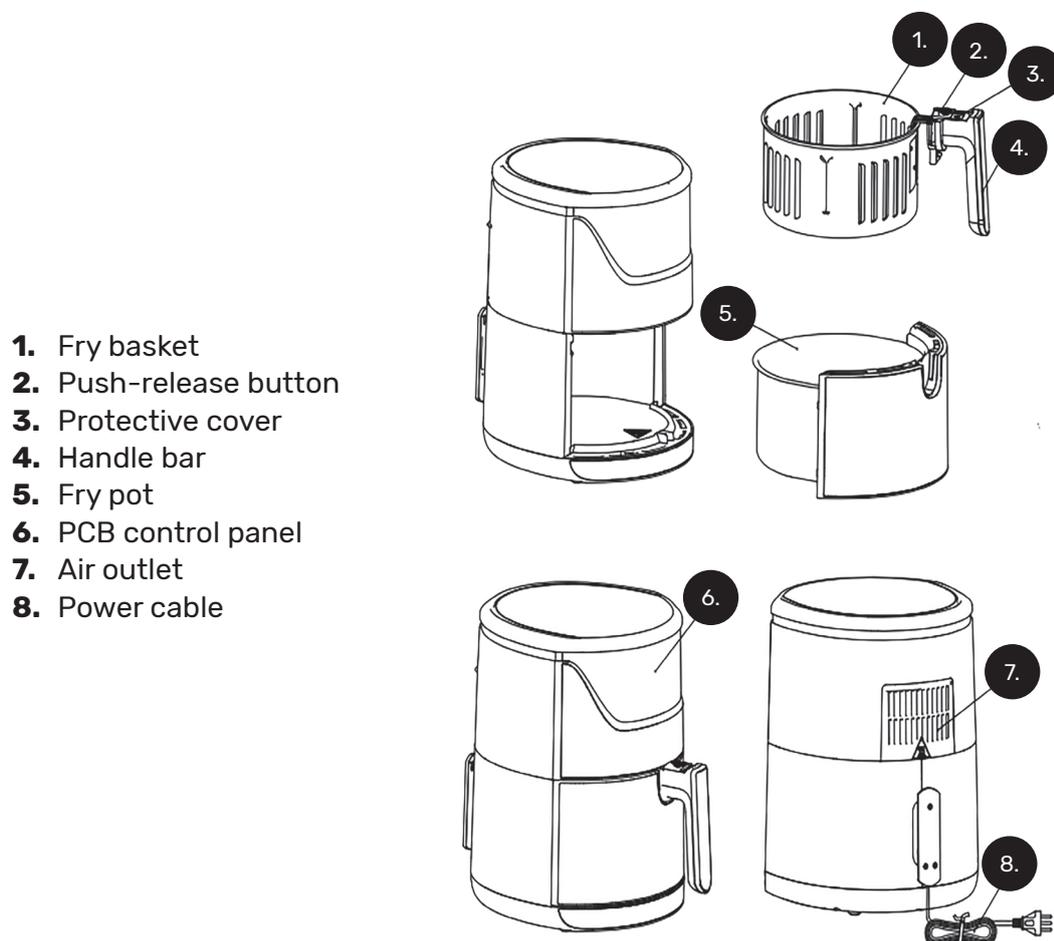

CAUTION

- This product is for household use only.
- Please carefully read the instruction manual before using the device. Keep the manual for future reference.
- Never fill the pot with oil, or it may become a fire hazard.
- The device contains electronic elements and heating elements. Do not place it in water.
- Do not cover the air inlet and outlet while in use. Do not touch the inside of the appliance to avoid burns and scalding.
- The surface where the device is placed will most likely get hot while in use. Do not touch the hot surface.
- High-temperature air will flow out through the outlet while the device is in use. Please keep at a safe distance. Do not cover the air outlet. When pulling out the cooking pot, please be careful of high-temperature air.

SECURITY WARNING

- Please keep the power plug clean to avoid any type of short-circuit.
- Avoid damaging the power cord by pulling or twisting it. Do not allow the power cord to hang over the edge of the surface, or touch hot surfaces, to avoid any electric shock, fire, and other types of accidents. If the power cord does get damaged, it must be replaced by the manufacturer.
- Please do not plug in or unplug from the power outlet with wet hands. Otherwise, it may cause an electric shock.
- Ensure that the power plug is secured to the power outlet; otherwise, it may cause electric shock, short circuit, smoking, sparking, and other types of hazards.
- Do not immerse the device, body, cord or plug in water or other liquid to prevent any damage or electric shock.
- Do not place the device near explosives and/or flammable fumes.
- Do not place the device on or near flammable material, such as tablecloths and curtains, to avoid fire hazards.
- Be sure to use the device on a heat-resistant surface. Keep it at least 12" inches (30cm) away from the wall, furniture, or other flammables.
- The device is not intended to be operated through an external timer or separate remote-control system.
- Do not use the device for anything other than its intended use.
- This device is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge unless they have supervision or instruction concerning the device's use by a person responsible for their safety.
- Children are not to play with the device.
- Keep the appliance away from children to avoid scalding, electric shock and/or other injuries; close supervision is necessary when the device is used by or near children.

BEFORE THE FIRST USE

- Remove all packaging material.
- Remove any stickers or labels from the device.
- Thoroughly clean the basket and the pan with hot water, dish soap, and a non-abrasive sponge.
- Wipe the inside and outside of the device with a clean damp cloth.
- Place the device on a stable, horizontal, and level surface with good air circulation and away from hot surfaces and any combustible material. Do not place the device on a non-heat-resistant surface.
- Place the frying basket in the frying pot and slide the pan back into the device.

WARNING:

This is a device that works with hot air. Do not fill the pot with oil. Do not put anything on top of the appliance. Doing so will disrupt the airflow and affects the hot air frying result.

HOW TO USE

1. Connect the power plug to a grounded power outlet.
2. Press the power button to turn it on and adjust the settings.
3. Press the temperature increase/decrease button to set the proper temperature for cooking.
4. Press the time increase/decrease button to set 5 mins for preheating. Press the power button once more to start preheating. Once the timer goes off, the device is ready for use.
5. Carefully pull the frying pot out, place the ingredients inside the frying basket (Attention: do not exceed the maximum line); make sure that the frying basket and pot are securely attached. Slide the frying pot back to the appliance.
 - a) Never use the frying pot without the basket in it.
 - b) Do not touch the pot while in use or soon after pulling it out from the device. Only hold the pan by the handle.
6. Press the mode button to switch and choose the appropriate cooking mode or click the temperature increase/decrease button and time increase/decrease button to select the proper time and temperature.
7. Press the power button once more to start cooking.
8. When you hear the timer beep, the set preparation time has elapsed. Pull the frying pot out of the device and place it on a heat-resistant surface.
9. Check if the ingredients are ready. If the ingredients are not ready, slide the pot back into the appliance and set the timer to a few extra minutes.
10. If the ingredients are ready, carefully pull out the pan, press the basket release button, and lift the basket out of the pot to remove the components. Do not turn the basket upside down with the pan still attached to it, as any excess oil collected on the bottom of the pan will leak onto the ingredients.
11. Empty the basket into a bowl or onto a plate. When a batch of ingredients is ready, the device is instantly ready for preparing another batch.

Tips:

- While seasoning add some oil directly on the ingredients for a crispy result.
- Shaking ingredients halfway during the preparation time optimize the end result and can help prevent unevenly fried ingredients. To shake the ingredients, pull the pan out of the appliance by the handle and shake it. Then slide the pan back into the appliance. Do not press the basket release button during shaking.

HEAT PRESERVATION FUNCTION

Push the warm button when the device is on to keep ingredients warm for 120 minutes.

CARE AND MAINTENANCE

1. Before cleaning, make sure the device has been turned off, unplug the device and wait for it to cool down. Don't touch the surface before cooling.
2. Never immerse the device in water or any other liquid. The device is not dishwasher proof.
3. Clean the surface of the frying pot and basket with hot water, dish soap, and a non-abrasive sponge.
4. If dirt is stuck to the basket or the bottom of the pan, fill the pan with hot water with some dish soap. Put the basket in the pan and let the pan and basket soak for about 10 minutes.
5. Use a clean damp cloth to wipe the surface of the fryer. Never use harsh and abrasive cleaners, scouring pad or steel wool, these will damage the device.
6. If you do not use the appliance for an extended time, please clean it, and store it in a cool and dry place.

COOKING PRESETS

Preset Button	Temperature	Time
Default	360 °F	15 min
French Fries	390 °F	20 min
Ribs	360 °F	15 min
Shrimp	320 °F	20 min
Cake	320 °F	40 min
Drumstick	360 °F	25 min
Meat	320 °F	20 min
Fish	360 °F	20 min

TECHNICAL SPECIFICATIONS

1. Rated Voltage: 120V~
2. Rated frequency: 60Hz
3. Rated power: 1700W
4. Fry basket capacity: 8qt
5. Net weight: 13 Lbs
6. Product Size: 16X12X14.5Inches
7. Temperature: 180-400°F
8. Time: 0-60 min

TROUBLESHOOTING

Problem	Possible Cause	Solution
Does not work	Power cord has not been inserted into the power outlet	Slowly insert the power cord into the grounded power outlet
	Did not set the cook mode	Click the mode selection button to select appropriate cook mode, then click the power button
	Didn't click the power button after select cook mode	Click the power button
Food is rare once timer has finished	Too much food in the basket	Fry food in batches
	Temperature set is too low	Set to an appropriate temperature, re-fry food
	Cooking time is short	Set an appropriate cooking time, re-fry food
Did not fry food evenly	Certain foods need to be shaken in the middle of cooking	In the middle of cooking process, pull the pot out and shake it to separate the overlapped food material, then slide the pot back to continue
Fried food is not crisp	Some food materials have to be coated with oil	Apply a thin layer of oil on the surface of the food first, then start to fry them
Cannot smoothly slide the pot back into appliance	The pot has too many ingredients making it too heavy	The food material in the basket cannot exceed the max line
	The basket is not correctly placed in the pot	Press the basket into the pot
	Handle bar stuck	Place the handlebar in horizontal position
Smoking	Frying oily food	Normal phenomenon
	Fryer contain oil from last use	Please clean the pot and basket after use

CORRECT DISPOSAL OF PRODUCT

This marking indicates that this appliance should not be disposed with other household wastes. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources.



1-YEAR LIMITED MANUFACTURER'S WARRANTY

Your Colston product is backed by a one-year limited manufacturer's warranty. For a period of one year following date of purchase, Colston will repair or replace your product should it fail due to a manufacturer's defect (subject to certain limitations such as, but not limited to, use of the product as directed or performing the intended function during which the product may become damaged).

This one-year limited warranty does not cover any damage that results from unauthorized or improper use, service, or repair. Further, it does not cover damage caused by accident, negligence, purposeful harm, or normal wear and tear. Should you discover your Colston product is not functioning properly, please send your product to our repair center for evaluation, at the address listed below. If your product cannot be repaired or serviced, we reserve the right to exchange it for a similar or newer model.

Please note that a flat processing fee of \$50.00 will be charged to cover the service evaluation and return shipping of your product. All limited warranty claims must be accompanied by a copy of your proof of purchase from an authorized retailer. Please send your product, proof of purchase, and a check or money order in the amount of \$50.00 made out to Colston to:

Address:

Colston Appliances
3069 Taft Street
Hollywood, FL 33021

Contact:

warranty@colstonappliances.com

By purchasing this product and/or utilizing this limited warranty, you expressly waive the right to be a member of or the lead plaintiff in any class action or any group civil action against the manufacturer and agree that any dispute involving Colston shall be resolved in Broward County, Florida as the exclusive jurisdiction in any court case and/or proceeding.

Colston
Since 1955