

## 1-YEAR LIMITED MANUFACTURER'S WARRANTY

Your Colston product is backed by a one-year limited manufacturer's warranty. For a period of one year following date of purchase, Colston will repair or replace your product should it fail due to a manufacturer's defect (subject to certain limitations such as, but not limited to, use of the product as directed or performing the intended function during which the product may become damaged).

This one-year limited warranty does not cover any damage that results from unauthorized or improper use, service, or repair. Further, it does not cover damage caused by accident, negligence, purposeful harm, or normal wear and tear. Should you discover your Colston product is not functioning properly, please send your product to our repair center for evaluation, at the address listed below. If your product cannot be repaired or serviced, we reserve the right to exchange it for a similar or newer model.

Please note that a flat processing fee of \$25.00 will be charged to cover the service evaluation and return shipping of your product. All limited warranty claims must be accompanied by a copy of your proof of purchase from an authorized retailer. Please send your product, proof of purchase, and a check or money order in the amount of \$25.00 made out to Colston to:

**Address:**

Colston Appliances  
3069 Taft Street  
Hollywood, FL 33021

**Contact:**

warranty@colstonappliances.com

By purchasing this product and/or utilizing this limited warranty, you expressly waive the right to be a member of or the lead plaintiff in any class action or any group civil action against the manufacturer and agree that any dispute involving Colston shall be resolved in Broward County, Florida as the exclusive jurisdiction in any court case and/or proceeding.

*Colston*  
Since 1955

*Colston*  
Since 1955

# PIZZA MAKER



## USER MANUAL

Save these instructions. This product is for household use only.  
Do not immerse this product into water.

## PRODUCT OVERVIEW



## PRODUCT SPECIFICATIONS

- Voltage: 120V~
- Frequency: 60Hz
- Power: 1500W

## CAUTION

1. This item is not a toy, please do not let children play with this product.
2. All cleaning and maintenance should be done by adults. Children should not clean this product.
3. Do not place on or near a hot gas or electric burner, or in a heated oven.

## HOW TO USE

The Pizza Maker offers three temperature settings: low, medium & high.

Adjust the Temperature Knob to one of these setting to achieve your desired cooking temperature. The temperature ranges are:

- Low Setting - 176°F
- Medium Setting - 302°F
- High Setting - 428°F

Ideal uses:

- Low to Medium settings are good for toasting breads.
- High setting is ideal for heavier condiment meals, such as pizzas. Preheat for about 3-4 minutes then add the desired meal directly on to the pan and close it.
- Cooking time will vary depending on what the recipe of the meal you are cooking calls for.

## WHEN USING ELECTRICAL PRODUCTS, BASIC SAFETY PRECAUTIONS SHOULD ALWAYS BE FOLLOWED, INCLUDING THE FOLLOWING

1. Read all instructions.
2. Do not touch hot surface. Use handles to open the product.
3. To protect against electrical shock do not immerse cord, plugs or product in water or other liquid.
4. Close supervision is necessary when the product is used by, or near, children.
5. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the product.
6. Do not operate the product with a damaged cord or plug, or after the product malfunctions or has been damaged in any manner. Return the product to the nearest authorized service facility for examination, repair or adjustment.
7. Do not use accessory attachments that are not recommended by the product's manufacturer, as doing so may cause injury.
8. Do not use outdoors.
9. Do not let the cord hang over the edge of a table or counter. Do not let the cord touch a hot surface.
10. Extreme caution must be used when moving the product while containing hot oil or other hot liquids.
11. To disconnect, remove plug from wall outlet.
12. Do not use this product for other than intended use.
13. If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
14. This product is only to be operated in the closed position.