

## Quick Start Guide

# SHAQ<sup>®</sup> Air Fryer

See owner's manual for complete instructions and important safety information before using this product.

**IMPORTANT:** Unpack all parts from the box and remove any clear or blue protective film on the components. Wash with warm soapy water before first use (only select accessories are dishwasher safe).

### STEP 1



#### Remove Outer Basket

Pull the Easy-Grip Handle straight out.

### STEP 2



#### Load Fry Basket

Arrange the food you are cooking in the basket.

### STEP 3



#### Return Outer Basket to Unit

Use the Easy-Grip Handle to push the Outer Basket straight into the Unit until it clicks.

### STEP 4



#### Power Unit On

Set the time and temperature. Follow instructions specific to your recipe.

### STEP 5



#### Remove Outer Basket & Detach Fry Basket

Remove the Outer Basket. Set the Outer Basket on a secure, heat-resistant surface. Move the Sliding Button Guard and gently press the Basket Release Button.

SHAQ-SS-AF\_4-6-QT\_QSG\_TP\_ENG\_V1\_191231