

ACTIVA

WIRELESS EARBUDS

WITH DYNAMIC SPEAKERS



USER MANUAL

QUICK GUIDE

Power On:

Earbuds automatically power on when removed from the charging case.
If in off state, touch and hold both earbuds for 2 seconds to turn them on.

Power Off:

To power off, touch and hold both earbuds for 5 seconds.

Music Control:

Single Touch (Either Earbud): Play/Pause
Touch Left Earbud Twice: Volume Down
Touch Right Earbud Twice: Volume Up
Touch Left Earbud 3 Times: Previous Track
Touch Right Earbud 3 Times: Next Track

Hands Free Call:

Answer/Hang Up: Touch Either Earbud Once
Reject call: Touch Either Earbud for 2 Seconds

Voice Assistant:

Touch Either Earbud for 2 Seconds to activate Voice Assistant, such as SIRI.

PRODUCT SPECIFICATIONS

Product Name:	Activa Wireless Earbuds
Bluetooth Version:	5.0 (Pairing Name: Activa Wireless Earbuds)
Frequency:	20Hz-20kHz
Impedance:	16Ω±15%
Sensitivity:	92±3dB
Speaker horn:	φ10mm
Work Distance:	10m without obstacle
Rated Power:	5mW
Music Play Time:	2.5-3 hours
Charging Time:	1h approx
Standby Time:	60h approx
Charging Case Battery:	300mAh
Material:	ABS+Rubber
Earbuds weight:	Approx. 3.5g
Earbuds Size:	27x17x35MM
Unit Weight:	51g
Charging Case Size:	66x24x48MM

OPERATION

The earbuds are already synced and paired to each other by default. For first use, follow the operation steps listed below:

1. Both earbuds automatically power on and pair when removed from charging case. During pairing, red and blue lights flash on both earbuds; once paired, only the designated main earbuds flashes red and blue lights.

2. Open Phone Bluetooth, or device and search for "Activa Wireless Earbuds", then click to pair with earbuds. You will hear "Connected" once paired successfully. Once paired, the earbuds will automatically connect back to the Bluetooth device last used. If you are unable to connect to your phone or device, please clear all listed Bluetooth connection names in your phone first, then search for "Activa Wireless Earbuds" and pair manually.

** When powered on without connection, the buds will automatically power off after 5 minutes.*

** The left and right earphones can be used as separate mono earphones when used alone.*

True Wireless Stereo Headset Pairing:

Pick up the Wireless Pods from the charging case, both pods will automatically turn on and enter the left and right synchronized ear pairing mode.

Tips:

Be sure to disconnect both ear buds from your Bluetooth device prior to attempting reconnection via the steps listed below.

* If pairing fails, place both earbuds in the charging case and then try again.

* If there is no sound after the main and auxiliary ears are connected, place both earbuds back into the charging case and try again. The pods should automatically connect. If not, connect to the device manually in your Bluetooth settings.

CHARGING

1) Earbuds:

When the battery is low, the earbuds will give a voice reminder. Open the charging case and place the earbuds in the case to charge. The red light will remain on while charging and switch off when charging is complete.

Note: While the earbuds charge, the charging case lights up blue and will switch off once the earbuds have fully charged.

2) Charging Case:

When the charging case's power is low, the blue light of the charging case will flash, indicating that you need to charge the case. The light will switch to remaining fully on (and stop flashing) once fully charged.

2 Ways to Charge the Case:

A: Use a Type-C USB charging cable to connect to the Type-C USB port of charging case.

B: Wireless charging function: The charging case comes with a wireless charging coil, and other wireless chargers can be used to charge the case. Place the charging case on the wireless charger for direct charging. It is recommended to use a dedicated wireless charging base to charge the case.

Note: Fully charge the charging case prior to first use.

Accessories List:

- One pair of Activa Wireless Earbuds with Dynamic Speakers
- One Charging Case
- One Type C Charging Cable
- Two Pairs of Ear Caps (large/small)

WARRANTY

Limited Lifetime Warranty

Your Activa Wireless Earbuds with Dynamic Speakers are backed by a limited lifetime manufacturer's warranty. Activa will repair or replace your device at any time should it fail due to a defect in material or workmanship, subject to the certain limitations.

This limited warranty does not cover any damage that results from unauthorized or improper use, service, or repair. Further, it does not cover damage caused by accident, impact, negligence, or normal wear and tear. Should you discover your Activa Wireless Earbuds with Dynamic Speakers are not functioning properly, please send your device to our repair center for evaluation. If your product cannot be repaired or serviced, we will reserve the right to change it for a similar or newer model.

Please note that a flat rate of \$30.00 will be charged to cover a service evaluation fee and return shipping of your device. All warranty claims must be accompanied by a copy of your proof of purchase from an authorized retailer. Please send your device, proof of purchase, and a check or money order in the amount of \$30.00 made out to Activa to:

Address:

Activa Service Center
3069 Taft Street
Hollywood, FL 33021

Contact:

warranty@activaofficial.com