



SafetyVital

DOOR STOPPER ALARM

USER MANUAL

THIS ANTI-THEFT DOOR STOPPER ALARM IS SUITABLE FOR USE IN YOUR HOME, HOTEL ROOM, APARTMENT, OFFICE, FOR TRAVEL AND MORE.

CAUTION

Keep out of reach of children and supervise children under the age of eighteen (18) at all times if the minor is utilizing the door stopper alarm. Small parts may become loose & pose a choking hazard. Do not operate the unit excessively or near a person's ear; doing so may damage hearing.

1-YEAR LIMITED MANUFACTURER'S WARRANTY

Your SafetyVital Door Stopper Alarm is backed by a one-year limited manufacturer's warranty. For a period of one year following date of purchase, SafetyVital will repair or replace your device should it fail due to a manufacturer's defect (subject to certain limitations such as, but not limited to, use of the device as directed or performing the intended function during which the product may become damaged).

This one-year limited warranty does not cover any damage that results from unauthorized or improper use, service, or repair. Further, it does not cover damage caused by accident, intended function and use as directed, negligence, or normal wear and tear. Should you discover your SafetyVital Door Stopper Alarm is not functioning properly, please send your device to our repair center for evaluation, at the address listed below. If your product cannot be repaired or serviced, we reserve the right to exchange it for a similar or newer model.

Please note that a flat processing fee of \$35.00 will be charged to cover the service evaluation and return shipping of your device. All limited warranty claims must be accompanied by a copy of your proof of purchase from an authorized retailer. Please send your device, proof of purchase, and a check or money order in the amount of \$35.00 made out to SafetyVital to:

Address:

SafetyVital
3069 Taft Street
Hollywood, FL 33021

By purchasing this product and/or utilizing this limited warranty, you expressly waive the right to be a member of or the lead plaintiff in any class action or any group civil action against the manufacturer and agree that any dispute involving SafetyVital shall be resolved in Broward County, Florida as the exclusive jurisdiction in any court case and/or proceeding.

PARTS OVERVIEW



USAGE INSTRUCTIONS

- 1) Insert the appropriate battery type- 9V Battery (not included) -and switch the power on.
- 2) To install, simply place the door stopper's wedge at the gap of the door, ensuring that when the door opens, it will come into contact with and activate the sensitivity switch at the top of the door stopper. This will activate the alarm.

Attention: If the gap between the bottom of the door and the floor is less than 0.5 cm, more than 3.5 cm after opening the door, or if the floor is made of marble or other smooth materials, the door stopper will not operate properly.

- 3) The sensitivity level should be adjusted according to your personal circumstances. To adjust the sensitivity level of the door stopper alarm, alternate the switch located at the side between: H (high sensitivity [includes vibration alarm]), M (medium sensitivity) and L (low sensitivity).

Note: When set to H Mode, the door stopper initiates a vibration alarm function in addition to the basic alarm function; if the door is pushed open, the door stopper will emit a harsh 120DB alarm sound to deter intruders. The damping primer located at the bottom of the door stopper is intended to prevent the door from being pushed open.