



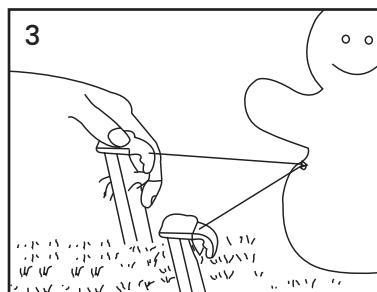

## INFLATING AND ASSEMBLY INSTRUCTIONS

- ### INFLATING AND ASSEMBLY INSTRUCTIONS
- 
1. Remove all content from packaging. Lay out the deflated product on a large clear surface.
  2. Hold the product upright. Make sure the air intake opening on the unit is clear of any fabric obstruction and that the zippers are fully closed (See Illustration 1).
  3. Plug the AC adapter power cord to an outlet and connect the inflator fan to the product to initiate inflating process.  
  
IMPORTANT NOTE: the inflator fan must be plugged in to a power source at all times in order for your product to remain inflated.
  4. Once fully inflated, clip the black tethers to each of the nylon loops located on the side of the inflatable (See Illustration 2).
  5. Insert the plastic stakes into the ground and tie the black tethers to the metal stakes (see illustration 3).
  6. Enjoy your WinterJoy inflatable!

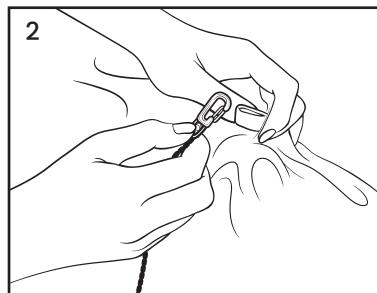

## **DEFLATING INSTRUCTIONS**

---

To deflate your product, simply unplug the AC adapter power cord to stop the inflator fan. For faster deflation, unzip the zipper located at the bottom of the inflatable after you have disconnected the Ac adapter power cord and the fan has been completely turned off.

**NOTE:** Do not unplug by pulling abruptly on the cord.

## **1-YEAR LIMITED MANUFACTURER'S WARRANTY**

---

Your WinterJoy product is backed by a one-year limited manufacturer's warranty. For a period of one year following date of purchase, WinterJoy will repair or replace your product should it fail due to a manufacturer's defect (subject to certain limitations such as, but not limited to, use of the product as directed or performing the intended function during which the product may become damaged).

This one-year limited warranty does not cover any damage that results from unauthorized or improper use, service, or repair. Further, it does not cover damage caused by accident, negligence, purposeful harm, or normal wear and tear. Should you discover your WinterJoy product is not functioning properly, please send your product to our repair center for evaluation, at the address listed below. If your product cannot be repaired or serviced, we reserve the right to exchange it for a similar or newer model.

Please note that a flat processing fee of \$15.00 will be charged to cover the service evaluation and return shipping of your product. All limited warranty claims must be accompanied by a copy of your proof of purchase from an authorized retailer. Please send your product, proof of purchase, and a check or money order in the amount of \$15.00 made out to WinterJoy to:

**Address:**

WinterJoy Appliances  
3069 Taft Street  
Hollywood, FL 33021

**Contact:**

warranty@winterjoyappliances.com

By purchasing this product and/or utilizing this limited warranty, you expressly waive the right to be a member of or the lead plaintiff in any class action or any group civil action against the manufacturer and agree that any dispute involving WinterJoy shall be resolved in Broward County, Florida as the exclusive jurisdiction in any court case and/or proceeding.

