



**COOK'S<sup>®</sup>**  
**COMPANION**



**REMOVABLE WAFFLE MAKER**  
**Instruction Manual**  
**MODEL AK-A011**

# PARTS IDENTIFICATION



Waffle Maker, Grill Plates, Waffle Plates

# IMPORTANT SAFEGUARDS

**When using electrical appliances, basic safety precautions should be followed as follows:**

- Read all instructions.
- Do not use for anything other than intended use.
- Do not leave the appliance unattended during operation.
- Do not place the unit on or near gas or electric cooktops to avoid damages.
- Place the unit on a level surface away from walls and cupboards . Do not let the cord hang over the edge of a table or counter or touch hot surfaces.
- Close supervision is necessary when any appliance is used by or near children.
- Keep hands, hair, clothing, and utensils away from the moving parts while in use as to avoid injury and damage to the unit.
- Unplug unit from outlet before cleaning and clean after every use.
- Do not use unit with an extension cord, always plug into a wall outlet.
- To prevent electrical shock do not immerse cord, plugs or appliance in water or other liquid.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or is dropped or damaged in any manner.
- Do not use outdoors.
- The use of unauthorized attachments is not recommended by the appliance manufacturer, this could cause injuries or damage to the unit.
- Do not touch hot surfaces, always use oven mitts when handling the waffle maker after baking.
- Do not place hands on window while the unit is in use.
- Avoid contact with moving parts during operation.
- This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not modify the plug in any way.

## **BEFORE FIRST USE**

1. Remove all packaging materials. Locate all parts before throwing the box away.
2. Wipe the plates with hot water, dishwashing liquid, and a non-abrasive sponge.
3. Wipe the inside and outside of the appliance with a clean cloth.

## **HOW TO INSERT PLATES:**

1. Select a matching pair of plates to use depending on what you plan to cook. Insert the selected plates securely into the rear of the top and bottom of the waffle maker.
2. Each set of plates has 2 tabs on the rear edge of the plate. The tabs fit into the rear of the base unit.
3. Press plates firmly into place to secure the plates into the proper position.

## **USING THE APPLIANCE:**

1. Plug the unit in. The red light will illuminate and stay on until the unit is unplugged.
2. With the unit closed, the green light will illuminate. The unit should pre-heat before use. When the green light turns off, the unit is ready for use.
3. If using the waffle plates, ladle just enough batter to fill the lower grid so that the peak area of the grid is covered. Or if using the grill plates insert food onto the grill plates. At this point the green light will illuminate as the cycle starts.
4. Close the unit. The green light will go intermittently on and off. NOTE: There is no light to indicate when cooking time is complete.
5. Once your desired cooking time is completed, open the lid.
6. When finished making waffles/sandwiches unplug the unit and let it cool completely before cleaning.

## **CLEANING**

Always unplug the unit before cleaning. Clean the plates and outside of the appliance after each use. To clean the plates hand wash with water, non-abrasive liquids and a sponge, dry with a soft cloth. To clean the outside of the unit, wipe with a dry cloth.

## **STORAGE**

1. Unplug the cord from the wall outlet.
2. Make sure all parts are clean and dry.



