

Uvlizer

How to Use Your Uvlizer Manual Start

1. Press the power button on the base of the device. You will see a red light indicating the default operation period of 15 minutes.
2. You can change the operation period by pressing the power button again, which will also change the color of the power light.

| Light Color | Duration | For room size |
|-------------|------------|-----------------|
| Red Color | 15 minutes | up to 100 sq ft |
| Green Color | 30 minutes | 100-200 sq ft |
| White Color | 60 minutes | 200-250 sq ft |

3. Once you press the power button, a warning beep will sound for 30 seconds before the UV light turns on. This allows you time to leave the room.
4. At the end of the operation period, the device will turn off automatically.
5. Please allow at least 40 minutes for the Ozone to dissipate before using the room.

10

Uvlizer

Starting by remote control

1. Press the power button on the base of the device.
You will see a red light indicating the default operation period of 15 minutes.
2. Leave the room.
3. Press the power button on the remote control.
4. Select the operation period on the remote control:
15 min, 30 min, or 60 min.
5. At the end of the operation period, the device will turn off automatically.
6. Please allow at least 40 minutes for the Ozone to dissipate before using the room.

Cleaning

Keep the light tubes clean to ensure maximum UVC output.
To clean, wipe with a wet cloth. If the surface is greasy, you can use a mild detergent. Make sure the tube is dry before inserting it into the frame.

11