







# anti-tipping restraint instructions

## HARDWARE

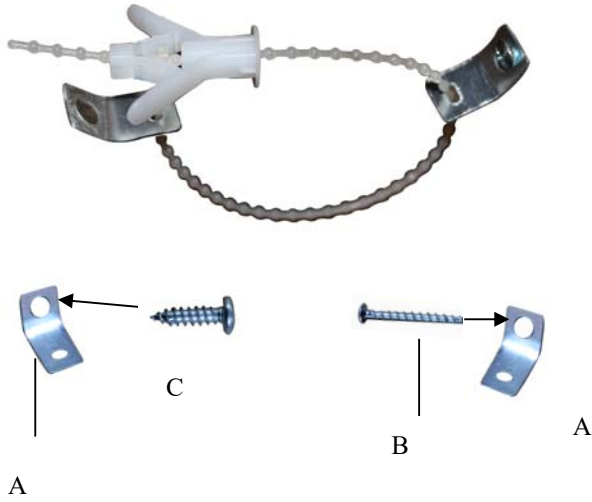

A Wall brackets		2PCS
B Long screw		1PC
C Short screw		1PC
D Nylon strap		1PC
E Plastic screw anchor		1PC

## ASSEMBLY

- ※ When properly installed, this hardware can provide protection against the unexpected tipping of furniture
- ※ Attached one of the brackets “A” and secure to the back top edge of the furniture using short screw “C”
- ※ Mark the location on the wall for mounting the second bracket “A”, Create the appropriate sized hole in the wall and insert the plastic screw anchor “E”. Secure the bracket to the wall using the long screw “B”
- ※ Place the furniture so the bracket on the back edge of the unit is line with the bracket on the wall
- ※ Lace an end of the nylon restraint strap “D” down through each bracket, Bring both ends together and slide the beaded end of the strap through the keyhole shaped slot on the other end. Pull down on the beaded end until snap-locks into the keyhole
- ※ Check to make sure the strap is securely laced and locked to the brackets.

