




Purple Glow  
Instruction Manual



一.Product Introduction

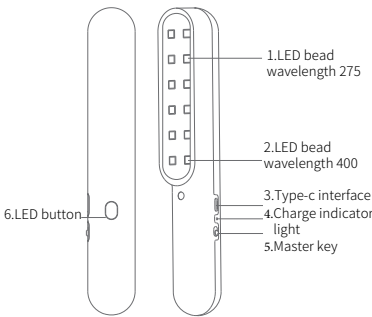

Product Accessories

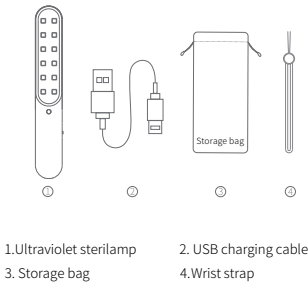

二.Operation Directions

Turn on

Slide the master key up to power on.

Turn off

Slide the master key up to power off.

Light

With the device powered on, press the LED button to turn on the light. Press the LED button a second time to turn the light off. It will automatically turn off after three minutes

Button name	Operation directions	According functions
Master key	Slide up	Power on
	Slide down	Power off
LED button	Press once time	Turn on the light
	Press again	Turn off the light

三.Sterilization Principle

The purple light ultraviolet sterilamp destroys the molecular structure of DNA (deoxyribonucleic acid) or RNA (ribonucleic acid) in bacterial viruses through ultraviolet rays with a wavelength in the range of 240 ~ 280nm, this causes cell death and/or regenerative cell death to achieve the effect of sterilization.

四.Product Parameters

Item No	BP52	Battery capacity	2000mAh
Voltage/Current	5V/1A	Charging time	About 2.5 hours
Power	7W	Bead wavelength	270-285nm
Product G.W.	270g	Materials	ABS+PC
Interface	Type-c	Product size	219*34*40mm
Optical power	20mw	Standard	GB19258-2012

五.Caution

- \* Do not knock, strike or drop this product. Doing so may cause internal damage.
- \* Do not disassemble, modify or repair this product.
- \* Children under 10 should not use the product.
- \* Do not put this product into the fire to avoid explosion hazard.
- \* If the product is abnormally hot or deformed during charging, stop charging immediately.
- \* Do not use the product in humid environments, such as a bathroom, as this may cause short-circuit damage.
- \* This product is a portable ultraviolet disinfection lamp. The light emitted is ultraviolet and cannot irradiate skin or eyes.

Remarks: Ultraviolet disinfection is widely used in hospitals, schools, nurseries, cinemas, buses, offices, homes, etc. It can purify the air, eliminate moldy odors and negative oxygen ions, refreshing the room with ultraviolet disinfection. In public places, UV disinfection can prevent some bacteria from spreading through the air or gathering on surfaces and objects

六.Environmental Protection Instructions

Name and content of harmful substances in products

Harmful Substance						
Part name	(Pb)	(Hg)	(Cd)	Cr(vI)	(PBB)	(PBDE)
Shell	○	○	○	○	○	○
Main body	×	○	○	○	○	○
Package	○	○	○	○	○	○
This form is prepared in accordance with SJ / T11364.						
○ Indicated that the contents of this hazardous substance in at least one of the homogeneous materials if the part is under the limit requirement specified in GB / T26572.						
× Indicated that the contents of this hazardous substance in at least one of the homogeneous materials if the part exceeds the limit requirement specified in GB / T26572 and there is no mature alternative in the industry at present which meets the environmental requirements of the EU RoHS directives.						
10 years	The numbers in this logo indicate that the environmental protection use period of the product under normal use is 10 years. Some components may also have environmental protection use period logos. The service life of this environmental protection label is based on the number in the logo. Depending on the model, the product may not use all the above parts, except the host. Please refer to the actual sales configuration of the product.					



七.Warranty Card

1. The warranty period is one year, valid only from the date of sale.
2. The warranty card needs to be legible. If it is lost, it will not be reissued.
3. The final interpretation of this warranty card belongs to the company.
4. For man-made damage, customers will be required to pay for repair parts and shipping costs.
5. This warranty card only covers performance failures due to production, technical and quality issues.

Name / Contact:	Date of purchase:				
Model and color:	Fault description:				
Purchase channel:	Address:				
<table><tr><td>Certification</td><td>QC</td></tr><tr><td>Manufactured Date</td><td>QC001</td></tr></table>		Certification	QC	Manufactured Date	QC001
Certification	QC				
Manufactured Date	QC001				