

⑤, Warning

- 1, Do not point the UV light towards eyes directly.
- 2, Please keep the Sterilizer away from children.
- 3, Keep sterilizer dry, avoid contact with water.


Portable UV Sterilizer



①, Applications

It can kill different kinds of bacteria and viruses in a very short time. Can use for mobile phone, mask, computer keyboard, accessories, rings, necklace, brush, plush toys, baby products, nursing bottle, clothing, underwear, bags, travels, and any articles that required sterilization.

②, Product Diagram

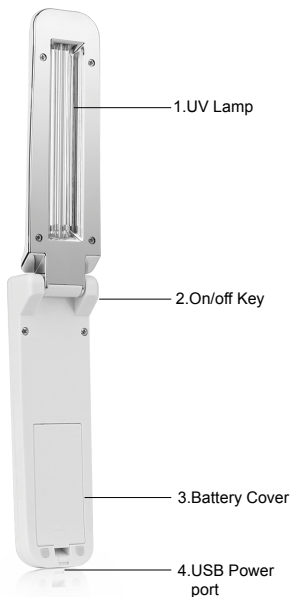

③, Operation Steps

- 1, Remove battery cover and place 4pcs "AAA" batteries into the sterilizer.
- 2, Long press the On/off switch for 3 seconds, then the UV lamp will be turn on. (The lamp will turn on only when it is point down. It will shut off when the UV lamp is point up.)
- 3, Make the UV lamp towards at the sterilization items, keep the vertical distance at 3cm-5cm, move slowly back and forth for 30 seconds. The longer the time, the better the sterilization effect.
- 4, Power source: 4 x "AAA" standard/rechargeable battery or with USB cable.

④, Technical Specifications

Portable UV Sterilizer

Model: XD68
Voltage: DC 5V
Battery: 4pcs* 1.5V"AAA"/USB port
(Batteries not included)
Power: 3W max
UV Wavelength: 254nm
Product size: 125*35* 28mm