

LIMITED LIFETIME WARRANTY

Your Medic Therapeutics UVC Disinfection Lamp is backed by a limited lifetime manufacturer's warranty. Medic Therapeutics will repair or replace your device at any time should it fail due to a defect in material or workmanship, subject to the certain limitations.

This limited warranty does not cover any damage that results from unauthorized or improper use, service, or repair. Further, it does not cover damage caused by accident, impact, negligence, or normal wear and tear. Should you discover your Medic Therapeutics UVC Disinfection Lamp is not functioning properly, please send your device to our repair center for evaluation. If your product cannot be repaired or serviced, we will reserve the right to change it for a similar or newer model.

Please note that a flat rate of \$35.00 will be charged to cover a service evaluation fee and return shipping of your device. All warranty claims must be accompanied by a copy of your proof of purchase from an authorized retailer. Please send your device, proof of purchase, and a check or money order in the amount of \$35.00 made out to Medic Therapeutics to:

Address:

Medic Therapeutics Service Center
3069 Taft Street
Hollywood, FL 33009


Contact:

warranty@medictherapeutics.com



UVC DISINFECTION LAMP

User Manual

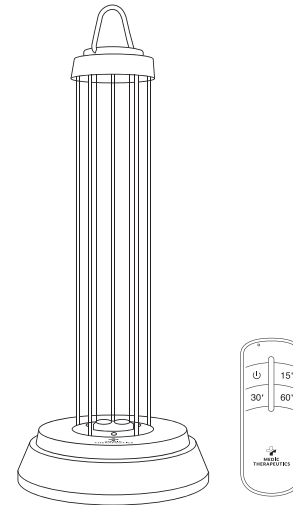

In order to maximize the proper use of this product,
please read this manual carefully prior to operation.

▲ ATTENTION

The ultraviolet lamp must be used when NO ONE is present, to avoid the harm of direct exposure to the UVC light. Do NOT expose your eyes or skin to the UVC light.


PRODUCT FEATURES

Metal housing:	Anti-oxidation Metal Base
Simple Operation:	3 Disinfection Timers
Wireless Remote Control Operation:	Operates through the Wall
No Ozone / With Ozone Operation:	High-Purity Quartz Lamp

PRECAUTIONS FOR USE

1. During the use of this product, the surface of the ultraviolet lamp should be kept clean. If there is dust or oil on the surface of the lamp, it should be wiped in time to avoid affecting the sterilization effect.
2. When cleaning indoor air with ultraviolet lamps, the room should be kept clean and dry to reduce dust and water vapor. When the indoor temperature is lower than 20C° or higher than 40C°, the irradiation time should be extended accordingly.
3. The ultraviolet lamp must be used when no one is around. Do not look directly at the ultraviolet light source and do not expose your skin to it.
4. This UVC lamp should be used accordingly with the approximation of 1w/m. This product is suitable for the disinfection and sterilization of rooms within 36-60 m. If the objects and garments are being sterilized at a close range, the sterilization time should not exceed 15 minutes.
5. If there is artwork, calligraphy or paintings in the sterilized space that require shading, please cover them with a cloth or paper during use.
6. After the use of the sterilizing lamp, it should be stored well to avoid damage and personal injury caused by the improper use of the lamp.

REMOTE CONTROL INSTRUCTION

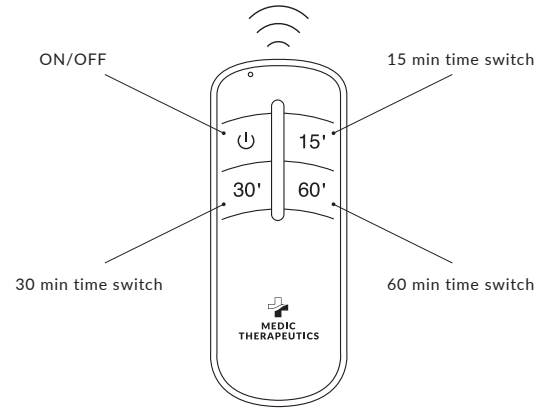

INSTRUCTIONS FOR USE

Online Switch + Remote Control Timing + Human Body Detection Safety Design

1. First plug in the lamp to a power source and then turn on the online switch on the remote and walk away.
2. Press the ON/OFF button on the remote control.
3. Select the corresponding disinfection time (15 min /30 min /60 min), and the power indicator will flash at the same time as the corresponding time indicator.
4. After pressing the corresponding time on the remote control, the lamp 10 second delay will be start. When the person walks into the lamp's sensor range of 1.5m, the lamp will turn off; the lamp will then restart within 10 seconds after the person has walked away and continue to operate until the scheduled disinfection time has been completed.