


PORTABLE HEATER

USER MANUAL

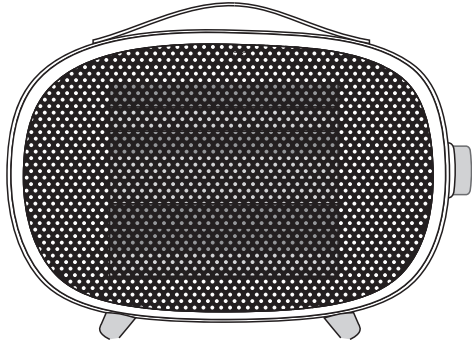

Please read the manual carefully prior to use.

PRODUCT DESCRIPTION:

Imparting a cool retro design and utilizing high thermal efficiency, this heater circulates indoor convection to rapidly transmit heat. Through sound engineering and construction and equipped with excellent insulating properties, the heat transmits evenly throughout the room, creating the ideal effect. This heater offers outstanding performance suitable for home or work.



Power Indicator Lights:

Blue: Cool Air Mode
 Orange: Soft Heat Mode
 Red: Strong Heat Mode

Mode Switch:





0-Off 1-Cool Air 2-400W Heat 3-800W Heat

Body:

ABS engineered plastic body.

Metal Shield

FEATURES:

-  Safety Design: Dual protection in the event of overheating.
-  Auto Shut-Off: Device automatically powers off after 8 hours.
-  Delay Shutdown: 30 second shutdown delay allows for heat dissipation.
-  Warning Buzzer: A buzzer alarm will sound to indicate that the heater has been tilted/tipped over. The device will automatically power down the heat, but the fan will continue to operate in order to dissipate heat.

Hanging Line

Air Inlet

Main Power Switch

Silicone Anti-skid Pad



INSTRUCTIONS FOR USE:

1. Plug in the heater, place on a flat surface and use the main switch found on the back of the device.
2. Use the Mode switch on the side of the heater to set the desired mode: Light Cool Airflow, Light Warm Airflow, Strong Warm Airflow
3. When not in use, turn the Mode off and the unit will power down automatically. Then turn the Main switch to the "Off" position and unplug.

SAFETY PRECAUTIONS:

1. Prior to using for the 1st time, ensure power sockets are well grounded and that the power supply meets the heater's requirements.
2. Do not operate near open flame, inflammables, or explosives.
3. Do avoid burns, do not touch the protective cover while in use.
4. Never place objects on the heater.
5. When not in used, always power off and unplug.
6. To prevent overheating of the power cord, do not tie up or bend. If the power cord is damaged, do not attempt to repair, contact the manufacturer. Authorized repairs only.
7. Keep away from children.
8. Never operate with wet hands or around any water or liquid.
9. Do not use the power cord to move, pull or drag the heater.
10. To facilitate optimum circulation, place a minimum of 20 inches away from any wall or furniture and do not set anything on top of the heater.
11. When switched on, a light sound/hum from the heater is normal.

WARNING: Never cover the fan outlet or air inlet with a foreign object to prevent overheating.

PRODUCT SPECIFICATIONS:

Voltage: 110V~
 Product Size: 210*135*85mm
 Power: 400W/800W
 Rated Frequency: 60Hz
 Made in China

CLEANING AND MAINTENANCE:

1. Prior to cleaning or any maintenance, unplug and wait until the device is cool.
2. Clean with a soft, dry cloth. If extra dirty, dampen a soft cloth with cool water and wipe the heater down. Let air dry.
3. Do not use any gasoline, thinners, or any other abrasive or strong agents to clean.
4. Never place in water or any other liquid.

LIMITED LIFETIME WARRANTY

Your Medic Therapeutics Portable Heater is backed by a limited lifetime manufacturer's warranty. Medic Therapeutics will repair or replace your device at any time should it fail due to a defect in material or workmanship, subject to the certain limitations.

This limited warranty does not cover any damage that results from unauthorized or improper use, service, or repair. Further, it does not cover damage caused by accident, impact, negligence, or normal wear and tear. Should you discover your Medic Therapeutics Portable Heater is not functioning properly, please send your device to our repair center for evaluation. If your product cannot be repaired or serviced, we will reserve the right to change it for a similar or newer model.

Please note that a flat rate of \$35.00 will be charged to cover a service evaluation fee and return shipping of your device. All warranty claims must be accompanied by a copy of your proof of purchase from an authorized retailer. Please send your device, proof of purchase, and a check or money order in the amount of \$35.00 made out to Medic Therapeutics to:

Address:
 Medic Therapeutics Service Center
 3069 Taft Street
 Hollywood, FL 33021

Contact:
 warranty@medictherapeutics.com