



LUXURY UVC/LED STERILIZER WAND



User Manual


Be sure to review all instructions prior to first use.

PRODUCT SPECIFICATIONS:

- Battery capacity: 2000mAh
- Voltage/Current: 5V/1A
- Charging Time: 2.5 hours
- Power: 7W
- Power Interface: Type-C
- Lamp Bulb Wavelength: 270-285nm
- Material: ABS + PP + PC
- Weight: 270 grams
- Size: 219x34x40mm
- Optical Performance: 20mw
- Standard: GB19258-2012

PRECAUTIONS:

1. To avoid internal damage, do not drop, knock, or hit against a hard surface.
2. Do not disassemble, modify, or attempt to repair this product.
3. Children under the age of 10 should not use this product alone.
4. To avoid explosion hazard, do not place or use this product near open flames or fire.
5. If the product is abnormally hot or deformed during charging, stop charging immediately.
6. To avoid short-circuit damage the product, do not use in a humid environment.
7. This product is a portable ultraviolet disinfection wand. The light emitted is ultraviolet and should not be exposed to eyes or skin over extended periods of time.

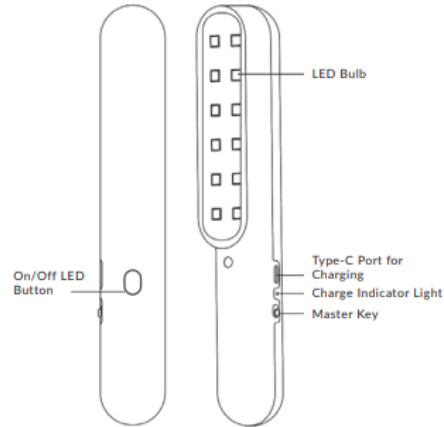

STERILIZATION DETAILS:

Utilizing ultraviolet rays, the wand effectively destroys the molecular structure of DNA (deoxyribonucleic acid) and RNA (ribonucleic acid) found in bacterial viruses with a wavelength range of 240 ~ 280nm causing growth cell death and/or regenerative cell death. The use of two types of lamp beads with wavelengths of 275nm and 400nm, achieves optimum sterilization.

OPERATING INSTRUCTIONS:


- Turn On - swipe the Master Key up
- Turn Off - swipe the Master Key down
- Light - press the LED button to turn on, press again to turn off.

The LED light will automatically turn off after 3 minutes.

IMPORTANT: Make sure the device is fully charged prior to operation.

PACKAGE CONTENTS:

1. UV Disinfection Wand
2. USB Charging Cable
3. Storage Bag
4. Carrying Strap

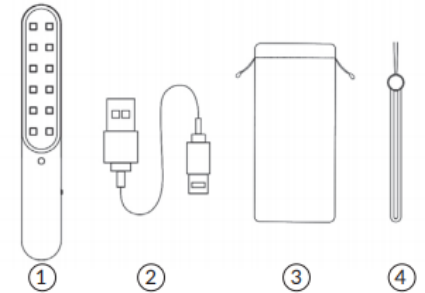

BATTERY INFORMATION & CHARGING:

Always use the charger provided by the manufacturer. The LED indicator light will turn red while charging and blue when fully charged. Charge the battery for a full 8 to 10 hours prior to first use. Following the 1st use, the battery will fully charge after 2 to 3 hours. When fully charged and not plugged in, the wand will operate for 1 hour.

This product must be disposed of on accordance with Federal regulations. Federal Law prohibits the disposal of batteries and mercury bulbs in regular trash. Consult your local waste management authority for information on proper disposal of the battery and bulb.