




SafetyVital

360° LED PORTABLE FOLDING LIGHT



USER MANUAL

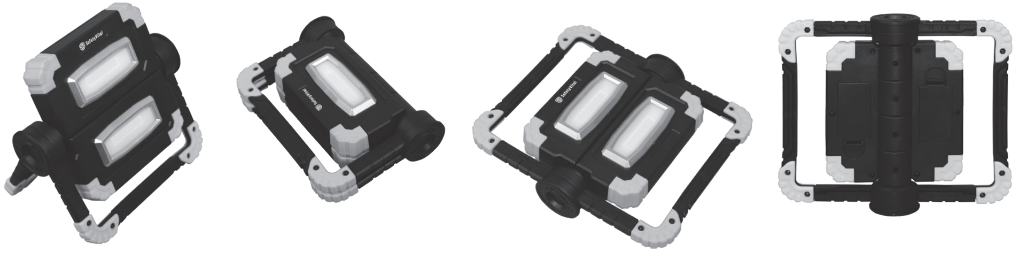

WARNING

To get the most out of your new foldable LED work light, please read these instructions prior to use.

Please also keep this user manual and instructions in case you need to refer to them at a later date.

Warning

1. Keep out of reach of children. Children under the age of 18 need adult supervision when using this product.
2. Do not light the flashlight directly on human or animal eyes.
4. For long storage time and during transportation, please remove the batteries.

PRODUCT SPECIFICATIONS

- Voltage: 2x3 V
- Power supply: 4xAA batteries (not included)
- Light output, 1 light on: 400 lumen
- Light output, 2 lights on: 700 lumen
- Operating time with 2 lights on: 3 hours
- The operating time has been tested using 2,900 mAh alkaline batteries.
- Rotates 360°

PREPARATION

- Remove the battery covers from the rear of the lights.
- Insert 4 X AA batteries into each light.
- Check that the batteries are correctly inserted according to the polarity symbols.
- Place the battery covers back on.

HOW TO USE

- Unfold the LED work light and rotate to the desired position.
- Press the on/off button on the side of the LED work light. Continue to press to adjust the light mode between:
 - One Light On
 - Both Lights On/Off
 - One Light Off

WARRANTY

1-Year Limited Manufacturer's Warranty

Your SafetyVital product is backed by a one-year limited manufacturer's warranty. For a period of one year following date of purchase, SafetyVital will repair or replace your device should it fail due to a manufacturer's defect (subject to certain limitations such as, but not limited to, use of the device as directed or performing the intended function during which the product may become damaged).

This one-year limited warranty does not cover any damage that results from unauthorized or improper use, service, or repair. Further, it does not cover damage caused by accident, intended function and use as directed, negligence, or normal wear and tear. Should you discover your SafetyVital product is not functioning properly, please send your device to our repair center for evaluation, at the address listed below. If your product cannot be repaired or serviced, we reserve the right to exchange it for a similar or newer model.

Please note that a flat processing fee of \$15.00 will be charged to cover the service evaluation and return shipping of your device. All limited warranty claims must be accompanied by a copy of your proof of purchase from an authorized retailer. Please send your device, proof of purchase, and a check or money order in the amount of \$15.00 made out to SafetyVital to:

Address:

SafetyVital
3069 Taft Street
Hollywood, FL 33021

Contact:

warranty@safetyvital.com

By purchasing this product and/or utilizing this limited warranty, you expressly waive the right to be a member of or the lead plaintiff in any class action or any group civil action against the manufacturer and agree that any dispute involving SafetyVital shall be resolved in Broward County, Florida as the exclusive jurisdiction in any court case and/or proceeding.