



**MEDIC
THERAPEUTICS**

MINI AIR PURIFIER



User Manual


SAFETY PRECAUTIONS

1. Do not use any liquid to clean this product.
2. There is a high-speed fan in the purifier. Do not put your hands or any foreign objects into the Mini Air Purifier at any time.
3. Place the purifier out of reach of children.
4. Do not put any loose objects too close to the main unit.
5. In order to improve the purification effect, close the doors and windows when using the product. Please ventilate when using the burner or stove to avoid carbon monoxide poisoning.
6. Do not use power cords of different specifications. Please install the power cord supplied with this product.
7. Do not use this purifier in the bathroom or any other places with high temperature or humidity.

PRODUCT SPECIFICATIONS

Product Name:	Mini Air Purifier	Negative ions:	5millions/cm ³
Product Size:	168x168x250mm	Voltage:	5V 2A
Packing Size:	192x192x283mm	Rated Power:	7W
Product Weight:	930G	Noise:	≤55dB(A)
Filter:	Pre+H13HEPA Activated Carbon	CADR Particles:	50(m ³ /h)
Application Area:	≤20 m ²	UVC:	Photocatalyst sterilization

PRODUCT OVERVIEW

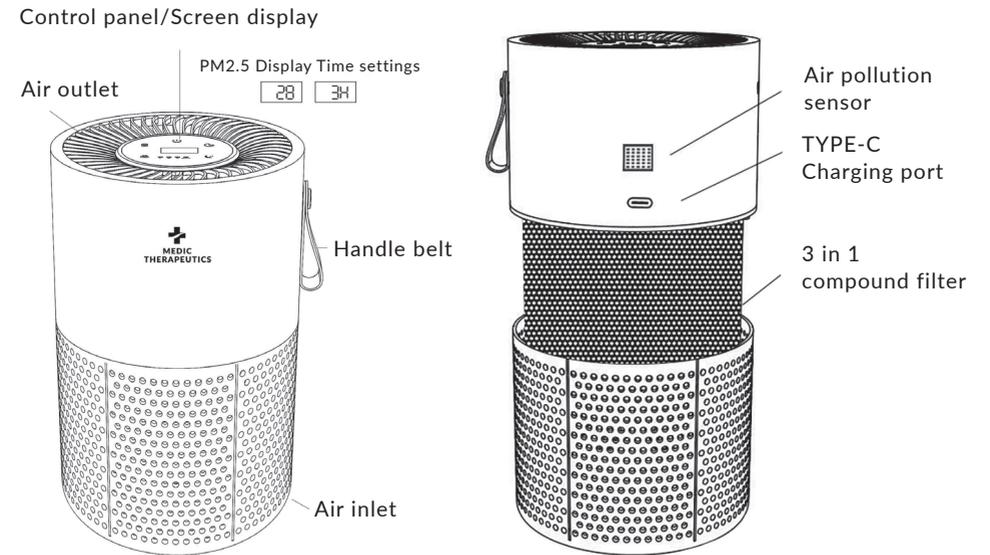


PREPARATION BEFORE USE

1. After removing all the packaging from the main unit and filter, rotate the filter according to the direction of the logo and tighten the filter clip.
2. In order to better utilize the performance of the Mini Air Purifier, the main air inlet should be within 6 inches of any obstructions.
3. Connect the TYPE-C charge. After pressing the "on" button, the Mini Air Purifier will make a short "beep" and the ON/OFF button will light up.

CONTROL PANEL OVERVIEW

1. Control panel

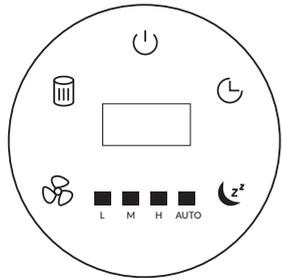

	Power on off
	Adjustable: 1H-2H-3H-4H-5H-6H-7H-8H
	Fan Speed: "Low---Mid---High---Auto"
	Filter replacement reminder and reset
	Sleeping Mode

2. Standby

Insert the plug of the Mini Air Purifier into the power source, you will hear a short ring and the "power button" indicator will light up.

3. Power on/off

Tap the top power icon to switch the power on and off. The default fan speed is set to Low mode.

4. PM2.5 Display

The air quality sensor automatically senses after power is on. Wait three minutes for the sensor to stabilize. (Note: The value indicated in this function is for reference only and cannot be used to replace professional testing equipment)

5. Fan Speed button

Tap the fan speed button to adjust the fan speed levels between: "Low" → "Mid" → "High" → "AUTO".

6. Adjustable Timer

Adjust the runtime of the device by tapping the timer button. The runtime alternates by increments of one hour with every tap: 1H-2H-3H-4H-5H-6H-7H-8H, Loop in turn.

7. Replace the Filter


The Mini Air Purifier will count down when it is turned on or off. When the filter needs to be replaced the filter icon indicator light will turn red. After replacing the new filter, keep pressing the "filter" reset icon for 5 seconds.

INSTRUCTIONS

Before you turn on the Mini Air Purifier for the first time, be sure to remove the filter bag.

1. Filter Installation

Grasp the body of the Mini Air Purifier and turn it counterclockwise to open (the position shown by the picture). Once open replace the filter and turn it in the direction of the lock to close.

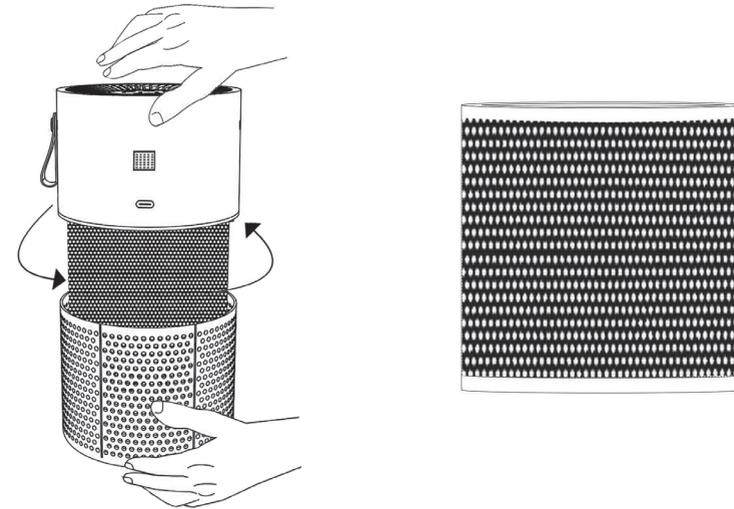

2. Air Quality Indicator

Air Quality	Good	Lightly Polluted	Heavily Polluted
Fan Speed	Low	Mid	High
PM2.5	0,50	51-149	<150

3. The Sleeping mode

When all other icons are off, and the purifier selects the low fan speed.

4. Filter Replacement Reminder

Change filter after 10-12 months of use.

CLEANING & MAINTENANCE

⚠ Be sure to unplug the power adapter before any maintenance!

1. Daily cleaning and maintenance time of filter reference: about once a month.
The surface of the filter should only be cleaned with a brush or a dry cotton cloth. Do not wash the filter with water or detergent. The filter can easily break or be deformed. Do not apply hard pressure when cleaning. If it is damaged, make sure to replace before using.
2. Filter replacement: Ensure to replace the filter once every 8-12 months (depending on extent of use and environment of the device). Please replace the filter in time when the filtering effect is not functioning properly.
3. Outer surface cleaning: Wipe the outer surface and air inlet and outlet with a soft cloth. Do not use a harsh chemical cleaner.
4. If the device will not be used for a long period of time: Unplug the power adapter, clean the outer surface and the filter. Then, cover the device with a plastic bag and store it in a dry area, away from moisture and direct exposure to sunlight.

TROUBLESHOOTING

Issue:	Possible Reasons and Solutions:
Odor	<ul style="list-style-type: none">• The filter is dirty and has not been replaced for a while.<ul style="list-style-type: none">◦ Replace the filter.
	<ul style="list-style-type: none">• The filter is flooded or used in a wet environment.<ul style="list-style-type: none">◦ Replace the filter.
	<ul style="list-style-type: none">• Re-use after a period of storage.<ul style="list-style-type: none">◦ Clean or replace the filter.
	<ul style="list-style-type: none">• Burning smell<ul style="list-style-type: none">◦ Immediately stop using, unplug the power supply and contact repair.
No Air Being Released	<ul style="list-style-type: none">• The motor is not running<ul style="list-style-type: none">◦ Check if the power supply is normal, replace the power adaptor or contact repair.
Too Loud	<ul style="list-style-type: none">• Air Purifier is too loud.<ul style="list-style-type: none">◦ The fan speed level is too high. If this is the case, please change the fan speed to a lower level or to sleep mode.
	<ul style="list-style-type: none">• Air Purifier gets too loud on auto mode.<ul style="list-style-type: none">◦ When on auto mode, our Air Purifier uses sensors to detect invisible changes in the air and adjusts the fan speed to restore good air quality as quickly as possible.◦ To reduce the noise level of the device, you can adjust the fan speed or switch on sleep mode.

LIMITED-LIFETIME WARRANTY:

Your Medic Therapeutics product is backed by a limited lifetime manufacturer's warranty. Medic Therapeutics will repair or replace your device at any time should it fail due to a defect in material or workmanship, subject to the certain limitations.

This limited warranty does not cover any damage that results from unauthorized or improper use, service, or repair. Further, it does not cover damage caused by accident, impact, negligence, or normal wear and tear. Should you discover your Medic Therapeutics product is not functioning properly, please send your device to our repair center for evaluation. If your product cannot be repaired or serviced, we will reserve the right to change it for a similar or newer model.

Please note that a flat rate of \$66.00 will be charged to cover a service evaluation fee and return shipping of your device. All warranty claims must be accompanied by a copy of your proof of purchase from an authorized retailer. Please send your device, proof of purchase, and a check or money order in the amount of \$66.00 made out to Medic Therapeutics to:

Address:

Medic Therapeutics Service Center
3069 Taft Street Hollywood, FL 33021

Contact:

warranty@medictherapeutics.com



**MEDIC
THERAPEUTICS**

EPA Est.NO.: 97483-CHN-1