

Placement

The unique bottom design of this product, you can put the disinfection lamp flat on the plane (desktop, books), fixed disinfection of the articles.



Reverse protection


This product has built-in safety protection circuit, when UVC lamp reverse upward, the light will automatically turn off, protect the human body from ultraviolet light direct irradiation. Turn the UVC light down and the light will be turned on again.

Working hours

This product will automatically shut down after 5 minutes of operation, ensuring the best disinfection effect of the product without affect



5 Caution

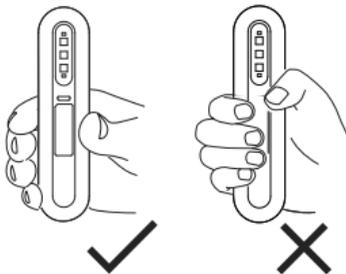


Handheld Mode

When holding a disinfection lamp, you should not hold the product in the palm of your hand. hold both sides of the product with your fingers to prevent damage to the skin of your opponent's finger at the edge.

- This product is only for the surface sterilization and disinfection of articles, and can not be used for other purposes.
- It is prohibited to irradiate this product on any part of the human body or animal, and the Company shall not be liable for any adverse results caused by violation of this operation.
- This product built-in battery and precision parts, if there is a failure, please return to the company to deal with, do not take it apart privately, in order to avoid accidents.


liteinLIFE

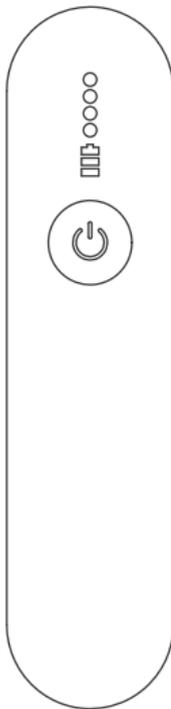

PORTABLE DEEP
UVC STERILIZER

1 Information

This product is a portable hand-held disinfection lamp, the fuselage is light and easy to operate. The use of LED to emit ultraviolet light of appropriate wavelength can destroy the molecular structure of DNA or RNA in microbial cells, resulting in the death of growing cells and / or regenerated cells, so as to achieve the effect of sterilization and disinfection.

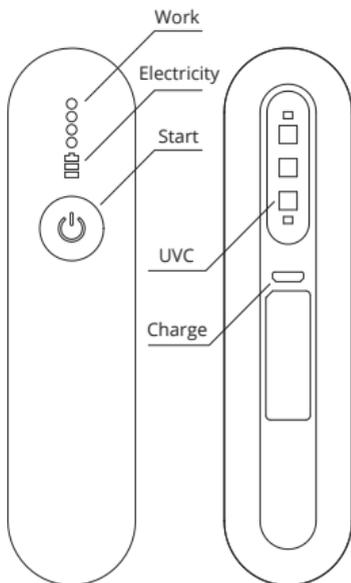

2 Parameter

Size	125*30*15mm
weight	about 30g
Battery	400mA
Charging	DC-5V
Charging Time	about 1 hour
Disinfection	Ultraviolet
Wavelength	200~275nm
Working time	5 min (self-power outage)

3 Functional Description

Start Key

When pressing the start button on the disinfection lamp, the disinfection lamp can emit ultraviolet light.



Work Lamp



When the disinfection lamp is turned on, the working light will be lit from bottom to top, indicating normal work.

Electricity Lamp



The power indicator light has three squares of display, when the power is low, the last indicator light

UVC Lamp

Disinfection lamp is composed of 3 UVC lamps and 2 UV compensation lamps, which will emit appropriate wavelength sterilization and disinfection when working.




Charging Port



Use Micro USB interface to charge.

4 Operation Mode

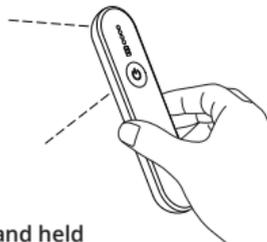

Hand held

Put the UVC lamp down, distance from the 15~20cm height of the sterilized item, press the start key, you can emit ultraviolet light, sterilize the article.