

## WARNING

---

1. This is an electronic product- keep away from and do not submerge in water.
2. The UV-C light is harmful to skin and eyes.
3. Only use for its intended purpose.
4. Do NOT operate if damaged, has a defective bulb, or has malfunctioned in any way.
5. Never use detergents, gasoline, chemical cleaners or agents, paint thinner or other solvents to clean this device.
6. Use a clean, dry, soft cloth to wipe down device.

## LIMITED LIFETIME WARRANTY

---

Your Medic Therapeutics Special Edition Mini UVC/LED Sterilizer Wand is backed by a limited lifetime manufacturer's warranty. Medic Therapeutics Special Edition will repair or replace your device at any time should it fail due to a defect in material or workmanship, subject to the certain limitations.

This limited warranty does not cover any damage that results from unauthorized or improper use, service, or repair. Further, it does not cover damage caused by accident, impact, negligence, or normal wear and tear. Should you discover your Medic Therapeutics Special Edition Sterilizer Wand is not functioning properly, please send your device to our repair center for evaluation. If your product cannot be repaired or serviced, we will reserve the right to change it for a similar or newer model.

Please note that a flat rate of \$35.00 will be charged to cover a service evaluation fee and return shipping of your device. All warranty claims must be accompanied by a copy of your proof of purchase from an authorized retailer. Please send your device, proof of purchase, and a check or money order in the amount of \$35.00 made out to Medic Therapeutics to:

Medic Therapeutics Service Center  
3069 Taft Street  
Hollywood, FL 33021

EPA CertificationNumber: 97482-CHN-1



# MINI UVC/LED STERILIZER WAND

## Manual



Model: MT-MINIUVWAND-001

When used for 20 seconds at a proximity of less than 2cm from the surface being sterilized, kills above 99% of bacteria germs & viruses.


## PRODUCT DESCRIPTION

Safe and effective, this UVC/LED Sterilizer wand helps to keep your immediate environment clean, healthy and sanitized. The wand kills 99.9% of bacteria, viruses, mold and dust mites without the need for harmful chemicals. This device does not release any ozone emissions and is the same UV light used in hospitals and medical facilities. The wand turns off automatically to preserve battery power.

Applications: Baby bottles, bedding, clothing, as well as all surfaces throughout your home, office, car, restaurants, restrooms, airplanes seats, hotel rooms, toothbrushes, keyboards, etc.

## HOW TO USE

1. Open protective cover.
2. Double-click the power button to turn on the device.
3. Hold the wand 10mm to 40mm (0.39in - 1.57in) away from the object or surface you are sterilizing. Take several passes with the light over the object or surface for best results.
4. When finished, press and hold down the power button and the device will automatically switch off. Close the protective cover.
5. For optimum results, switch the device on and wait 30 seconds before use.

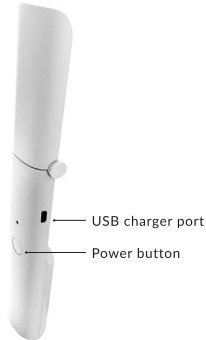

**IMPORTANT: ENSURE THE DEVICE IS FULLY CHARGED (USING THE PROVIDED USB CHARGER) PRIOR TO USE.**

## SAFETY FEATURES

1. The special glass filter protects users from direct contact with UV-C light.
2. The UV-C light automatically switches off when not in used over a prescribed period of time.
3. The UV-C light will also automatically switch off when the bulb is not in use.

## BATTERY & CHARGING THE DEVICE

Always use the charger provided by the manufacturer. The LED indicator light will turn red while charging and blue when fully charged. Charge the battery for a full 8 to 10 hours prior to 1st use. Following its 1st use, the battery will fully charge after 2 to 3 hours. When fully charged and not plugged in, the wand will operate for 1 hour.

This device must be disposed of in accordance with Federal regulations. Federal Law prohibits the disposal of batteries and mercury bulbs in regular trash. Consult your local waste management authority for information on proper disposal of the battery and bulb.

## CAUTION

Do not directly expose your body or eyes this UV-C energy. Keep out of reach of children. Do not use for medical purposes or treatments.

## PRODUCT SPECIFICATIONS

Material	ABS
Feature	Portable, handheld, USB charging
Battery Capacity	1200mAh
Wavelength	265nm
Input	DC5V/1A
Power	7W
Charging Time	2.5-3h
Lamp Power	96mw
Battery Type	18650 lithium ion battery
Interface	Micro USB
Color	White
Product Size	13.5x2.83x1.78cm
N.W.	105g
G.W.	160g
Color Box Size	23.7x3.1x5.5cm
Packaging	100pcs/ctn Carton size: 52x34x31cm N.W.:12KG G.W.:17KG