


## OPERATING INSTRUCTIONS:

---

1. Direct the lamp light at a downward angle. Focus the light 5 to 10 inches away from the articles to be sterilized.
2. Press the Power Button for 3 seconds to turn on.  
For best results, take several passes over the article.
3. To avoid UVC damage, use fingers to hold the side of the wand. Do not grip or use the whole hand to hold.
4. The device will automatically shut down after 5 minutes of operation.

### Warning:

Ensure that you do not hold the product at the center of your palm and hand. Instead, hold the device from its sides with your fingers to prevent damage caused by exposure to the ultraviolet radiation.

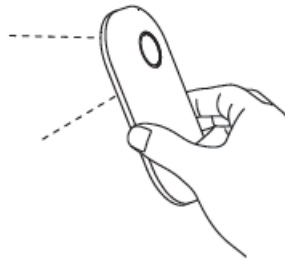

## SAFETY PRECAUTIONS AND MAINTENANCE

---

1. This is an electronic product- keep away from and do not submerge in water.
2. The UV-C light is harmful to skin and eyes.
3. Only use for its intended purpose. Do not expose to any part of the human or animal body.
4. Do NOT operate if damaged, has a defective bulb, or has malfunctioned in any way.
5. Never use detergents, gasoline, chemical cleaners or agents, paint thinner or other solvents to clean this device.
6. Use a clean, dry, soft cloth to wipe down device.

### Caution:

Do not directly expose your body or eyes this UV-C energy. Keep away from water and high temperatures. Keep out of reach of children. Do not use for medical purposes or treatments. Remove battery if not in use over a prolonged period of time.

## LIMITED LIFETIME WARRANTY

---

Your Medic Therapeutics Nano Travel UV Wand is backed by a limited lifetime manufacturer's warranty. Medic Therapeutics will repair or replace your device at any time should it fail due to a defect in material or workmanship, subject to the certain limitations.

This limited warranty does not cover any damage that results from unauthorized or improper use, service, or repair. Further, it does not cover damage caused by accident, impact, negligence, or normal wear and tear. Should you discover your Medic Therapeutics Nano Travel UV Wand is not functioning properly, please send your device to our repair center for evaluation. If your product cannot be repaired or serviced, we will reserve the right to change it for a similar or newer model.

Please note that a flat rate of \$35.00 will be charged to cover a service evaluation fee and return shipping of your device. All warranty claims must be accompanied by a copy of your proof of purchase from an authorized retailer. Please send your device, proof of purchase, and a check or money order in the amount of \$35.00 made out to Medic Therapeutics to:

### Address:


Medic Therapeutics Service Center  
3069 Taft Street  
Hollywood, FL 33021

### Contact:

warranty@medictherapeutics.com

## PRODUCT DESCRIPTION:

Safe and effective, the Travel UV Wand helps to keep your immediate environment clean, healthy and sanitized. The wand kills 99% of bacteria, germs, mold and dust mites without the need for harmful chemicals. (this device does not release any ozone emissions).

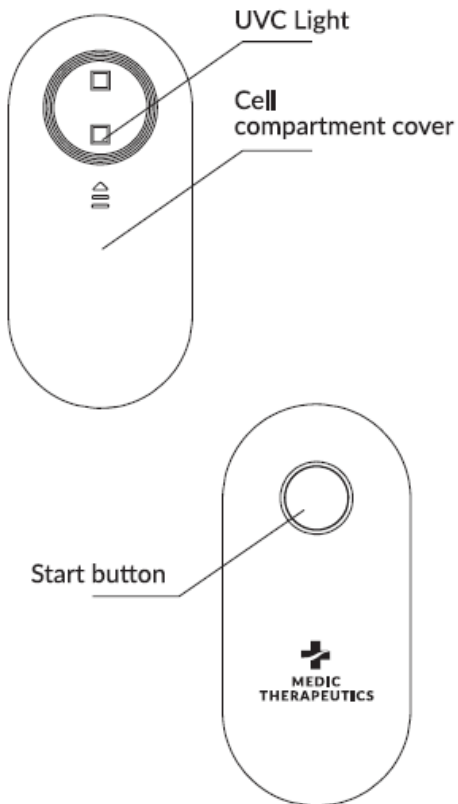


## PRODUCT PARAMETERS:

Size:	94cmx44x14.5mm
Weight:	Approx. 24g
Battery:	AAA (2x)
Bulb Life:	Approx. 10,000hrs
Disinfection Category:	Ultraviolet
UVC Frequency:	200-280nm
Suggested Time Per Use:	5min

## UVC LIGHT:

The disinfection light is composed of 2 UVC lamps that emit bacteria killing frequency. At a distance of 33mm from your targeted surface, this device kills 99% of bacteria and germs in 20 seconds.

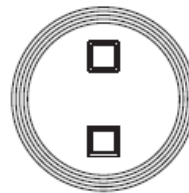

## LANYARD HOLE:

The lanyard hole at the top of this device enables users to attach a lanyard for carrying convenience and helps prevent loss.



## BATTERY INSTALLATION:

Remove the battery cover at the bottom of the wand. Install 2 AAA batteries according to the negative and positive polarity symbols.

